

InfoPrint Color 1834 & InfoPrint Color 1854 MT(4976 & 4977)

User's Guide

G510-7472-00

InfoPrint Solutions Company

InfoPrint Color 1834 & InfoPrint Color 1854 MT(4976 & 4977)

User's Guide

G510-7472-00

InfoPrint Solutions Company

Contents

Safety information.....	9
Learning about the printer.....	11
Selecting a location for the printer.....	11
Printer configurations.....	12
Using the security lock feature.....	14
Understanding the printer control panel.....	14
Additional printer setup.....	16
Installing internal options.....	16
Available internal options.....	16
Accessing the system board to install internal options.....	17
Installing a memory card	18
Installing a flash memory or firmware card.....	20
Installing an Internal Solutions Port.....	22
Installing a printer hard disk	28
Reattaching the system board cover.....	31
Attaching cables.....	32
Installing optional trays.....	34
Verifying printer setup.....	36
Printing a menu settings page.....	36
Printing a network setup page	36
Setting up the printer software.....	37
Installing printer software	37
Updating available options in the printer driver.....	37
Setting up wireless printing.....	38
Information you will need to set up the printer on a wireless network.....	38
Installing the printer on a wireless network (Windows).....	39
Installing the printer on a wireless network (Macintosh).....	41
Installing the printer on a wired network	43
Changing port settings after installing a new network Internal Solutions Port	46
Setting up serial printing.....	48
Loading paper and specialty media.....	50
Setting the paper size and type.....	50
Loading the paper tray.....	50
Loading the multipurpose tray.....	53
Linking and unlinking trays.....	56

Linking trays.....	56
Unlinking trays	56

Paper and specialty media guide.....58

Paper guidelines.....	58
Paper characteristics.....	58
Unacceptable paper	59
Selecting paper.....	59
Selecting preprinted forms and letterhead.....	59
Using recycled paper and other office papers	60
Storing paper.....	60
Supported paper sizes, types, and weights.....	61
Supported paper sizes	61
Supported paper types and weights	62

Printing.....64

Printing a document.....	64
Printing a document.....	64
Printing specialty documents.....	65
Printing on letterhead.....	65
Tips on using transparencies	66
Tips on using envelopes.....	66
Tips on using card stock.....	67
Printing confidential and other held jobs.....	67
Holding jobs in the printer	67
Printing confidential and other held jobs.....	68
Printing from a flash drive.....	70
Printing photos from a PictBridge-enabled digital camera.....	71
Printing information pages.....	71
Printing a font sample list.....	71
Printing a directory list.....	72
Printing the print quality test pages	72
Canceling a print job.....	72
Canceling a print job from the printer control panel	72
Canceling a print job from the Windows taskbar	73
Canceling a print job from the Windows desktop.....	73
Canceling a print job from Mac OS 9.....	73
Canceling a print job from Mac OS X.....	73
Printing in black and white.....	73
Using Max Speed and Max Yield.....	74

Clearing jams.....75

Avoiding jams.....	75
Understanding jam messages.....	75
200 paper jams.....	76
200 or 201 paper jam.....	77
201 paper jam.....	78
202 paper jam.....	79
203 paper jam.....	81
230 paper jam.....	81
240 paper jam.....	82
250 paper jam.....	84

Understanding printer menus.....85

Menus list.....	85
Paper menu.....	86
Default Source menu.....	86
Paper Size/Type menu	86
Configure MP menu.....	89
Substitute Size menu.....	89
Paper Texture menu	90
Paper Weight menu	91
Paper Loading menu	92
Custom Types menu.....	93
Universal Setup menu.....	94
Reports menu.....	95
Reports menu.....	95
Network/Ports menu.....	96
Active NIC menu.....	96
Standard Network or Network <x> menus	96
Network Reports menu	98
Network Card menu.....	98
TCP/IP menu	99
IPv6 menu.....	100
Wireless menu.....	100
AppleTalk menu	101
NetWare menu.....	101
LexLink menu	102
Standard USB and USB <x> menus.....	103
Parallel <x> menu.....	104
Serial <x> menu	107

SMTP Setup menu	109
Security menu.....	110
Miscellaneous menu	110
Confidential Print menu	111
Disk Wiping menu	111
Security Audit Log menu	113
Set Date/Time menu.....	113
Settings menu.....	114
General Settings menu	114
Setup menu	118
Finishing menu.....	120
Quality menu.....	121
Utilities menu	125
XPS menu.....	126
PDF menu	126
PostScript menu	126
PCL Emul menu	127
HTML menu.....	130
Image menu.....	131
PictBridge menu.....	132
Flash Drive menu	132
Help menu.....	134
Understanding printer messages.....	136
List of status and error messages.....	136
Maintaining the printer.....	150
Cleaning the exterior of the printer.....	150
Cleaning the printhead lenses.....	150
Storing supplies.....	152
Conserving supplies.....	152
Checking the status of supplies.....	153
Checking the status of supplies from the printer control panel.....	153
Checking the status of supplies from a network computer	153
Moving the printer.....	153
Before moving the printer	153
Moving the printer to another location.....	154
Setting the printer up in a new location	154
Shipping the printer	154
Administrative support.....	155
Using the Embedded Web Server.....	155

Checking the virtual display.....	155
Checking the device status.....	155
Setting up e-mail alerts.....	155
Viewing reports.....	156
Adjusting Power Saver.....	156
Restoring the factory default settings.....	157

Troubleshooting.....158

Checking an unresponsive printer.....	158
Solving printing problems.....	158
Multiple-language PDFs do not print.....	158
Printer control panel display is blank or displays only diamonds.....	158
Error message about reading USB drive appears.....	158
Jobs do not print.....	159
Confidential and other held jobs do not print	159
Job takes longer than expected to print	160
Job prints from the wrong tray or on the wrong paper	160
Incorrect characters print.....	160
Tray linking does not work.....	160
Large jobs do not collate	161
Unexpected page breaks occur.....	161
Solving option problems.....	161
Option does not operate correctly or quits after it is installed	161
Trays / Drawers	162
Flash memory card	162
Hard disk with adapter.....	162
Internal Solutions Port	162
Internal print server	163
Memory card	163
USB/parallel interface card.....	163
Solving paper feed problems.....	163
Paper frequently jams	163
Paper jam message remains after jam is cleared	164
Page that jammed does not reprint after you clear the jam.....	164
Solving print quality problems.....	164
Isolating print quality problems	164
Blank pages	164
Characters have jagged or uneven edges	165
Color misregistration.....	165
Clipped images.....	166
Ghost images.....	166
Gray background	166

Incorrect margins.....	166
Light colored line, white line, or incorrectly colored line.....	167
Paper curls badly.....	167
Print irregularities	167
Print is too dark.....	168
Print is too light	168
Repeating defects.....	168
Skewed print.....	169
Solid color pages.....	169
Streaked horizontal lines.....	169
Streaked vertical lines	170
Toner fog or background shading appears on the page	170
Toner rubs off	170
Toner specks.....	170
Transparency print quality is poor.....	171
Uneven print density	171
Solving color quality problems.....	171
FAQ about color printing	171
Embedded Web Server does not open.....	174
Check the network connections	174
Check the network settings	174
Contacting Customer Support.....	175


Notices.....176

Product information.....	176
Edition notice.....	176
Power consumption.....	179

Index.....186

Safety information


Connect the power supply cord to a properly grounded electrical outlet that is near the product and easily accessible.

 **CAUTION—POTENTIAL INJURY:** Do not twist, bind, crush, or place heavy objects on the power cord. Do not subject the power cord to abrasion or stress. Do not pinch the power cord between objects such as furniture and walls. If the power cord is misused, a risk of fire or electrical shock results. Inspect the power cord regularly for signs of misuse. Remove the power cord from the electrical outlet before inspecting it.


Do not place or use this product near water or wet locations.


Use only the power cord provided with this product or the manufacturer's authorized replacement.

Refer service or repairs, other than those described in the user documentation, to a professional service person.


 **CAUTION—SHOCK HAZARD:** Do not use the fax feature during a lightning storm. Do not set up this product or make any electrical or cabling connections, such as the power supply cord or telephone, during a lightning storm.

This product is designed, tested, and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.








 **CAUTION—SHOCK HAZARD:** Make sure that all external connections (such as Ethernet and telephone system connections) are properly installed in their marked plug-in ports.

 **CAUTION—POTENTIAL INJURY:** This product uses a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This product uses a printing process that heats the print media, and the heat may cause the media to release emissions. You must understand the section in your operating instructions that discusses the guidelines for selecting print media to avoid the possibility of harmful emissions.

 **CAUTION—HOT SURFACE:** The fuser and the inside of the printer near the fuser may be hot. Wait for the fuser to cool before clearing jams from this area.

This product contains a lithium battery.


-  **CAUTION—POTENTIAL INJURY:** There is a risk of explosion if the battery is replaced with an incorrect type. Discard used batteries according to the battery manufacturer's instructions and local regulations.
-  **CAUTION—SHOCK HAZARD:** If you are installing memory or option cards sometime after setting up the printer, turn the printer off and unplug the power cord from the wall outlet before continuing. If you have any other devices attached to the printer, turn them off as well and unplug any cables going to the printer.
-  **CAUTION—SHOCK HAZARD:** If you are installing an optional tray after setting up the printer, then turn the printer off and unplug the power cord, the USB cable, and the Ethernet cable before continuing.
-  **CAUTION—SHOCK HAZARD:** If you are installing an Internal Solutions Port (ISP) after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing.
-  **CAUTION—SHOCK HAZARD:** To avoid the risk of electric shock when cleaning the exterior of the printer, unplug the power cord from the wall outlet and disconnect all cables from the printer before proceeding.
-  **CAUTION—TIPPING HAZARD:** Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using a high-capacity input tray, a duplex unit and an input option, or more than one input option. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, you may need additional furniture. For more information, see www.infoprint.com/literature/workgroupconfig.
-  **CAUTION—POTENTIAL INJURY:** The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.

Learning about the printer

Selecting a location for the printer

When selecting a location for the printer, leave enough room to open trays, covers, and doors. If you plan to install any options, leave enough room for them also. It is important to:

- Make sure airflow in the room meets the latest revision of the ASHRAE 62 standard.
- Provide a flat, sturdy, and stable surface.
- Keep the printer:
 - Away from the direct airflow of air conditioners, heaters, or ventilators
 - Free from direct sunlight, humidity extremes, or temperature fluctuations
 - Clean, dry, and free of dust
- Allow the following recommended amount of space around the printer for proper ventilation:

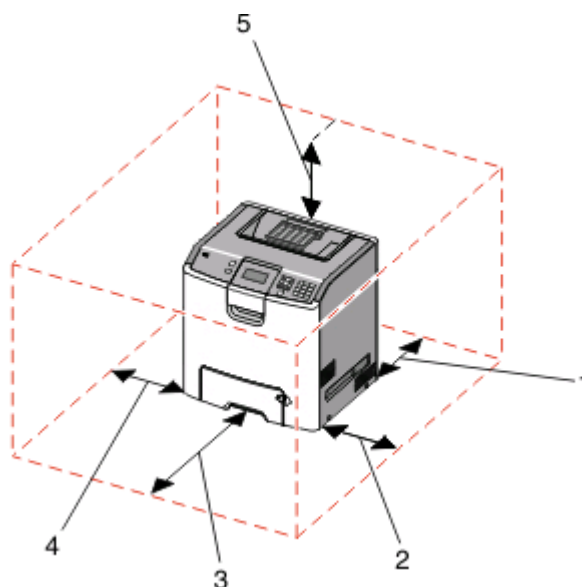


1	152.4 mm (6.0 in.)
2	101.6 mm (4.0 in.)
3	609.6 mm (24.0 in.)
4	101.6 mm (4.0 in.)
5	304.8 mm (12.0 in.)

When the printer is set up, allow clearance around it as shown.


Printer configurations


Basic model

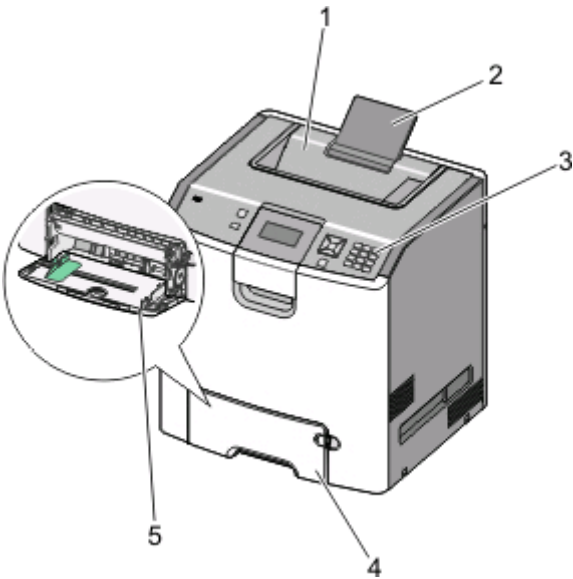

1	Standard exit bin
2	Paper support
3	Printer control panel
4	Standard 550-sheet tray (Tray 1)
5	Multipurpose tray

Configured models


 **CAUTION—TIPPING HAZARD:** Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using a high-capacity input tray, a duplex unit and an input option, or more than one input option. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, you may need additional furniture. For more information, see www.infoprint.com/literature/workgroupconfig.

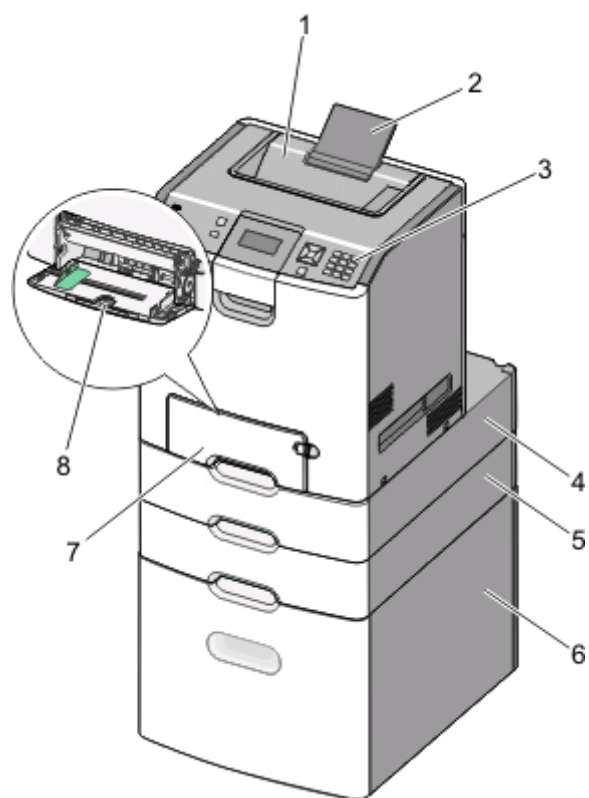


1	Standard exit bin
2	Paper support
3	Printer control panel
4	Optional 550-sheet specialty media drawer
5	Optional 550-sheet tray
6	Optional 2,000-sheet tray
7	Standard 550-sheet tray (Tray 1)
8	Multipurpose tray



Using the security lock feature

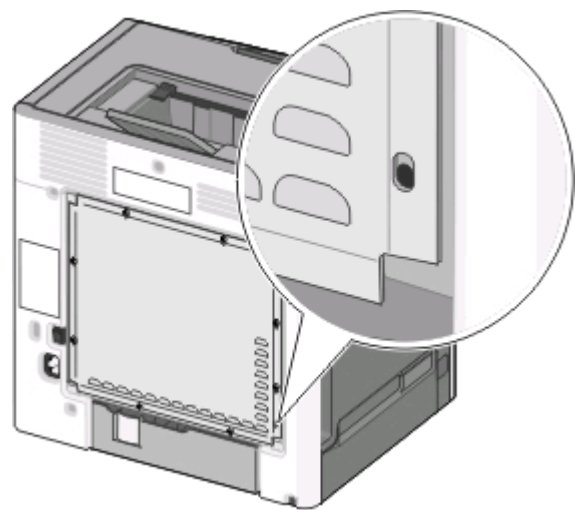

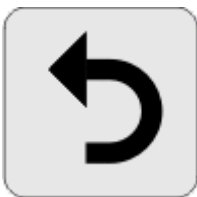


The printer is equipped with a security lock feature. When a lock compatible with most laptop computers is attached, the printer is locked. Once locked, the metal plate and the system board cannot be removed. Attach a security lock to the printer in the location shown.

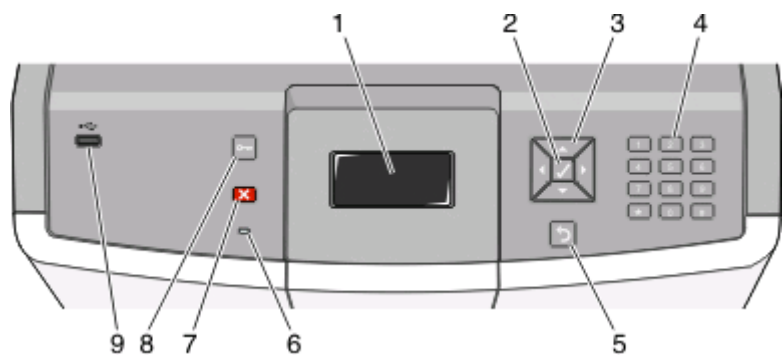

Understanding the printer control panel

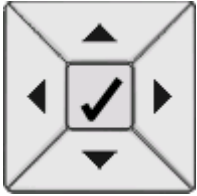


Control panel item			Description
1	Display		The display shows messages and pictures that communicate the status of the printer.
2	Select		Pressing  initiates action on a menu item.

Control panel item			Description
3	Navigation buttons		Press the up or down arrow button to scroll through menu lists. Press the left or right arrow button to scroll through values or text that rolls to another screen.
4	Numeric keypad		Consists of the numbers 0–9, characters A through Z, an ↑A and a backspace button. Note: The ↑A button functions as Caps Lock, and includes the # character.
5	Back		Returns the display to the previous screen
6	Indicator light		Indicates the printer status: <ul style="list-style-type: none"> • Off—The power is off, or the printer is in Eco Mode. • Blinking green—The printer is warming up, processing data, or printing. • Solid green—The printer is on, but idle. • Solid red—Operator intervention is needed.
7	Stop		Stops all printer activity A list of options is offered once Stopped appears on the display.
8	Menus		Opens the menus index Note: These menus are available only when the printer is in the Ready state.
9	USB Direct port		Insert a USB flash drive to send data to the printer. Insert a USB cable from a digital camera to print photos with a PictBridge-enabled digital camera.

Additional printer setup

Installing internal options

 **CAUTION—SHOCK HAZARD:** If you are installing memory or option cards sometime after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going to the printer.

You can customize your printer connectivity and memory capacity by adding optional cards. The instructions in this section explain how to install the available cards; you can also use them to locate a card for removal.

Note: Some options may not be available. For more information, contact the place where you purchased the printer.

Available internal options


- Memory cards
 - Printer memory
 - Flash memory
 - Fonts
- Firmware cards
 - Bar Code
 - PrintCryption™
- Printer hard disk

Accessing the system board to install internal options


CAUTION—SHOCK HAZARD: If you are installing memory or option cards sometime after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going to the printer.

Note: This operation requires a flathead screwdriver.

- 1** Remove the cover.
 - a** Turn the screws on the cover counterclockwise to loosen them, but do not remove them.

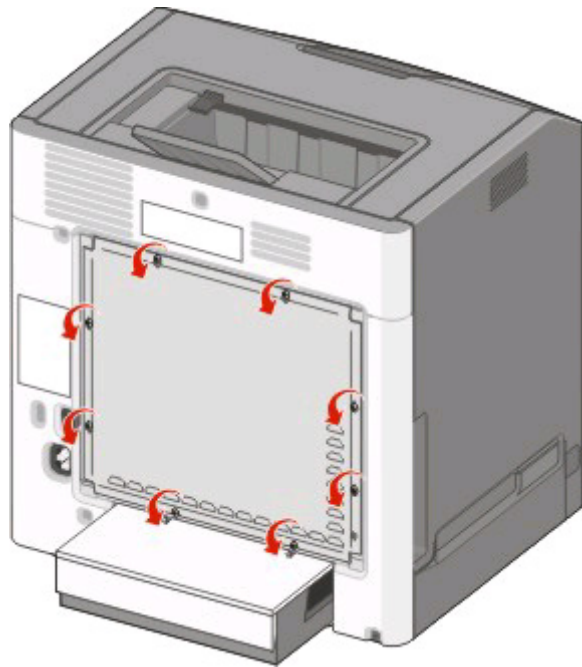


- b** Slide the cover up until each screw is in the keyhole.

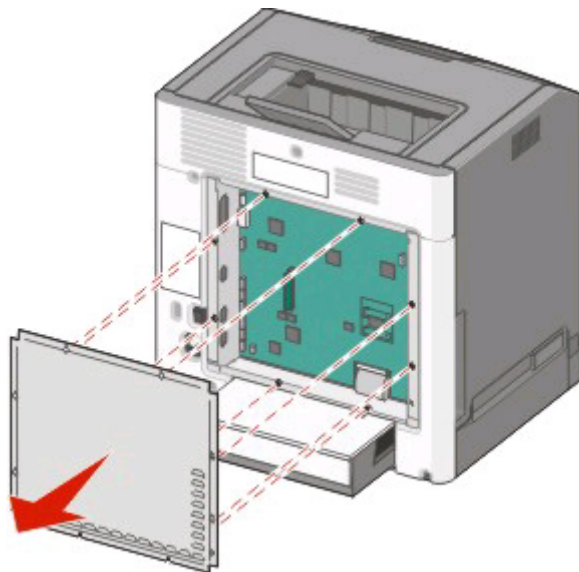

- c** Pull the cover forward to remove it.

- 2 Use the following illustration to locate the appropriate connector.

Warning—Potential Damage: System board electrical components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.

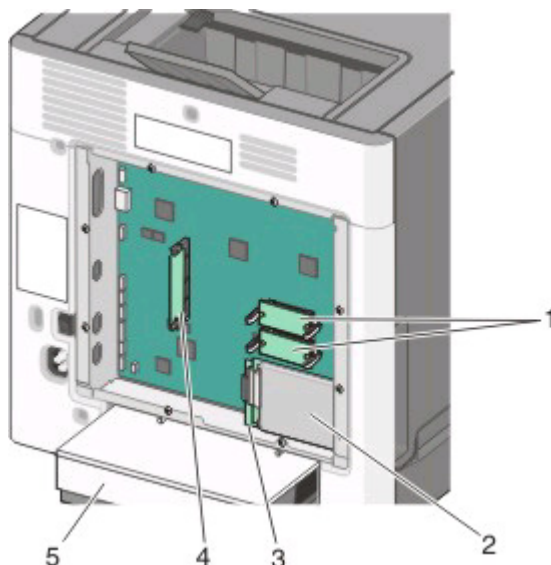

1	Firmware and flash memory card connectors
2	Hard disk connector
3	Internal print server connector
4	Memory card connector
5	Dust cover

Installing a memory card

CAUTION—SHOCK HAZARD: If you are installing memory or option cards sometime after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing. If you have any other devices attached to the printer, then turn them off as well and unplug any cables going to the printer.

Warning—Potential Damage: System board electrical components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.

An optional memory card can be purchased separately and attached to the system board. To install the memory card:


- 1 Access the system board.
- 2 Unpack the memory card.

Note: Avoid touching the connection point along the edge of the card.

3 Open the memory card connector latches.




4 Align the notch on the memory card with the ridge on the connector.

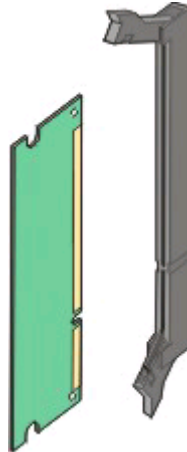

1	Notch
2	Ridge

- 5 Push the memory card straight into the connector until it *snaps* into place.

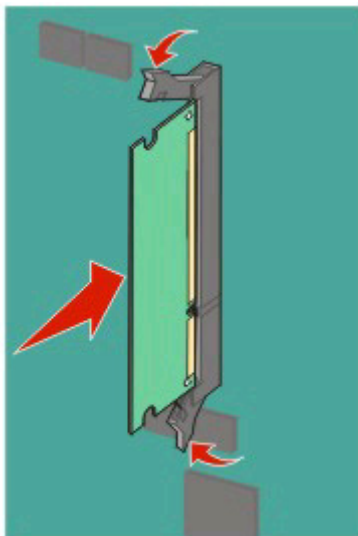

- 6 Reattach the system board cover.

Installing a flash memory or firmware card

The system board has two connections for an optional flash memory or firmware card. Only one of each may be installed, but the connectors are interchangeable.


CAUTION—SHOCK HAZARD: If you are installing memory or option cards sometime after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing. If you have any other devices attached to the printer, then turn them off as well, and unplug any cables going to the printer.

Warning—Potential Damage: System board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.

- 1 Access the system board.
- 2 Unpack the card.


Note: Avoid touching the connection points along the edge of the card.

3 Holding the card by its sides, align the plastic pins on the card with the holes on the system board.

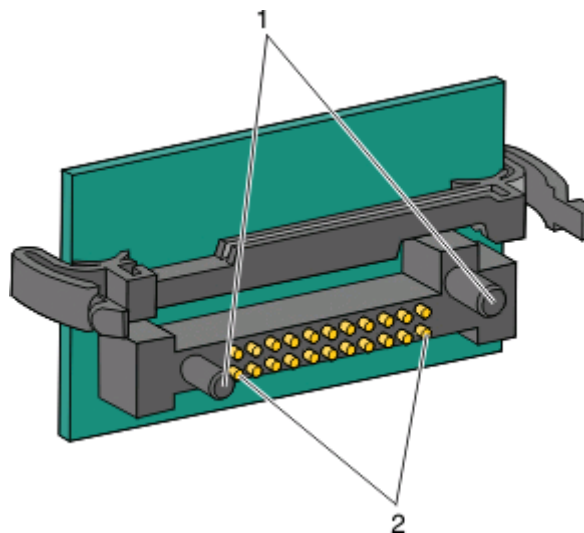

1	Plastic pins
2	Metal pins

4 Push the card firmly into place.

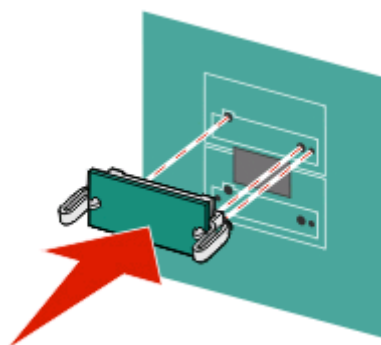

Notes:

- The entire length of the connector on the card must touch and be flush against the system board.
- Be careful not to damage the connectors.

5 Reattach the system board cover.

Installing an Internal Solutions Port


The system board supports one optional Internal Solutions Port (ISP).

Note: This task requires a flathead screwdriver.

CAUTION—SHOCK HAZARD: If you are installing an Internal Solutions Port (ISP) after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing.


Warning—Potential Damage: System board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.

- 1 Access the system board.
- 2 Unpack the ISP and plastic tee.
Note: Avoid touching the components on the card.
- 3 Locate the appropriate connector on the system board.

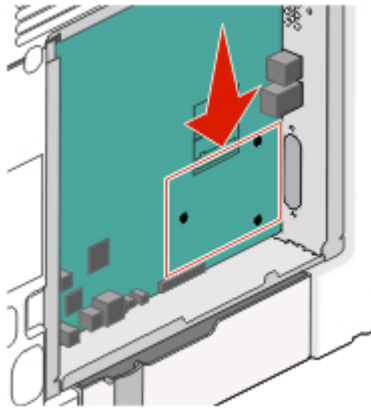


Note: If an optional printer hard disk is currently installed, then it must first be removed. To remove the printer hard disk:


- a** Unplug the printer hard disk interface cable from the system board, leaving the cable attached to the printer hard disk. To unplug the cable, squeeze the paddle at the plug of the interface cable to disengage the latch before pulling the cable out.

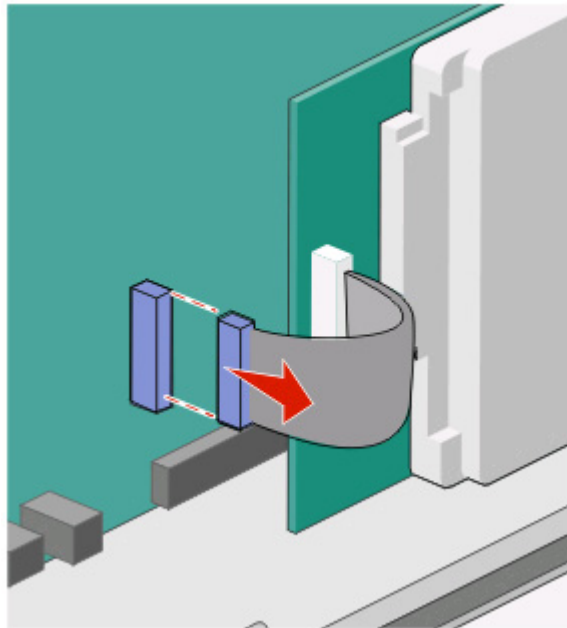


- b** Remove the screws holding the printer hard disk in place.

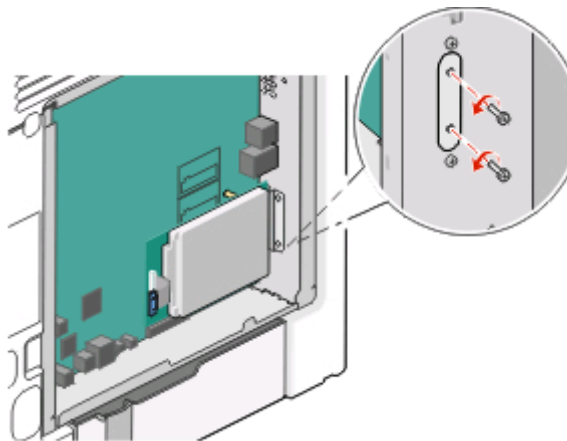


- c** Remove the printer hard disk by pulling it upward to unseat the standoffs.

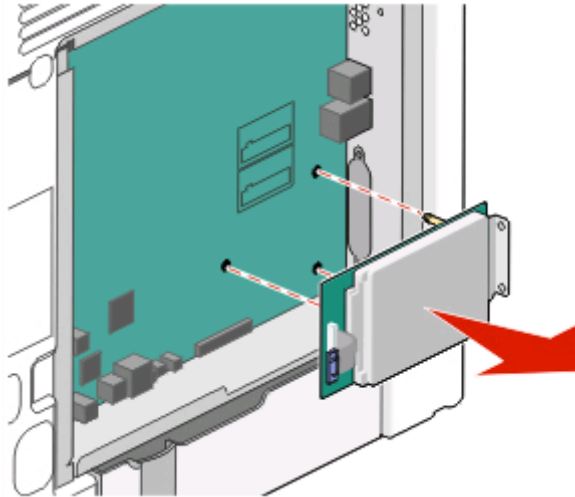


- d** Remove the thumbscrews that attach the printer hard disk mounting bracket to the printer hard disk, and then remove the bracket. Set the printer hard disk aside.

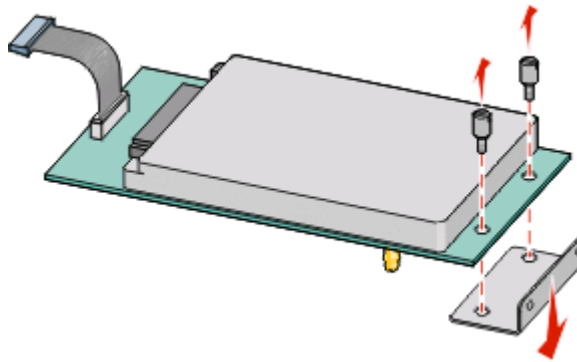


- 4** Remove the metal cover from the ISP opening.

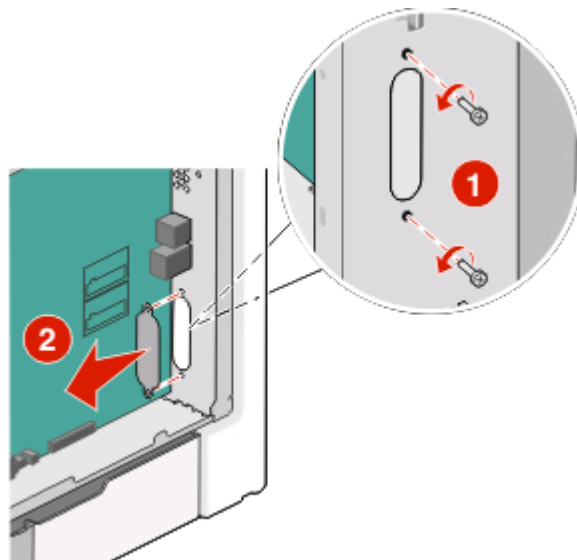


- 5** Align the posts of the plastic tee to the holes in the system board, and press downward until the tee *snaps* into place. Be sure each post of the tee has latched completely, and the tee is seated firmly on the system board.

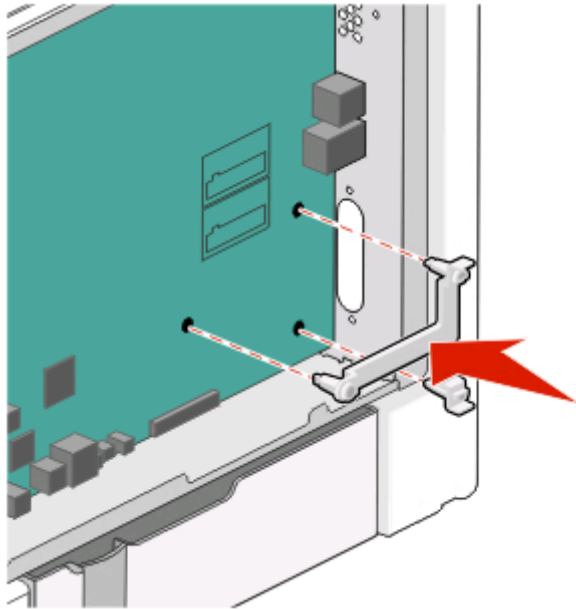


- 6** Install the ISP on the plastic tee. Angle the ISP over the plastic tee, and approach the plastic tee so that any overhanging connectors will pass through the ISP opening in the system board cage.

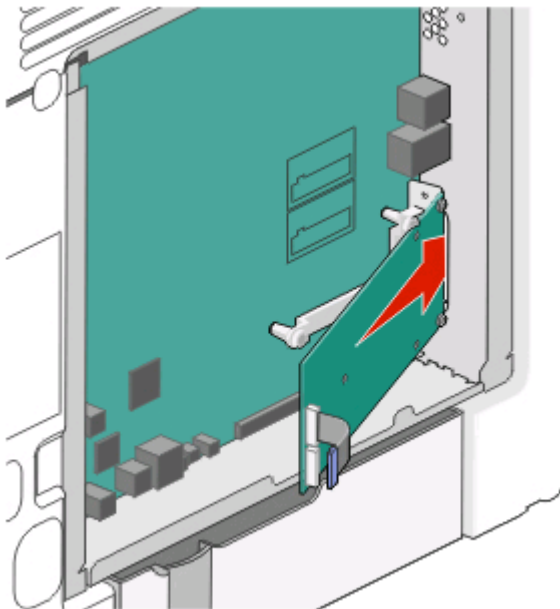


- 7** Lower the ISP toward the plastic tee until the ISP is seated between the guides of the plastic tee.

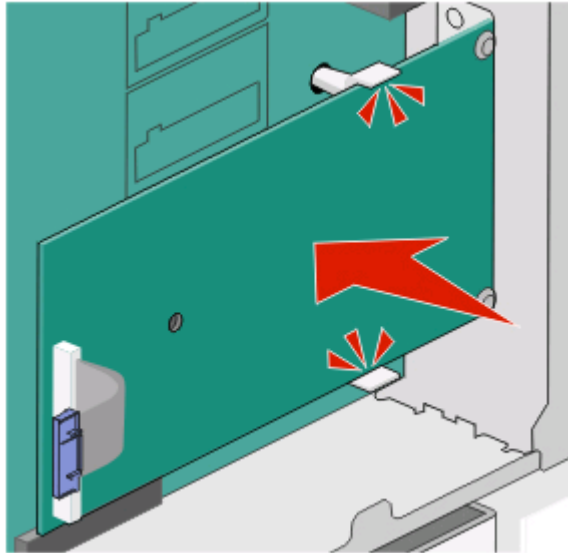

- 8** Insert the long thumbscrew and turn it clockwise enough to hold the ISP in place, but do not tighten the thumbscrew at this time.

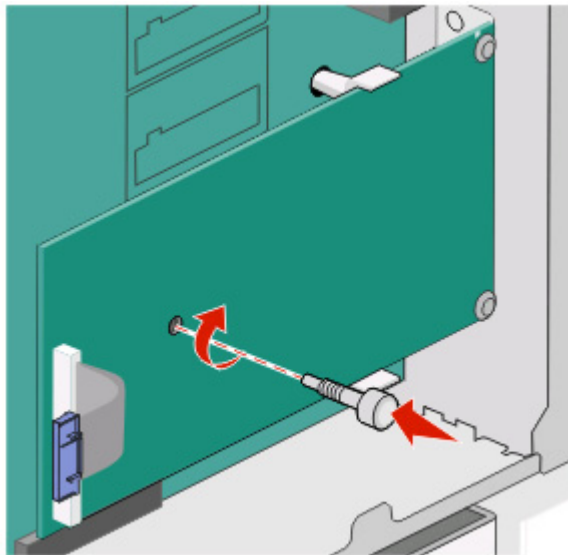

- 9 Attach the two provided screws to secure the ISP mounting bracket to the system board cage.

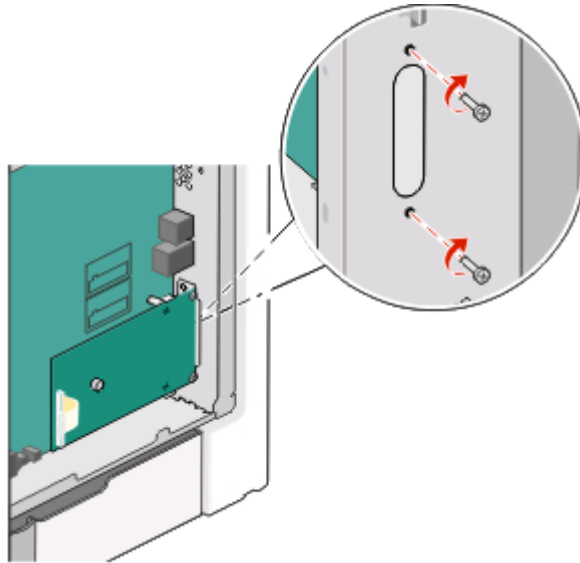


- 10 Tighten the long thumbscrew.

Warning—Potential Damage: Do not overtighten the thumbscrew.

- 11 Insert the plug of the ISP interface cable into the receptacle of the system board.

Note: The plugs and receptacles are color-coded.

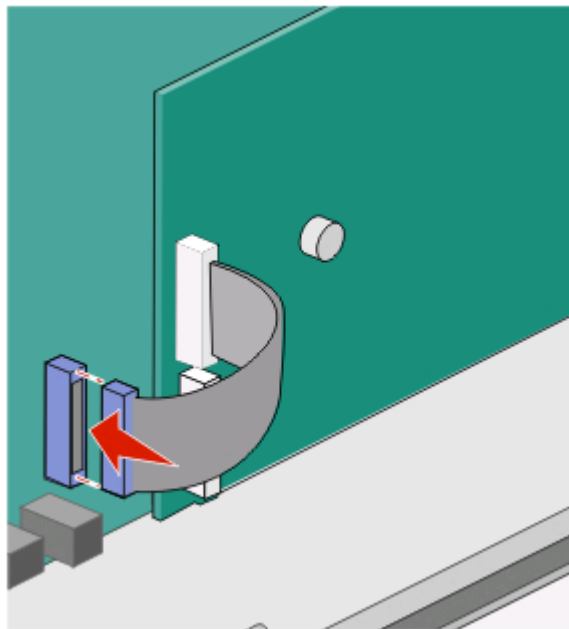

- 12 Reattach the system board cover.

Installing a printer hard disk


The optional printer hard disk can be installed with or without an Internal Solutions Port (ISP).

Note: This task requires a flathead screwdriver.

CAUTION—SHOCK HAZARD: If you are installing an Internal Solutions Port (ISP) after setting up the printer, then turn the printer off and unplug the power cord from the wall outlet before continuing.

Warning—Potential Damage: System board electronic components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.


- 1 Access the system board.
- 2 Unpack the printer hard disk.
Note: Avoid touching the components on the card.
- 3 Locate the appropriate connector on the system board.

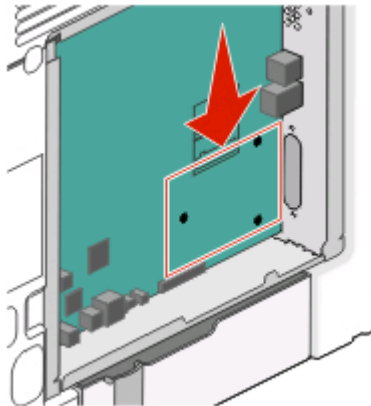


Note: If an optional ISP is currently installed, then the printer hard disk must be installed onto the ISP.

To install a printer hard disk onto the ISP:

- a Using a flathead screwdriver to loosen the screws, remove the thumbscrews that attach the printer hard disk mounting bracket to the printer hard disk, and then remove the bracket.

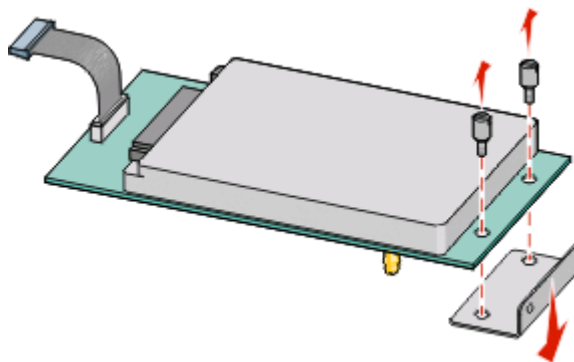


- b** Align the standoffs of the printer hard disk with the holes in the ISP, and then press downward on the printer hard disk until the standoffs have seated into place.

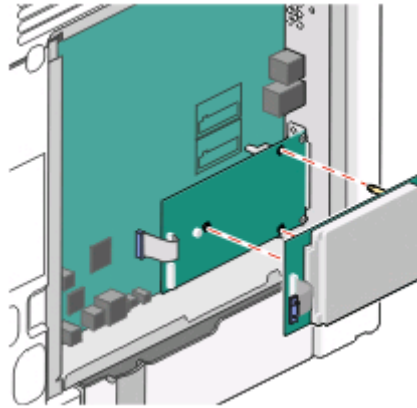


- c** Insert the plug of the printer hard disk interface cable into the receptacle of the ISP.

Note: The plugs and receptacles are color-coded.

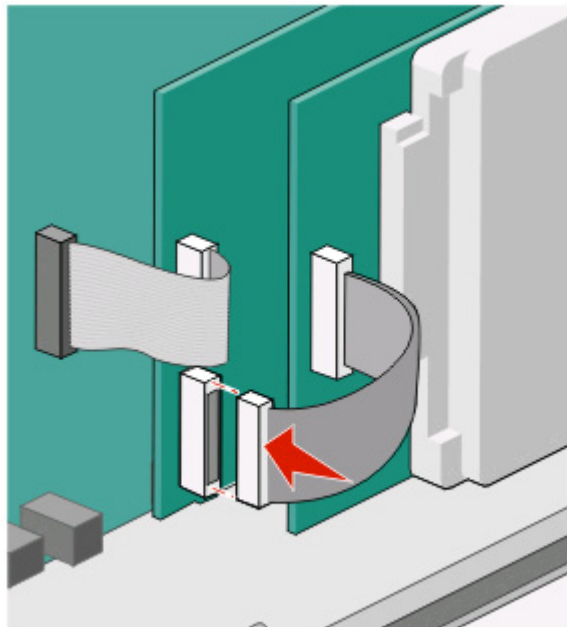


To install a printer hard disk directly on the system board:

- a** Align the standoffs of the printer hard disk with the holes in the system board, and then press downward on the printer hard disk until the standoffs have seated into place.

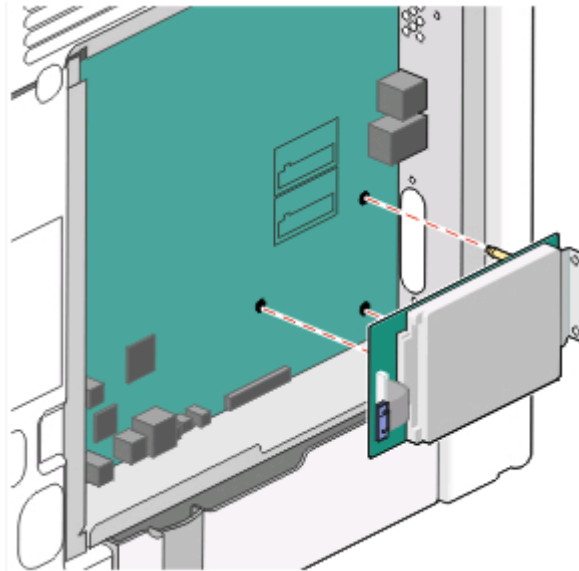


- b** Attach the two provided screws to secure the printer hard disk mounting bracket.

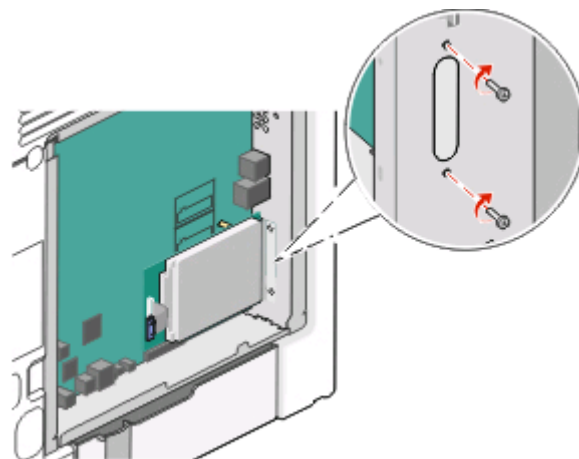

- c** Insert the plug of the printer hard disk interface cable into the receptacle of the system board.

Note: The plugs and receptacles are color-coded.

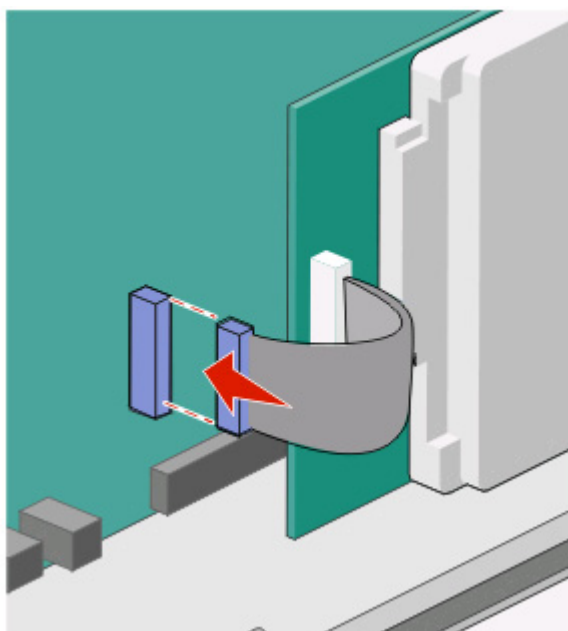


4 Reattach the system board cover.

Reattaching the system board cover


Warning—Potential Damage: System board electrical components are easily damaged by static electricity. Touch something metal on the printer before touching any system board electronic components or connectors.

Note: This task requires a flathead screwdriver.

1 Align the eight keyholes with the screws to replace the cover.

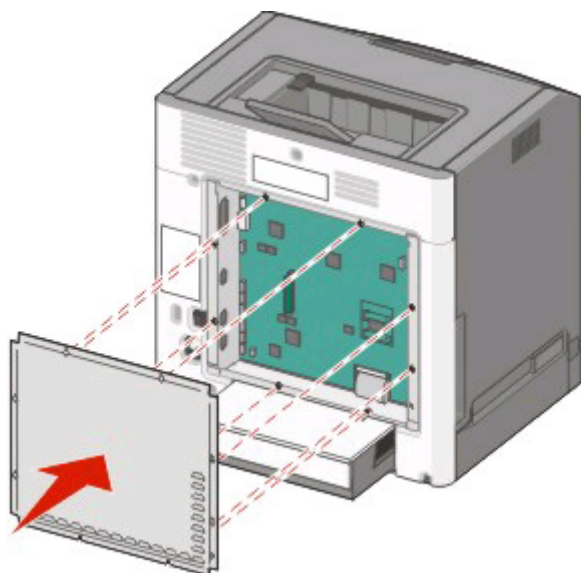

- 2** Slide the cover down, and then turn each screw clockwise to tighten.

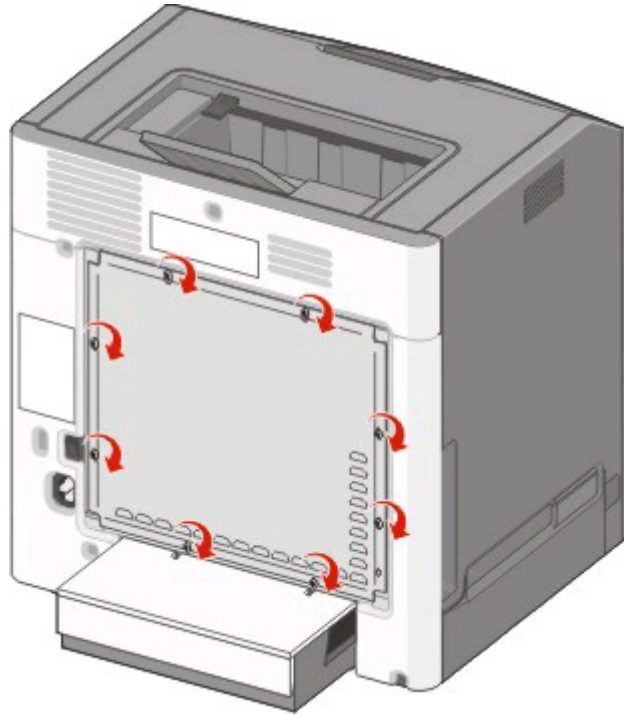


Attaching cables

Connect the printer to the computer using a USB cable or Ethernet cable.

Be sure to match the following:

- The USB symbol on the cable with the USB symbol on the printer
- The appropriate Ethernet cable to the Ethernet port

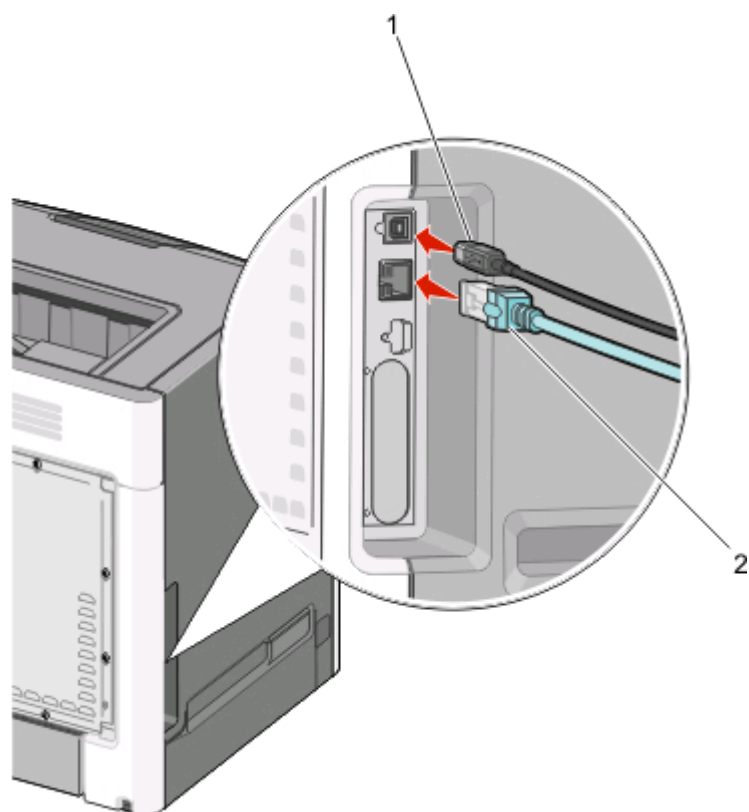

1	USB port
2	Ethernet port

Installing optional trays

The printer supports up to three optional input sources: an optional 550-sheet tray, an optional 2,000-sheet tray, and an optional 550-sheet specialty media drawer. Instructions for installing an optional input source are the same for each.



CAUTION—TIPPING HAZARD: Floor-mounted configurations require additional furniture for stability. You must use either a printer stand or printer base if you are using a high-capacity input tray, a duplex unit and an input option, or more than one input option. If you purchased a multifunction printer (MFP) that scans, copies, and faxes, you may need additional furniture. For more information, see www.infoprint.com/literature/workgroupconfig.

Note: Some models will support a total of four optional input sources.



CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.




CAUTION—SHOCK HAZARD: If you are installing an optional tray after setting up the printer, then turn the printer off and unplug the power cord, the USB cable, and the Ethernet cable before continuing.

1 Unpack the optional tray, and remove all packing material.

2 Place the tray in the location chosen for the printer.

Note: If you are installing more than one optional tray, the 2,000-sheet tray must always be installed as the first optional tray (configuring from the bottom up).


Note: The optional 550-sheet tray and the optional 550-sheet specialty media drawer placement is interchangeable.

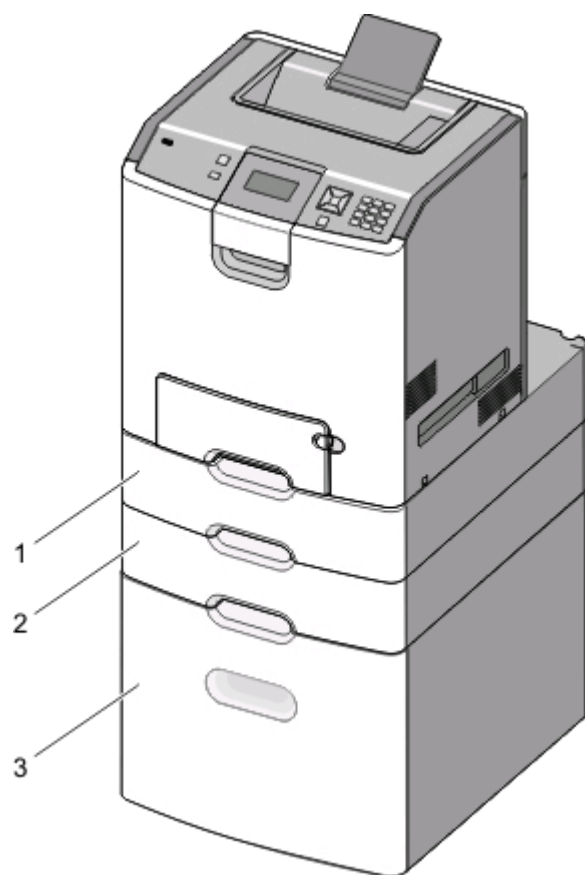

1	Optional 550-sheet tray (or optional 550-sheet specialty media drawer)
2	Optional 550-sheet specialty media drawer (or optional 550-sheet tray)
3	Optional 2,000-sheet tray

Note: Optional trays lock together when stacked. Remove stacked trays one at a time from the top down.

3 Align the printer with the tray, and then lower the printer into place.

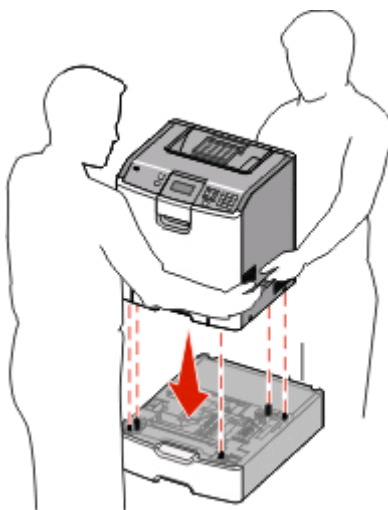




Additional printer setup

- 4 Set the printer software to recognize the optional input source.
 - a Click **Start → Settings → Printers**.
 - b Double-click the printer icon.
 - c Click **File → Properties**.
 - d Click the **Install Options** tab.
 - e From the Available Options list, select the **550-sheet tray**, the **2,000-sheet tray**, or the **550-sheet specialty media drawer**.
 - f Click **Add**.
 - g Click **OK**.

Verifying printer setup

Printing a menu settings page




Print a menu settings page to review the status of the supplies.

- 1 Make sure the printer is on and **Ready** appears.
- 2 From the printer control panel, press .
- 3 Press the down arrow button until **Reports** appears, and then press .
- 4 Press  to select **Menu Settings Page**.

Printing Menu Settings Page appears. After the menu settings page prints, **Ready** appears.

Printing a network setup page

If the printer is attached to a network, print a network setup page to verify the network connection. This page also provides important information that aids network printing configuration.

- 1 Make sure the printer is on and **Ready** appears.
- 2 From the printer control panel, press .
- 3 Press the down arrow button until **Reports** appears, and then press .
- 4 Press the down arrow button until **Network Setup Page** appears, and then press .

After the network setup page prints, **Ready** appears.

- 5 Check the first section on the network setup page, and confirm that Status is "Connected."

If Status is "Not Connected," the LAN drop may not be active, the network cable may be malfunctioning, or, if you have a wireless printer model, the wireless network may not be configured properly. Consult a system support person for a solution, and then print another network setup page.

Setting up the printer software

Installing printer software

A printer driver is software that lets the computer communicate with the printer. The printer software is typically installed during the initial printer setup. If you need to install the software after setup, follow these instructions:

For Windows users

- 1 Close all open software programs.
- 2 Insert the *Software and Documentation* CD.
- 3 From the main installation dialog, click **Install**.
- 4 Follow the instructions on the screen.

For Macintosh users

- 1 Close all open software applications.
- 2 Insert the *Software and Documentation* CD.
- 3 From the Finder desktop, double-click the printer CD icon that automatically appears.
- 4 Double-click the **Install** icon.
- 5 Follow the instructions on the screen.


Updating available options in the printer driver

Once the printer software and any options are installed, it may be necessary to manually add the options in the printer driver to make them available for print jobs.

For Windows users

- 1 Do one of the following:

In Windows Vista

- a Click .
- b Click **Control Panel**.
- c Click **Hardware and Sound**.
- d Click **Printers**.

In Windows XP

- a Click **Start**.
- b Click **Printers and Faxes**.

In Windows 2000

- a Click **Start**.
- b Click **Settings → Printers**.

- 2 Select the printer.
- 3 Right-click the printer, and then select **Properties**.
- 4 Click the Install Options tab.
- 5 Under Available Options, add any installed hardware options.
- 6 Click **Apply**.

For Macintosh users

In Mac OS X version 10.5

- 1 From the Apple menu, choose **System Preferences**.
- 2 Click **Print & Fax**.
- 3 Select the printer, and then click **Options & Supplies**.
- 4 Click **Driver**, and then add any installed hardware options.
- 5 Click **OK**.

In Mac OS X version 10.4 and earlier

- 1 From the Go menu, choose **Applications**.
- 2 Double-click **Utilities**, and then double-click **Print Center** or **Printer Setup Utility**.
- 3 Select the printer, and then from the Printers menu, choose **Show Info**.
- 4 From the pop-up menu, choose **Installable Options**.
- 5 Add any installed hardware options, and then click **Apply Changes**.

Setting up wireless printing

Follow these instructions if your printer model is wireless.

Note: A Service Set Identifier (SSID) is a name assigned to a wireless network. Wireless Encryption Protocol (WEP) and Wi-Fi Protected Access (WPA) are types of security used on a network.

Information you will need to set up the printer on a wireless network

Note: Do not connect the installation or network cables until prompted to do so by the setup software.

- **SSID**—The SSID is also referred to as the network name.
- **Wireless Mode (or Network Mode)**—The mode will be either infrastructure or ad hoc.
- **Channel (for ad hoc networks)**—The channel defaults to auto for infrastructure networks.

Some ad hoc networks will also require the auto setting. Check with your system support person if you are not sure which channel to select.

- **Security Method**—There are three basic options for Security Method:

- WEP key

If your network uses more than one WEP key, enter up to four in the provided spaces. Select the key currently in use on the network by selecting the Default WEP Transmit Key.

or

- WPA or WPA2 passphrase

WPA includes encryption as an additional layer of security. The choices are AES or TKIP. Encryption must be set for the same type on the router and on the printer, or the printer will not be able to communicate on the network.

- No security

If your wireless network does not use any type of security, then you will not have any security information.

Note: Using an unsecured wireless network is not recommended.

If you are installing the printer on an 802.1X network using the Advanced method, then you may need the following:

- Authentication type
- Inner authentication type
- 802.1X username and password
- Certificates


Note: For more information on configuring 802.1X security, see the *Networking Guide* on the *Software and Documentation* CD.

Installing the printer on a wireless network (Windows)

Before you install the printer on a wireless network, make sure that:

- Your wireless network is set up and working properly.
- The computer you are using is connected to the same wireless network where you want to set up the printer.

1 Connect the power cable to the printer and then to a properly grounded electrical outlet, and then turn the printer on.

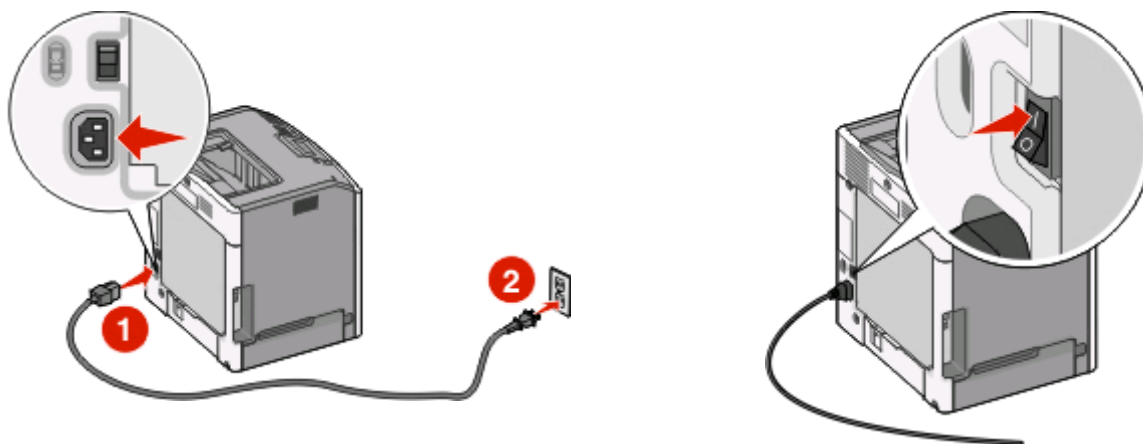




Make sure the printer and computer are fully on and ready.




Do not connect the USB cable until instructed to do so on the screen.

- 2 Insert the *Software and Documentation* CD.

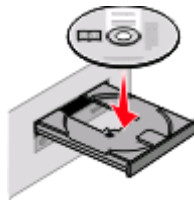

- 3 Click **Install**.
- 4 Click **Agree**.
- 5 Click **Suggested**.
- 6 Click **Wireless Network Attach**.
- 7 Temporarily connect a USB cable between the computer on the wireless network and the printer.

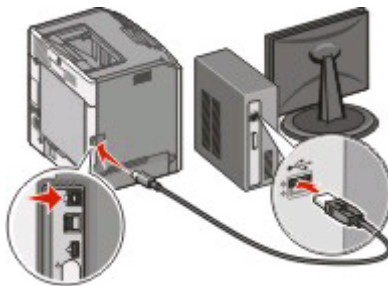

Note: After the printer is configured, the software will instruct you to disconnect the temporary USB cable so you can print wirelessly.

- 8 Follow the on-screen instructions to complete the software installation.


Note: **Basic** is the recommended path to choose. Choose **Advanced** only if you want to customize your installation.

- 9 To allow other computers on the wireless network to use the wireless printer, follow steps 2 through 6 and step 8 for each computer.

Installing the printer on a wireless network (Macintosh)

Prepare to configure the printer

- 1 Locate the printer MAC address on the sheet that shipped with the printer. Write the last six digits of the MAC address in the space provided below:
MAC address: _____
- 2 Connect the power cable to the printer and then to a properly grounded electrical outlet, and then turn the power on.

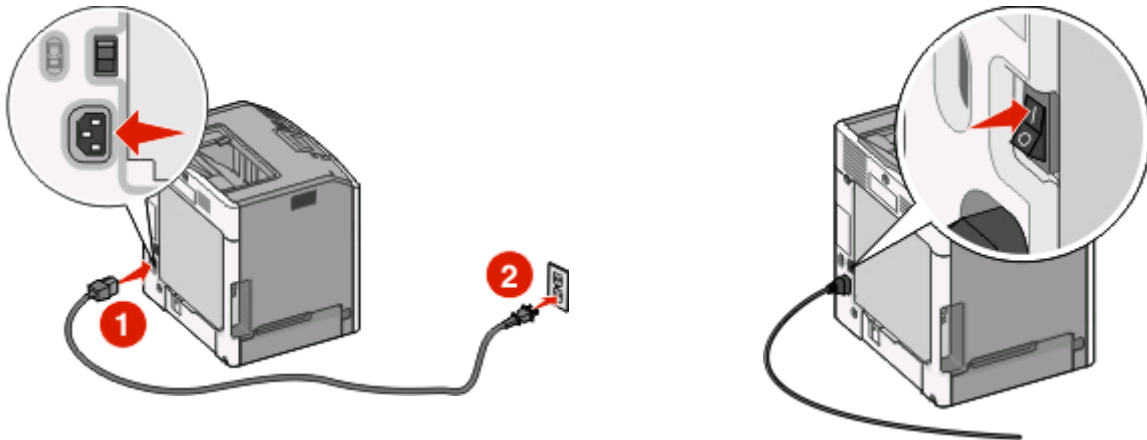

Enter the printer information

- 1 Access the AirPort options.

In Mac OS X version 10.5

- a From the Finder desktop, click **Apple menu** → **System Preferences**.
- b Click **Network**.
- c Click **AirPort**.

In Mac OS X version 10.4 and earlier

- a From the Finder desktop, click **Go** → **Applications**.
 - b From the Applications folder, double-click **Internet Connect**.
 - c From the toolbar, click **AirPort**.
- 2 From the Network popup menu, select **print server xxxxxx**, where the x's are the last six digits of the MAC address located on the MAC address sheet.
 - 3 Open the Safari browser.
 - 4 From the Bookmarks drop-down menu, select **Show**.
 - 5 Under Collections, select **Bonjour** or **Rendezvous**, and then double-click the printer name.
 - 6 From the main page of the Embedded Web Server, navigate to the page where the wireless settings information is stored.

Configure the printer for wireless access

- 1 Type the name of your network (SSID) in the appropriate field.
- 2 Select **Infrastructure** as your Network Mode if you are using a wireless router.
- 3 Select the type of security you use to protect your wireless network.
- 4 Enter the security information necessary for the printer to join your wireless network.
- 5 Click **Submit**.
- 6 Open the AirPort application on your computer:

In Mac OS X version 10.5

- a From the Finder desktop, click **Apple menu → System Preferences**.
- b Click **Network**.
- c Click **AirPort**.

In Mac OS X version 10.4 and earlier

- a From the Finder desktop, click **Go → Applications**.
 - b From the Applications folder, double-click **Internet Connect**.
 - c From the toolbar, click **AirPort**.
- 7 From the Network popup menu, select your wireless network.

Configure your computer to use the printer wirelessly

To print to a network printer, each Macintosh user must install a custom *PostScript Printer Description* (PPD) file and create a printer in the Print Center or Printer Setup Utility.

- 1 Install a PPD file on the computer:
 - a Insert the *Software and Documentation* CD in the CD or DVD drive.
 - b Double-click the installer package for the printer.
 - c From the Welcome screen, click **Continue**.
 - d Click **Continue** again after viewing the Readme file.
 - e Click **Continue** after viewing the license agreement, and then click **Agree** to accept the terms of the agreement.
 - f Select a Destination, and then click **Continue**.
 - g From the Easy Install screen, click **Install**.
 - h Type the user password, and then click **OK**.
All necessary software is installed on the computer.
 - i Click **Close** when installation is complete.
- 2 Add the printer:
 - a For IP printing:

In Mac OS X version 10.5

- 1 From the Finder desktop, click **Apple menu → System Preferences**.
- 2 Click **Print & Fax**.

- 3 Click +.
- 4 Select the printer from the list.
- 5 Click **Add**.

In Mac OS X version 10.4

- 1 From the Finder desktop, click **Go → Applications**.
- 2 Double-click the **Utilities** folder.
- 3 Locate and double-click **Printer Setup Utility** or **Print Center**.
- 4 From the Printer List, choose **Add**.
- 5 Select the printer from the list.
- 6 Click **Add**.

b For AppleTalk printing:

In Mac OS X version 10.5

- 1 From the Finder desktop, click **Apple menu → System Preferences**.
- 2 Click **Print & Fax**.
- 3 Click +.
- 4 Click **AppleTalk**.
- 5 Select the printer from the list.
- 6 Click **Add**.

In Mac OS X version 10.4

- 1 From the Finder desktop, click **Go → Applications**.
- 2 Double-click the **Utilities** folder.
- 3 Locate and double-click **Print Center** or **Printer Setup Utility**.
- 4 From the Printer List, choose **Add**.
- 5 Choose the **Default Browser** tab.
- 6 Click **More Printers**.
- 7 From the first pop-up menu, choose **AppleTalk**.
- 8 From the second pop-up menu, select **Local AppleTalk zone**.
- 9 Select the printer from the list.
- 10 Click **Add**.

Installing the printer on a wired network

Use the following instructions to install the printer on a wired network. These instructions apply to Ethernet and fiber optic network connections.

Before you install the printer on a wired network, make sure that:

- You have completed the initial setup of the printer.
- The printer is connected to your network with the appropriate type of cable.

For Windows users


- 1 Insert the *Software and Documentation* CD.

Wait for the Welcome screen to appear.

If the CD does not launch after a minute, then do one of the following:

Additional printer setup

In Windows Vista

- a Click .
- b In the Start Search box, type **D:\setup.exe**, where **D** is the letter of your CD or DVD drive.

In Windows XP and earlier

- a Click **Start**.
- b Click **Run**.
- c Type **D:\setup.exe**, where **D** is the letter of your CD or DVD drive.

2 Click **Install Printer and Software**.

3 Click **Agree** to agree to the License Agreement.

4 Select **Suggested**, and then click **Next**.

Note: To configure the printer using a static IP address, using IPv6, or to configure printers using scripts, select **Custom** and follow the on-screen instructions.

5 Select **Wired Network Attach**, and then click **Next**.

6 Select the printer manufacturer from the list.

7 Select the printer model from the list, and then click **Next**.

8 Select the printer from the list of printers discovered on the network, and then click **Finish**.

Note: If your configured printer does not appear in the list of discovered printers, click **Add Port** and follow the on-screen instructions.

9 Follow the on-screen instructions to complete the installation.

For Macintosh users

1 Allow the network DHCP server to assign an IP address to the printer.

2 Print the network setup page from the printer. For information on printing a network setup page, see "Printing a network setup page" on page 36.

3 Locate the printer IP address in the TCP/IP section of the network setup page. You will need the IP address if you are configuring access for computers on a different subnet than the printer.

4 Install the drivers and add the printer.

a Install a PPD file on the computer:

1 Insert the *Software and Documentation* CD in the CD or DVD drive.

2 Double-click the installer package for the printer.

3 From the Welcome screen, click **Continue**.

4 Click **Continue** again after viewing the Readme file.

5 Click **Continue** after viewing the license agreement, and then click **Agree** to accept the terms of the agreement.

6 Select a Destination, and then click **Continue**.

7 From the Easy Install screen, click **Install**.

8 Type the user password, and then click **OK**.

All the necessary software is installed on the computer.

9 Click **Close** when installation is complete.

b Add the printer:

- For IP printing:

In Mac OS X version 10.5

- 1** From the Apple menu, choose **System Preferences**.
- 2** Click **Print & Fax**.
- 3** Click **+**.
- 4** Select the printer from the list.
- 5** Click **Add**.

In Mac OS X version 10.4 and earlier

- 1** From the Go menu, choose **Applications**.
- 2** Double-click **Utilities**.
- 3** Double-click **Printer Setup Utility** or **Print Center**.
- 4** From the Printer List, click **Add**.
- 5** Select the printer from the list.
- 6** Click **Add**.

- For AppleTalk printing:

In Mac OS X version 10.5

- 1** From the Apple menu, choose **System Preferences**.
- 2** Click **Print & Fax**.
- 3** Click **+**.
- 4** Click **AppleTalk**.
- 5** Select the printer from the list.
- 6** Click **Add**.

In Mac OS X version 10.4 and earlier

- 1** From the Go menu, choose **Applications**.
- 2** Double-click **Utilities**.
- 3** Double-click **Print Center** or **Printer Setup Utility**.
- 4** From the Printer List, click **Add**.
- 5** Choose the **Default Browser** tab.
- 6** Click **More Printers**.
- 7** From the first pop-up menu, choose **AppleTalk**.
- 8** From the second pop-up menu, select **Local AppleTalk zone**.
- 9** Select the printer from the list.
- 10** Click **Add**.

Note: If the printer doesn't show up in the list, you may need to add it using the IP address. Contact your system support person for assistance.

Changing port settings after installing a new network Internal Solutions Port

When a new network Internal Solutions Port (ISP) is installed in the printer, the printer configurations on computers that access the printer must be updated because the printer will be assigned a new IP address. All computers that access the printer must be updated with this new IP address in order to print to it over the network.


Notes:

- If the printer has a static IP address that will stay the same, then you do not need to make any changes to the computer configurations.
- If the computers are configured to print to the printer by a network name that will stay the same, instead of by IP address, then you do not need to make any changes to the computer configurations.
- If you are adding a wireless ISP to a printer previously configured for a wired connection, then make sure the wired network is disconnected when you configure the printer to operate wirelessly. If the wired connection remains connected, then the wireless configuration will complete, but the wireless ISP will not be active. This can be fixed by disconnecting the wired connection, turning the printer off, and then turning the printer back on again.

For Windows users

- 1 Print a network setup page and make a note of the new IP address.
- 2 Do one of the following:

In Windows Vista

- a Click .
- b Click **Control Panel**.
- c Under Hardware and Sound, click **Printer**.

In Windows XP

- a Click **Start**.
- b Click **Printers and Faxes**.

In Windows 2000

- a Click **Start**.
- b Click **Settings → Printers**.

- 3 Locate the printer that has changed.

Note: If there is more than one copy of the printer, then update all of them with the new IP address.

- 4 Right-click the printer.
- 5 Click **Properties**.
- 6 Click the **Ports** tab.
- 7 Locate the port in the list, and then select it.
- 8 Click **Configure Port**.

- 9 Type the new IP address in the "Printer Name or IP Address" field. You can find the new IP address on the network setup page you printed in step 1.
- 10 Click **OK**, and then click **Close**.

For Mac users

- 1 Print a network setup page and make a note of the new IP address.
- 2 Locate the printer IP address in the TCP/IP section of the network setup page. You will need the IP address if you are configuring access for computers on a different subnet than the printer.
- 3 Add the printer:
 - For IP printing:

In Mac OS X version 10.5

- a From the Apple menu, choose **System Preferences**.
- b Click **Print & Fax**.
- c Click **+**.
- d Select the printer from the list.
- e Click **Add**.

In Mac OS X version 10.4 and earlier

- a From the Go menu, choose **Applications**.
 - b Double-click **Utilities**.
 - c Double-click **Printer Setup Utility** or **Print Center**.
 - d From the Printer List, click **Add**.
 - e Select the printer from the list.
 - f Click **Add**.
- For AppleTalk printing:

In Mac OS X version 10.5

- a From the Apple menu, choose **System Preferences**.
- b Click **Print & Fax**.
- c Click **+**.
- d Click **AppleTalk**.
- e Select the printer from the list.
- f Click **Add**.

In Mac OS X version 10.4 and earlier

- a From the Go menu, choose **Applications**.
- b Double-click **Utilities**.
- c Double-click **Print Center** or **Printer Setup Utility**.
- d From the Printer List, click **Add**.
- e Choose the **Default Browser** tab.
- f Click **More Printers**.
- g From the first pop-up menu, choose **AppleTalk**.
- h From the second pop-up menu, select **Local AppleTalk zone**.

- i Select the printer from the list.
- j Click **Add**.


Setting up serial printing

In serial printing, data is transferred one bit at a time. Although serial printing is usually slower than parallel printing, it is the preferred option when there is a great deal of distance between the printer and computer or when an interface with a better transfer rate is not available.

After installing the serial port, you will need to configure the printer and the computer so they can communicate. Make sure you have connected the serial cable to the serial port on your printer.

- 1 Set the parameters in the printer:
 - a From the printer control panel, navigate to the menu with port settings.
 - b Locate the submenu with serial port settings.
 - c Make any necessary changes to the serial settings.
 - d Save the new settings.
 - e Print a menu settings page.
- 2 Install the printer driver:
 - a Insert the *Software and Documentation* CD. It launches automatically.
If the CD does not launch automatically, do one of the following:

In Windows Vista

- 1 Click .
- 2 In the Start Search box, type `D:\setup.exe`, where **D** is the letter of your CD or DVD drive.

In Windows XP and earlier

- 1 Click **Start**.
- 2 Click **Run**.
- 3 Type `D:\setup.exe`, where **D** is the letter of your CD or DVD drive.
- b Click **Install Printer and Software**.
- c Click **Agree** to accept the Printer Software License Agreement.
- d Click **Custom**.
- e Make sure **Select Components** is selected, and then click **Next**.
- f Make sure **Local** is selected, and then click **Next**.
- g Select the manufacturer of the printer from the menu.
- h Select the printer model from the menu, and then click **Add Printer**.
- i Click the + beside the printer model under **Select Components**.
- j Make sure the correct port is available under **Select Components**. This is the port where the serial cable attaches to the computer. If the correct port is not available, select the port under the **Select Port** menu, and then click **Add Port**.
- k Make any configuration changes necessary in the **Add a New Port** window. Click **Add Port** to finish adding the port.

- l** Make sure the box next to the selected printer model is checked.
- m** Select any other optional software you want to install, and then click **Next**.
- n** Click **Finish** to complete the printer software installation.


3 Set the COM port parameters:

After the printer driver is installed, you must set the serial parameters in the communications (COM) port assigned to the printer driver.

The serial parameters in the COM port must match the serial parameters you set in the printer.

- a** Open the Device Manager. Do one of the following:

In Windows Vista

- 1** Click .
- 2** Click **Control Panel**.
- 3** Click **System and Maintenance**.
- 4** Click **System**.
- 5** Click **Device Manager**.

In Windows XP

- 1** Click **Start**.
- 2** Click **Control Panel**.
- 3** Click **Performance and Maintenance**.
- 4** Click **System**.
- 5** From the Hardware tab, click **Device Manager**.

In Windows 2000

- 1** Click **Start**.
 - 2** Click **Settings → Control Panel**.
 - 3** Click **System**.
 - 4** From the Hardware tab, click **Device Manager**.
- b** Click **+** to expand the list of available ports.
 - c** Select the communications port where you attached the serial cable to your computer (example: COM1).
 - d** Click **Properties**.
 - e** On the Port Settings tab, set the serial parameters to the same serial parameters in the printer.
Look for the printer settings under the serial heading on the Menu Settings page you printed earlier.
 - f** Click **OK**, and then close all the windows.
 - g** Print a test page to verify printer installation. When a test page prints successfully, printer setup is complete.











Loading paper and specialty media

This section explains how to load the standard tray (Tray 1), also known as the 550-sheet tray, an optional 550-sheet tray, an optional 2,200-sheet tray, a multipurpose tray, and an optional 550-sheet specialty media drawer. It also includes information about paper orientation, setting the Paper Size and Paper Type, and linking and unlinking trays.

Setting the paper size and type

Note: Trays with matching paper size and paper type settings are automatically linked by the printer. When a linked tray runs out of paper, the printer draws from another tray.

To change the paper size and type settings:

- 1 Make sure that the printer is on and **Ready** appears.
- 2 From the printer control panel, press .
- 3 Press the down arrow button until  **Paper Menu** appears, and then press .
- 4 Press the down arrow button until  **Paper Size/Type** appears, and then press .
- 5 Press the down arrow button until the correct tray appears, and then press .
- 6 Press the down arrow button until  appears next to the correct size, and then press .
- 7 Press the left or right arrow button to scroll through the list of possible paper types. Press  at the correct paper type.
Submitting Selection appears. The printer returns to the **Paper Size/Type**.
- 8 Press  three times to return to the **Ready** state.


Loading the paper tray

The printer has up to five input sources to select from: the standard tray (Tray 1), also known as the 550-sheet tray, an optional 550-sheet tray, an optional 2,000-sheet tray, a multipurpose tray, and an optional 550-sheet specialty media drawer. Load the paper or specialty media used for the majority of print jobs in Tray 1. Proper paper loading prevents jams and facilitates trouble-free printing.


Note: The printer model you have may not support a total of four optional input sources. It may support only a total of three optional input sources.

Do not remove trays while a job prints or while **Busy** blinks on the printer control panel. Doing so may cause a jam.


- 1 Grasp the handle, and then pull the tray out. Remove the tray completely.

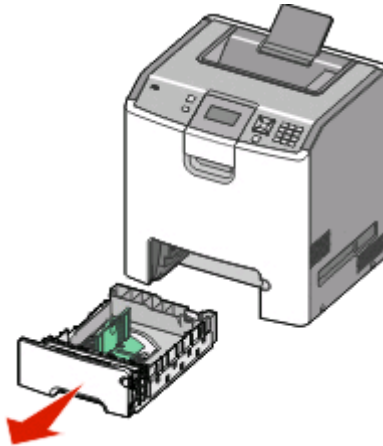


Notice the size indicators on the bottom of the tray. Use these indicators to help position the guides.

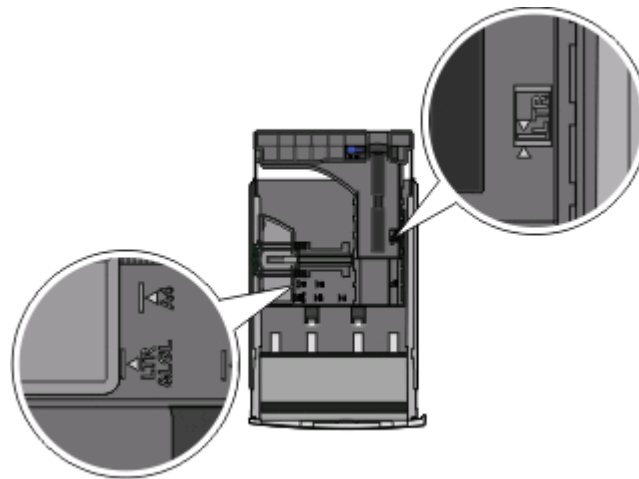


- 2 Squeeze the width guide tabs as shown, and then slide the guide to the correct position for the size of paper being loaded.

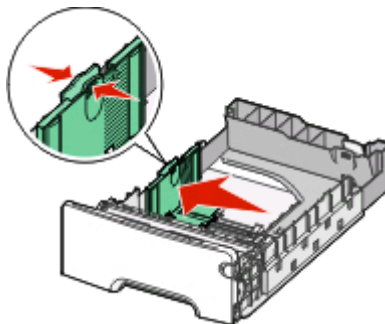

Notice the load line on the left side of the paper tray: it indicates the maximum height for loading paper.

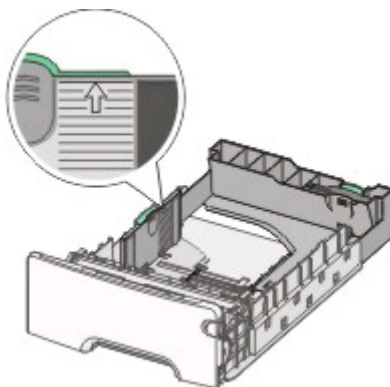

- 3 Squeeze the length guide tabs together, and then slide the length guide to the correct position for the size of paper being loaded.

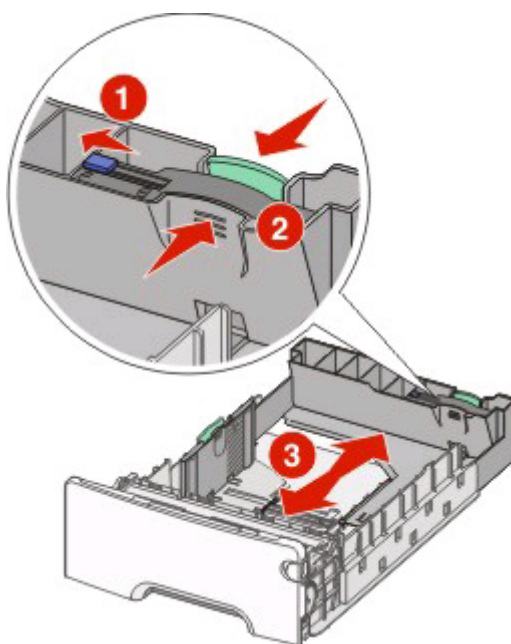


Note: The length guide has a locking device. To unlock the tray, slide the button on top of the length guide to the left as shown. To lock the tray once a length has been selected, slide the button back to the right.

- 4 Flex a stack of paper back and forth to loosen the sheets, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.




- 5 Load the paper stack with the recommended print side faceup. Load the stack toward the back of the tray as shown.

When loading preprinted letterhead for simplex printing, place the header toward the front of the tray.

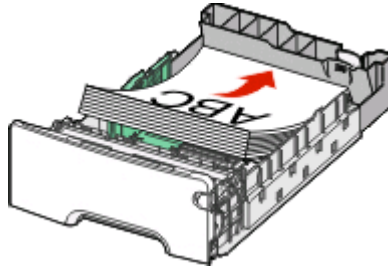


- 6** Align the tray, and then reinsert it.

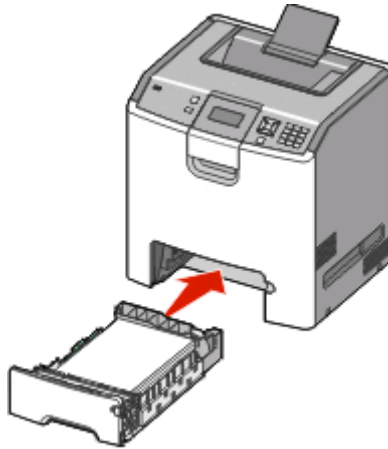

- 7** If a different type of paper was loaded than the type previously loaded in the tray, then change the paper type setting for the tray from the printer control panel. For more information, see “Setting the paper size and type” on page 50.


Loading the multipurpose tray

The multipurpose tray accommodates a variety of media types including envelopes. Media not kept in a tray can be loaded into the multipurpose tray.

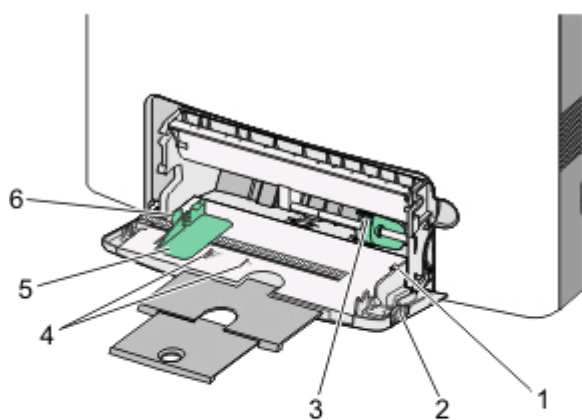


1	Stack height limiter
2	Tray release latch
3	Paper release lever
4	Size indicators
5	Width guide
6	Width guide release tab

1 Press the tray release latch to the left, and then pull the multipurpose tray down.

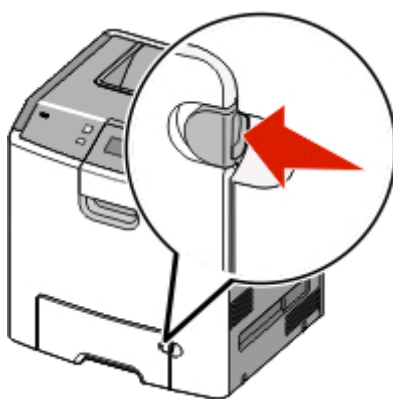

- 2 Gently pull the extension out until it is fully extended.

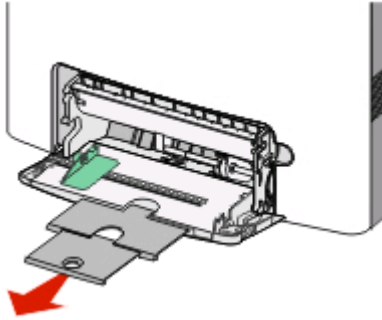


- 3 Prepare a media stack for loading.

- Flex sheets of paper back and forth to loosen them, and then fan them. Do not fold or crease the paper. Straighten the edges on a level surface.



- Hold transparencies by the edges, and then fan them. Straighten the edges on a level surface.


Note: Avoid touching the print side of the transparencies. Be careful not to scratch them.

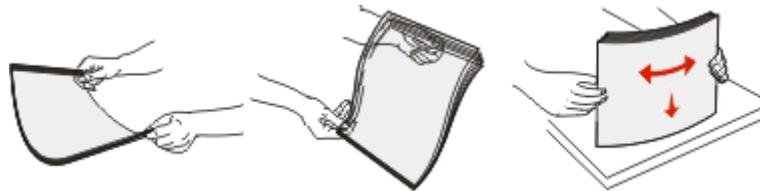

- Flex a stack of envelopes back and forth to loosen them, and then fan them. Straighten the edges on a level surface.




- 4 Load the media stack with the recommended print side facedown and the top edge entering the printer first.

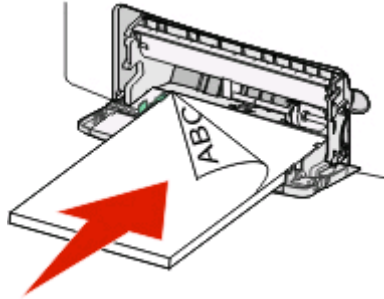

Note: Load only one size and type of media at a time.

- 5 Load envelopes with the flap side up and the return address edge entering the printer first.

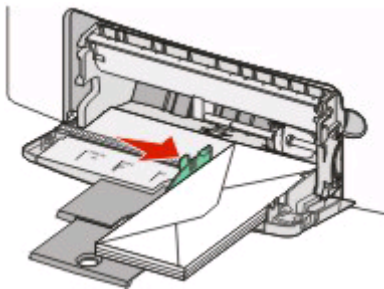

Warning—Potential Damage: Never use envelopes with stamps, clasps, snaps, windows, coated linings, or self-stick adhesives. These envelopes may severely damage the printer.

- 6 Make sure the media is as far into the multipurpose tray as it will go with very gentle pushing. Media should lie flat and fit loosely in the multipurpose tray.

Note: If the media is pushed too far into the multipurpose tray, you must press the paper release lever to remove it.

- 7 From the printer control panel, set the Paper Size and Paper Type, and then press .

The multipurpose tray can be closed when not in use.

Linking and unlinking trays

Linking trays

Tray linking is useful for large print jobs or multiple copies. When one linked tray is empty, paper feeds from the next linked tray. When the Paper Size and Paper Type settings are the same for any trays, the trays are automatically linked. The Paper Size setting is automatically sensed according to the position of the paper guides in each tray except the Standard 550-sheet tray and the multipurpose tray. The Paper Size setting for the Standard 550-sheet tray and the multipurpose tray must be set manually from the Paper Size menu. The Paper Type setting must be set for all trays from the Paper Type menu. The Paper Type menu and the Paper Size menu are both available from the Paper Size/Type menu.

Unlinking trays

Unlinked trays have settings that are *not* the same as the settings of any other tray.

To unlink a tray, change the following tray settings so that they do not match the settings of any other tray:

- Paper Type (for example: Plain Paper, Letterhead, Custom Type <x>)

Paper Type names describe the paper characteristics. If the name that best describes your paper is used by linked trays, assign a different Paper Type name to the tray, such as Custom Type <x>, or define your own custom name.

- Paper Size (for example: letter, A4, statement)

Load a different paper size to change the Paper Size setting for a tray automatically. Paper Size settings for the Standard 550-sheet tray and the multipurpose tray are not automatic; they must be set manually from the Paper Size menu.

Notes:

- Do not assign a Paper Type name that does not accurately describe the type of paper loaded in the tray. The temperature of the fuser varies according to the specified Paper Type. Paper may not be properly processed if an inaccurate Paper Type is selected.
- If the media you have loaded is smaller than the Paper Size setting, then your text or graphics may not fit on the media.

Paper and specialty media guide

Paper guidelines

Paper characteristics

The following paper characteristics affect print quality and reliability. Consider these characteristics when evaluating new paper stock.

Weight

The printer can automatically feed paper weights from 60 to 220 g/m² (16 to 58 lb bond) grain long. Paper lighter than 60 g/m² (16 lb) might not be stiff enough to feed properly, causing jams. For best performance, use 75 g/m² (20 lb bond) grain long paper. For paper smaller than 182 x 257 mm (7.2 x 10.1 in.), we recommend 90 g/m² (24 lb) or heavier paper.

Note: Duplex is supported only for 63 g/m²–120 g/m² (17 lb–32 lb bond) paper.

Curl

Curl is the tendency for paper to curl at its edges. Excessive curl can cause paper feeding problems. Curl can occur after the paper passes through the printer, where it is exposed to high temperatures. Storing paper unwrapped in hot, humid, cold, or dry conditions, even in the trays, can contribute to paper curling prior to printing and can cause feeding problems.

Smoothness

Paper smoothness directly affects print quality. If paper is too rough, toner cannot fuse to it properly. If paper is too smooth, it can cause paper feeding or print quality issues. Always use paper between 100 and 300 Sheffield points; however, smoothness between 150 and 200 Sheffield points produces the best print quality.

Moisture content

The amount of moisture in paper affects both print quality and the ability of the printer to feed the paper correctly. Leave paper in its original wrapper until it is time to use it. This limits the exposure of paper to moisture changes that can degrade its performance.

Condition paper before printing by storing it in its original wrapper in the same environment as the printer for 24 to 48 hours before printing. Extend the time several days if the storage or transportation environment is very different from the printer environment. Thick paper may also require a longer conditioning period.

Grain direction

Grain refers to the alignment of the paper fibers in a sheet of paper. Grain is either *grain long*, running the length of the paper, or *grain short*, running the width of the paper.

For 60 to 135 g/m² (16 to 36 lb bond) paper, grain long paper is recommended. For papers heavier than 135 g/m², grain short is recommended.

Fiber content

Most high-quality xerographic paper is made from 100% chemically treated pulped wood. This content provides the paper with a high degree of stability resulting in fewer paper feeding problems and better print quality. Paper containing fibers such as cotton can negatively affect paper handling.

Unacceptable paper

The following paper types are not recommended for use with the printer:

- Chemically treated papers used to make copies without carbon paper, also known as carbonless papers, carbonless copy paper (CCP), or no carbon required (NCR) paper
- Preprinted papers with chemicals that may contaminate the printer
- Preprinted papers that can be affected by the temperature in the printer fuser
- Preprinted papers that require a registration (the precise print location on the page) greater than ± 2.3 mm (± 0.9 in.), such as optical character recognition (OCR) forms

In some cases, registration can be adjusted with a software application to successfully print on these forms.

- Coated papers (erasable bond), synthetic papers, thermal papers
- Rough-edged, rough or heavily textured surface papers, or curled papers
- Recycled papers that fail EN12281:2002 (European)
- Paper weighing less than 60 g/m² (16 lb)
- Multiple-part forms or documents

Selecting paper

Using appropriate paper prevents jams and helps ensure trouble-free printing.

To help avoid jams and poor print quality:

- *Always* use new, undamaged paper.
- Before loading paper, know the recommended print side of the paper. This information is usually indicated on the paper package.
- *Do not* use paper that has been cut or trimmed by hand.
- *Do not* mix paper sizes, types, or weights in the same source; mixing results in jams.
- *Do not* use coated papers unless they are specifically designed for electrophotographic printing.

Selecting preprinted forms and letterhead

Use these guidelines when selecting preprinted forms and letterhead:

- Use grain long for 60 to 90 g/m² (16 to 24 lb) weight paper.
- Use only forms and letterhead printed using an offset lithographic or engraved printing process.
- Avoid papers with rough or heavily textured surfaces.

Use papers printed with heat-resistant inks designed for use in xerographic copiers. The ink must be able to withstand temperatures up to 190°C (374°F) without melting or releasing hazardous emissions. Use inks that are not affected by the resin in toner. Inks that are oxidation-set or oil-based generally meet these requirements; latex inks might not. When in doubt, contact the paper supplier.

Preprinted papers such as letterhead must be able to withstand temperatures up to 190°C (374°F) without melting or releasing hazardous emissions.

Using recycled paper and other office papers

Recycled office paper produced specifically for use in laser (electrophotographic) printers may be used in your printer. However, no blanket statement can be made that *all* recycled paper will feed well.

Generally, the following property guidelines apply to recycled paper.

- Low moisture content (4–5%)
- Suitable smoothness (100–200 Sheffield units, or 140–350 Bendtsen units, European)

Note: Some much smoother papers (such as premium 24 lb laser papers, 50–90 Sheffield units) and much rougher papers (such as premium cotton papers, 200–300 Sheffield units) have been engineered to work very well in laser printers, despite surface texture. Before using these types of paper, consult your paper supplier.

- Suitable sheet-to-sheet coefficient of friction (0.4–0.6)
- Sufficient bending resistance in the direction of feed

Recycled paper, paper of lower weight ($<60 \text{ g/m}^2$ [16 lb bond]) and/or lower caliper ($<3.8 \text{ mils}$ [0.1 mm]), and paper that is cut grain-short for portrait (or short-edge) fed printers may have lower bending resistance than is required for reliable paper feeding. Before using these types of paper for laser (electrophotographic) printing, consult your paper supplier. Remember that these are general guidelines only and that paper meeting these guidelines may still cause paper feeding problems in any laser printer (for example, if the paper curls excessively under normal printing conditions).

Storing paper

Use these paper storage guidelines to help avoid jams and uneven print quality:

- For best results, store paper where the temperature is 21°C (70°F) and the relative humidity is 40%. Most label manufacturers recommend printing in a temperature range of 18 to 24°C (65 to 75°F) with relative humidity between 40 and 60%.
- Store paper in cartons when possible, on a pallet or shelf, rather than on the floor.
- Store individual packages on a flat surface.
- Do not store anything on top of individual paper packages.

Supported paper sizes, types, and weights

The following tables provide information on standard and optional paper input sources and the types of paper they support.

Note: To use a paper size that is unlisted, configure a Universal Paper Size.

Supported paper sizes

Measurements apply to simplex (one-sided) printing only. For duplex (two-sided) printing, the minimum size is 139.7 x 210 mm (5.50 x 8.27 in.).

Paper size	Dimensions	Standard 550-sheet tray (Tray 1)	Optional 550-sheet tray	Optional 2,000-sheet tray	Multipurpose tray	Optional 550-sheet specialty media drawer
A4	210 x 297 mm (8.27 x 11.7 in.)	✓	✓	✓	✓	✓
A5	148 x 210 mm (5.83 x 8.27 in.)	✓	✓	X	✓	✓
A6	105 x 148 mm (4.13 x 5.83 in.)	X	X	X	✓	✓
JIS B5	182 x 257 mm (7.17 x 10.1 in.)	✓	✓	X	✓	✓
Letter	215.9 x 279.4 mm (8.5 x 11 in.)	✓	✓	✓	✓	✓
Legal	215.9 x 355.6 mm (8.5 x 14 in.)	✓	✓	✓	✓	✓
Executive	184.2 x 266.7 mm (7.25 x 10.5 in.)	✓	✓	X	✓	✓
Oficio (México)	215.9 x 340.4 mm (8.5 x 13.4 in.)	✓	✓	X	✓	✓
Folio	215.9 x 330.2 mm (8.5 x 13 in.)	✓	✓	X	✓	✓
Statement	139.7 x 215.9 mm (5.5 x 8.5 in.)	X	X	X	✓	✓
<p>*This size setting formats the envelope for 215.9 x 355.6 mm (8.5 x 14 in.) unless the size is specified by the software application.</p> <p>**Not supported by all printer models.</p> <p>***Not supported by all printer models.</p>						

Paper size	Dimensions	Standard 550-sheet tray (Tray 1)	Optional 550-sheet tray	Optional 2,000-sheet tray	Multipurpose tray	Optional 550-sheet specialty media drawer
Universal Note: Turn size sensing off to support universal sizes that are close to standard media sizes.	148 x 210 mm to 215.9 x 355.6 mm (5.83 x 8.27 in. to 8.5 x 14 in.)	✓	✓	X	✓	✓
	76.2 x 127 mm (3 x 5 in.) to 215.9 x 355.6 mm (8.5 x 14 in.)	X	X	X	✓	✓
	76.2 x 127 mm (3 x 5 in.) to 215.9 x 914.4 mm (8.5 x 36 in.)**	X	X	X	✓	X
	76.2 x 127 mm (3 x 5 in.) to 215.9 x 1219.2 mm (8.5 x 48 in.)***	X	X	X	✓	X
7 3/4 Envelope (Monarch)	98.4 x 190.5 mm (3.875 x 7.5 in.)	X	X	X	✓	✓
9 Envelope	98.4 x 226.1 mm (3.875 x 8.9 in.)	X	X	X	✓	✓
Com 10 Envelope	104.8 x 241.3 mm (4.12 x 9.5 in.)	X	X	X	✓	✓
DL Envelope	110 x 220 mm (4.33 x 8.66 in.)	X	X	X	✓	✓
C5 Envelope	162 x 229 mm (6.38 x 9.01 in.)	X	X	X	✓	✓
B5 Envelope	176 x 250 mm (6.93 x 9.84 in.)	X	X	X	✓	✓
Other Envelope*	85.7 x 165 mm to 215.9 x 355.6 mm (3.375 x 6.50 in. to 8.5 x 14 in.)	X	X	X	✓	✓
*This size setting formats the envelope for 215.9 x 355.6 mm (8.5 x 14 in.) unless the size is specified by the software application. **Not supported by all printer models. ***Not supported by all printer models.						

Supported paper types and weights

The printer engine supports 60–220 g/m² (16–58 lb) paper weights.

Note: Labels, transparencies, envelopes, and card stock always print at reduced speed.

Paper type	Standard 550-sheet tray (Tray 1)	Optional 550-sheet tray	Optional 2,000-sheet tray	Multipurpose tray	Optional 550-sheet specialty media drawer
Paper	✓	✓	✓	✓	✓
Card stock	✓	✓	X	✓	✓
Transparencies*	✓	✓	X	✓	✓
Labels	✓	✓	X	✓	✓
Glossy paper	✓	✓	X	✓	✓
Envelopes	X	X	X	✓	✓
* Do not use inkjet or 3M CG3710 transparencies.					

Printing

This chapter covers printing, printer reports, and job cancelation. The selection and handling of paper and specialty media can affect how reliably documents print. For more information, see "Avoiding jams" and "Storing paper."

Printing a document

Printing a document

- 1** Load paper into a tray or drawer.
- 2** From the Paper menu, set the Paper Type and Paper Size to the type and size of paper you have loaded.
- 3** Do one of the following:

For Windows users

- a** With a document open, click **File → Print**.
- b** Click **Properties, Preferences, Options, or Setup**.
- c** From the Form Source list box, select the source containing the paper you have loaded.
- d** From the Form Type list box, select the type of paper you have loaded.
- e** From the Form Size list box, select the size of paper you have loaded.
- f** Click **OK**, and then click **Print**.

For Macintosh users

In Mac OS X:

- a** Customize the settings as needed in the Page Setup dialog:
 - 1** With a document open, choose **File > Page Setup**.
 - 2** From the Paper Size pop-up menu, choose a paper size that matches the size of the loaded paper, or create a custom size.
 - 3** Click **OK**.
- b** Customize the settings as needed in the Print dialog:
 - 1** With a document open, click **File > Print**.
If necessary, click the disclosure triangle to see more options.
 - 2** From the print options or Copies & Pages pop-up menu, choose **Printer Features**.
 - 3** From the Feature Sets pop-up menu, choose **Paper**.
 - 4** From the Paper type pop-up menu, choose a paper type.
 - 5** Click **Print**.

In Mac OS 9:

- a** Customize the settings as needed in the Page Setup dialog:
 - 1** With a document open, choose **File > Page Setup**.
 - 2** From the Paper pop-up menu, choose a paper size or create a custom size to match the loaded paper.
 - 3** Click **OK**.

- b** Customize the settings as needed in the Print dialog:
 - 1** With a document open, choose **File > Print**.
 - 2** Select a Paper Source option, and then choose the tray loaded with the appropriate paper.
 - 3** Click **Print**.

Printing specialty documents

Printing on letterhead

- 1** Load letterhead into a tray or drawer.
- 2** From the printer control panel, set the Paper Type to Letterhead. See “Setting the paper size and type” on page 50 for more information.
- 3** Do one of the following:

For Windows users

- a** With a document open, click **File → Print**.
- b** Click **Properties, Preferences, Options, or Setup**.
- c** From the Form Source list box, select the source containing the letterhead.
- d** From the Form Type list box, select **Letterhead**.
- e** From the Form Size list box, select the letterhead size.
- f** Click **OK**, and then click **Print**.

For Macintosh users

- a** Customize the settings as needed in the Page Setup dialog.
 - 1** With a document open, choose **File → Page Setup**.
 - 2** From the “Format for” pop-up menu, choose the printer that you want to use.
 - 3** From the Paper Size pop-up menu, choose a paper size that matches the size of the letterhead paper, then create a custom size.
- b** Customize the settings as needed in the Print dialog.
 - 1** With a document open, click **File → Print**.
 - 2** From the Printer pop-up menu, choose the printer that you want to use.
 - 3** From the third pop-up menu from the top, choose **Quality & Media**.
 - 4** From the Paper type pop-up menu, choose a paper type.
 - 5** From the Print Quality menu, choose a print quality other than Quick Print.

Tips on using letterhead

Page orientation is important when printing on letterhead. Use the following table to determine which direction to load the letterhead:

Source or process	Print side	Paper orientation
<ul style="list-style-type: none">• Standard 550-sheet tray• Optional 550-sheet tray• Optional 2,000-sheet tray• Optional 550-sheet specialty media drawer	Preprinted letterhead design is placed faceup.	The top edge of the sheet with the logo is placed at the front of the tray.
Duplex (two-sided) printing from trays	Preprinted letterhead design is placed facedown.	The top edge of the sheet with the logo is placed at the back of the tray.
Multipurpose tray (simplex printing)	Preprinted letterhead design is placed facedown.	The top edge of the sheet with the logo should enter the multipurpose tray first.
Multipurpose tray (duplex printing)	Preprinted letterhead design is placed faceup.	The top edge of the sheet with the logo should enter the multipurpose tray last.
Note: Check with the manufacturer or vendor to determine whether the chosen preprinted letterhead is acceptable for laser printers.		

Tips on using transparencies

Print samples on the transparencies being considered for use before buying large quantities.

When printing on transparencies:

- Feed transparencies from any tray or drawer, except the Optional 2,000-sheet tray.
- Use transparencies designed specifically for laser printers. Check with the manufacturer or vendor to ensure transparencies are able to withstand temperatures up to 170°C (338°F) without melting, discoloring, offsetting, or releasing hazardous emissions.
- To prevent print quality problems, avoid getting fingerprints on the transparencies.
- Before loading transparencies, fan the stack to prevent sheets from sticking together.

Tips on using envelopes

Print samples on the envelopes being considered for use before buying large quantities.

When printing on envelopes:

- Use envelopes designed specifically for laser printers. Check with the manufacturer or vendor to ensure the envelopes can withstand temperatures up to 190°C (374°F) without sealing, wrinkling, curling excessively, or releasing hazardous emissions.
- For the best performance, use envelopes made from 90 g/m² (24 lb bond) paper. Use up to 105 g/m² (28 lb bond) weight for envelopes as long as the cotton content is 25% or less. All-cotton envelopes must not exceed 90 g/m² (24 lb bond) weight.
- Use only new envelopes.
- To optimize performance and minimize jams, do not use envelopes that:
 - Have excessive curl or twist
 - Are stuck together or damaged in any way
 - Have windows, holes, perforations, cutouts, or embossing

- Have metal clasps, string ties, or folding bars
- Have an interlocking design
- Have postage stamps attached
- Have any exposed adhesive when the flap is in the sealed or closed position
- Have bent corners
- Have rough, cockle, or laid finishes
- Adjust the width guides to fit the width of the envelopes.

Note: A combination of high humidity (over 60%) and the high printing temperature may wrinkle or seal envelopes.

Tips on using card stock

Card stock is heavy, single-ply specialty media. Many of its variable characteristics, such as moisture content, thickness, and texture, can significantly impact print quality. Print samples on the card stock being considered for use before buying large quantities.

When printing on card stock:

- Make sure the Paper Type is Card Stock.
- Select the appropriate Paper Texture setting.
- Be aware that preprinting, perforation, and creasing may significantly affect the print quality and cause jams or other paper-handling problems.
- Check with the manufacturer or vendor to ensure the card stock can withstand temperatures up to 190°C (374°F) without releasing hazardous emissions.
- Do not use preprinted card stock manufactured with chemicals that may contaminate the printer. Preprinting introduces semi-liquid and volatile components into the printer.
- Use grain short card stock when possible.

Printing confidential and other held jobs

Holding jobs in the printer

When sending a job to the printer, you can specify in the Print Properties that you want the printer to hold the job in memory until you start the job from the printer control panel. All print jobs that can be initiated by the user at the printer are called *held jobs*.

Note: Confidential, Verify, Reserve, and Repeat print jobs may be deleted if the printer requires extra memory to process additional held jobs.















Job type	Description
Confidential	When you send a Confidential print job to the printer, you must create a PIN in Print Properties. The PIN must be four digits using the numbers 0–9. The job is held in printer memory until you enter the PIN from the printer control panel and choose to print or delete the job.
Verify	When you send a Verify print job, the printer prints one copy and holds the remaining copies in printer memory. Verify lets you examine the first copy to see if it is satisfactory before printing the remaining copies. Once all copies are printed, the job is automatically deleted from printer memory.

Job type	Description
Reserve	When you send a Reserve print job, the printer does not print the job immediately. It stores the job in memory so you can print the job later. The job is held in memory until you delete it from the Held Jobs menu.
Repeat	When you send a Repeat print job, the printer prints all requested copies of the job <i>and</i> stores the job in memory so you can print additional copies later. You can print additional copies as long as the job remains stored in memory.

Printing confidential and other held jobs

Confidential and Verify print jobs are automatically deleted from memory after they print. Repeat and Reserve jobs continue to be held in the printer until you choose to delete them.

For Windows Users

- 1 With a document open, click **File → Print**.
- 2 Click **Properties, Preferences, Options, or Setup**.
- 3 Click **Other Options**, and then click **Print and Hold**.
- 4 Select your job type (Confidential, Reserve, Repeat, or Verify), and then assign a user name. For a confidential job, also enter a four-digit PIN.
- 5 Click **OK** or **Print**, and then go to the printer to release the job.
- 6 From the printer control panel, press the down arrow button until  **Held jobs** appears, and then press .
- 7 Press the down arrow button until  appears next to your user name, and then press .
- 8 Press the down arrow button until  appears next to the job type or job name, and then press .
If you selected a job name, proceed to step 11 on page 68.
- 9 After selecting your job type, use the keypad to enter your PIN.
If you enter an invalid PIN, the Invalid PIN screen appears.
 - To re-enter the PIN, make sure  **Try again** appears, and then press .
 - To cancel the PIN, press the down arrow button until  **Cancel** appears, and then press .
- 10 Press the down arrow button until  appears next to the job you want to print, and then press .
- 11 Press the down arrow button until  appears next to the number of copies you want to print, and then press .

Note: Use the keypad to enter a number if necessary.

For Macintosh users

- 1 With a document open, choose **File > Print**.
If necessary, click the disclosure triangle to see more options.
- 2 From the print options, Copies & Pages, or General pop-up menu, choose **Job Routing**.
- 3 Select your job type (Confidential, Reserve, Repeat, or Verify), and then assign a user name. For a confidential job, also enter a four-digit PIN.

- 4 Click **Print**, and then go to the printer to release the job.
- 5 From the printer control panel, press the down arrow button until ✓ **Held jobs** appears, and then press ✓.
- 6 Press the down arrow button until ✓ appears next to your user name, and then press ✓.
- 7 Press the down arrow button until ✓ appears next to the job type or job name, and then press ✓.
If you selected a job name, proceed to step 10 on page 69.
- 8 After selecting your job type, use the keypad to enter your PIN.
If you enter an invalid PIN, the Invalid PIN screen appears.
 - To re-enter the PIN, make sure ✓ **Try again** appears, and then press ✓.
 - To cancel the PIN, press the down arrow button until ✓ **Cancel** appears, and then press ✓.
- 9 Press the down arrow button until ✓ appears next to the job you want to print, and then press ✓.
- 10 Press the down arrow button until ✓ appears next to the number of copies you want to print, and then press ✓.

Note: Use the keypad to enter a number if necessary.

Printing from a flash drive

A flash drive port is located on the printer control panel. Insert a flash drive to print supported file types. Supported file types include: .pdf, .gif, .jpeg, .jpg, .bmp, .png, .tiff, .tif, .pcx, .xps, and .dcx.


Many flash drives are tested and approved for use with the printer.

Notes:

- High-speed flash drives must support the full-speed USB standard. Flash drives supporting only USB low-speed capabilities are not supported.
- Flash drives must support the FAT (*File Allocation Tables*) system. Flash drives formatted with NTFS (*New Technology File System*) or any other file system are not supported.
- Before printing an encrypted .pdf file, enter the file password from the printer control panel.
- You cannot print files for which you do not have printing permissions.

To print from a flash drive:

- 1 Make sure the printer is on and **Ready** appears.
- 2 Insert a flash drive into the flash drive port.

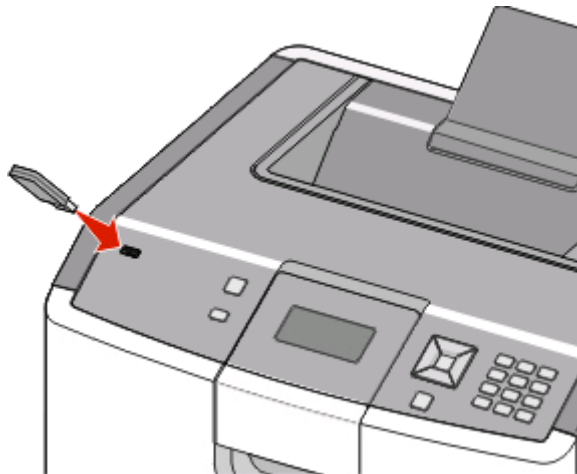

Notes:

- If you insert the flash drive when the printer requires attention, such as when a jam has occurred, then the printer ignores it.
 - If you insert the flash drive while the printer is printing other jobs, then **Printer Busy** appears. After the other jobs are processed, you may need to view the held jobs list to print documents from the flash drive.
- 3 Press the down arrow button until ✓ appears next to the document you want to print, and then press ✓.
Note: Folders found on the flash drive appear as folders. File names are appended by the extension type (for example, .jpg).
 - 4 Press ✓ to print one copy, or enter the number of copies using the keypad, and then press ✓ to initiate the print job.

If you leave the flash drive in the printer after leaving the initial USB menu screen, you can still print .pdf's from the flash drive as held jobs.


Printing photos from a PictBridge-enabled digital camera

You can connect a PictBridge-enabled digital camera to the printer, and use the buttons on the camera to select and print photos.

- 1 Insert one end of the USB cable into the camera.

Note: Use only the USB cable that came with your camera.

- 2 Insert the other end of the USB cable into the USB port on the front of the printer.

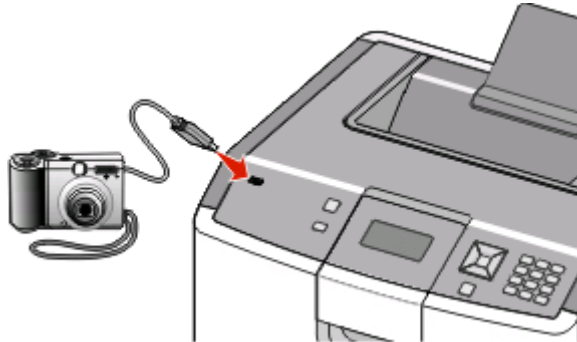

Notes:

- Make sure the PictBridge-enabled digital camera is set to the correct USB mode. See the camera documentation for more information.
- If the PictBridge connection is successful, then a confirmation message appears on the printer display.








- 3 Follow the instructions on the camera to select and print photos.

Note: If the printer is turned off while the camera is connected, then you must disconnect and then reconnect the camera.

Printing information pages

Printing a font sample list


 

 

To print samples of the fonts currently available for your printer:

- 1 Make sure the printer is on and **Ready** appears.
- 2 From the printer control panel, press .
- 3 Press the down arrow button until  **Reports** appears, and then press .
- 4 Press the down arrow button until  **Print Fonts** appears, and then press .
- 5 Press the down arrow button until  appears next to **PCL Fonts** or **PostScript Fonts**, and then press .

After the font sample list prints, **Ready** appears.

Printing a directory list




 

A directory list shows the resources stored in flash memory or on the hard disk.

- 1 Make sure the printer is on and **Ready** appears.
- 2 From the printer control panel, press .
- 3 Press the down arrow button until  **Reports** appears, and then press .
- 4 Press the down arrow button until  **Print Directory** appears, and then press .

After the directory list prints, **Ready** appears.

Printing the print quality test pages

Print the print quality test pages to isolate print quality problems.

 


- 1 Turn the printer off.
 - 2 Hold down  and the right arrow button while turning the printer on.
 - 3 Release the buttons when the clock appears, and wait for **CONFIG MENU** to appear.
 - 4 Press the down arrow button until  **Prt Quality Pgs** appears, and then press .
- The print quality test pages print.
- 5 Press the down arrow button until  **Exit Config Menu** appears, and then press .
- Resetting the Printer** appears briefly, followed by a clock, and then **Ready** appears.




Canceling a print job

There are several methods for canceling a print job. The following sections explain how to cancel a print job from the printer control panel, or from a computer depending on the operating system.

Canceling a print job from the printer control panel

If the job is formatting or already printing, and **Cancel a job** appears on the first line of the display:

- 1 Press the arrow buttons until  **Cancel** appears.
A list of jobs appears.
 - 2 Press the arrow buttons until  appears next to the job you want to cancel, and then press .
- Canceling <file name>** appears.

Note: Once a print job is sent, to easily cancel a job, press . The Stopped screen appears. Press the arrow buttons until  **Cancel a job** appears, and then press .

Canceling a print job from the Windows taskbar

When you send a job to print, a small printer icon appears in the right corner of the taskbar.

- 1 Double-click the printer icon.
A list of print jobs appears in the printer window.
- 2 Select a job to cancel.
- 3 From the keyboard, press **Delete**.

Canceling a print job from the Windows desktop

- 1 Minimize all programs to reveal the desktop.
- 2 Double-click the **My Computer** icon.
- 3 Double-click the **Printers** icon.
- 4 Double-click the printer icon.
- 5 Select the job to cancel.
- 6 From the keyboard, press **Delete**.

Canceling a print job from Mac OS 9

When you send a job to print, the printer icon for your selected printer appears on the desktop.

- 1 Double-click the printer icon.
A list of print jobs appears in the printer window.
- 2 Choose a job to cancel.
- 3 Click the trash icon.






Canceling a print job from Mac OS X



- 1 Choose **Applications → Utilities**, and then double-click **Print Center** or **Printer Setup Utility**.
- 2 Double-click the printer you are printing to.
- 3 From the printer window, select the job to cancel.
- 4 From the icon bar at the top of the window, click the **Delete** icon.

Printing in black and white

To print all text and graphics using only the black toner cartridge, set the printer to Black Only.

Note: The printer driver is capable of overriding this setting.

- 1 From the printer control panel, press .
- 2 Press the down arrow button until  **Settings** appears, and then press .
- 3 Press the down arrow button until  **Quality Menu** appears, and then press .

- 4 Press the down arrow button until ✓ **Print Mode** appears, and then press .
 - 5 Press the down arrow button until ✓ **Black Only** appears, and then press .
- Submitting selection** appears.

Using Max Speed and Max Yield

The Max Speed and Max Yield settings let you choose between a faster print speed or a higher toner yield. Max Yield is the factory default setting.


- **Max Speed**—Prints in color mode unless black only is selected by the driver. Prints in black only mode if the black only driver setting is selected.
- **Max Yield**—Switches from black to color mode based on the color content found on each page. Frequent color mode switching can result in slower printing if the content of pages is mixed.

To specify the setting:

- 1 Open a Web browser.
- 2 In the address bar, type the network printer or print server IP address, and then press **Enter**.
- 3 Click **Configuration**.
- 4 Click **Print Settings**.
- 5 Click **Setup Menu**.
- 6 From the Printer Usage list, select **Max Speed** or **Max Yield**.
- 7 Click **Submit**.

Clearing jams

By carefully selecting papers and specialty media and loading it properly, you should be able to avoid most jams. For more information, see “Avoiding jams” on page 75. If jams do occur, follow the steps outlined in this chapter.

To resolve the jam messages, you must clear the entire paper path, and press  to clear the message and resume printing. The printer prints a new copy of the page that jammed if Jam Recovery is set to On or Auto; however, the Auto setting does not guarantee the page will print.

Note: Jam recovery is set to Auto by default. The printer reprints jammed pages unless the memory required to hold the pages is needed for other printer tasks.

Avoiding jams

The following hints can help you avoid jams:

- Use only recommended paper or specialty media.
- Do not load too much paper. Make sure the stack height does not exceed the indicated maximum height.
- Do not load wrinkled, creased, damp, or curled paper.
- Flex, fan, and straighten paper before loading it.
- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same stack.
- Store the paper in an appropriate environment.
- Do not remove trays while the printer is printing. Wait for **Load tray <x>** or **Ready** to appear before removing a tray.
- Do not load the multipurpose tray while the printer is printing. Load the tray prior to printing, or wait for **Load Multipurpose tray with <x>** to appear.
- Push all trays in firmly after loading paper.
- Make sure the guides in the trays are properly positioned.
- Make sure all paper sizes and paper types are set correctly in the printer control panel menu.
- Make sure all printer cables are attached correctly. For more information, see the setup documentation.

Understanding jam messages

The following table lists the jam messages that can occur.

Message	See
200.yy Paper jam, check [area name]. Leave paper in bin.	"200 paper jams" on page 76 "200 or 201 paper jam" on page 77 "201 paper jam" on page 78
200.yy Paper jam, [x] pages jammed. Leave paper in bin.	
201.yy Paper jam, check [area name]. Leave paper in bin.	"200 paper jams" on page 76 "200 or 201 paper jam" on page 77 "201 paper jam" on page 78
201.yy Paper jam, [x] pages jammed. Leave paper in bin.	

Message	See
202.yy Paper jam, check [area name]. Leave paper in bin.	"202 paper jam" on page 79
202.yy Paper jam, [x] pages jammed. Leave paper in bin.	
203.yy Paper jam, check [area name]. Leave paper in bin.	"203 paper jam" on page 81
203.yy Paper jam, [x] pages jammed. Leave paper in bin.	
230.yy Paper jam, [area name]. Leave paper in bin.	"230 paper jam" on page 81
230.yy Paper jam, [x] pages jammed. Leave paper in bin.	
241.yy Paper jam, check [area name]. Leave paper in bin.	"240 paper jam" on page 82
241.yy Paper jam, [x] pages jammed. Leave paper in bin.	
24n.yy Paper jam, check [area name]. Leave paper in bin.	"240 paper jam" on page 82
24n.yy Paper jam, [x] pages jammed. Leave paper in bin.	
250.yy Paper jam, check [area name]. Leave paper in bin.	"250 paper jam" on page 84
250.yy Paper jam, [x] pages jammed. Leave paper in bin.	

200 paper jams

If paper jams behind the inner door, but not under the photoconductor units, **200 .xx Paper jam** appears.


Note: To avoid overexposing the photoconductor units, do not leave the front door open longer than 10 minutes.

- 1 Open the front door.



CAUTION—HOT SURFACE: The fuser and the inside of the printer near the fuser may be hot. Wait for the fuser to cool before clearing jams from this area.

- 2 Pull the jammed paper up and out to remove it from behind the toner cartridge area.

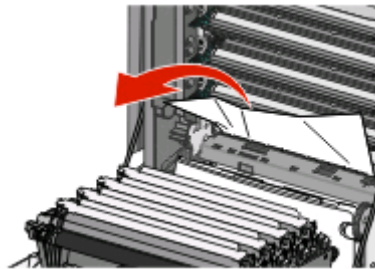

Note: Make sure all paper fragments are removed.

- 3 Close the front door.

- 4 Press


200 or 201 paper jam

If paper jams under the photoconductor units, 200.xx Paper jam or 201.xx Paper jam may appear.

- 1 Open the front door.


Note: To avoid overexposing the photoconductor units, do not leave the front door open longer than 10 minutes.

- 2 Pull the paper forward if it is lodged under the photoconductor units.

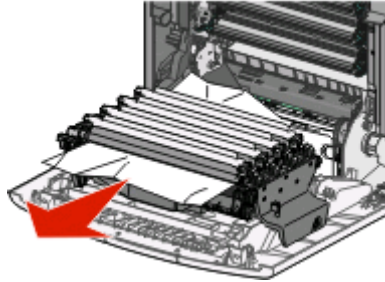

Note: You may need to remove the photoconductor units if the paper is lodged too tightly under them.

- 3 Remove each photoconductor unit, and place it on a flat surface.

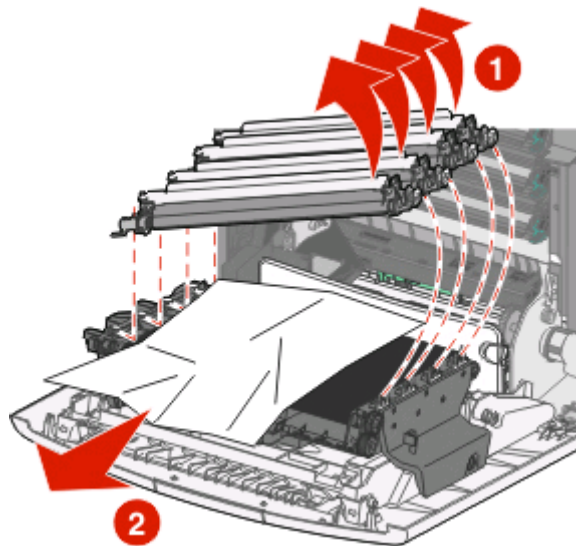

- 4 Remove the jammed paper, and then replace each photoconductor unit.
- 5 Close the front door.
- 6 Press ☒ from the printer control panel.

201 paper jam

If paper is jammed under the fuser or the top cover, **201.xx Paper jam** appears.




CAUTION—HOT SURFACE: The fuser and the inside of the printer near the fuser may be hot. Wait for the fuser to cool before clearing jams from this area.

- 1 Open the front door, and then open the top cover.


Warning—Potential Damage: To avoid overexposing the photoconductor units, do not leave the front door open longer than 10 minutes.

- 2 Determine where the jam is located:


- a If paper is visible under the fuser, grasp it on each side and pull it forward.

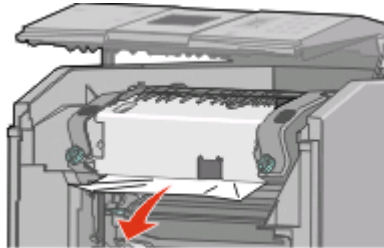


- b If paper is not visible, turn the screws on the fuser unit to the left and remove the unit.

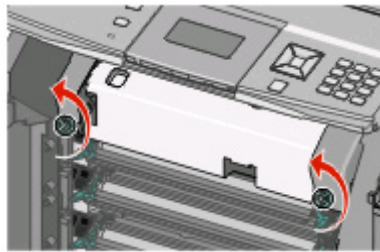

- c Remove the jammed paper.

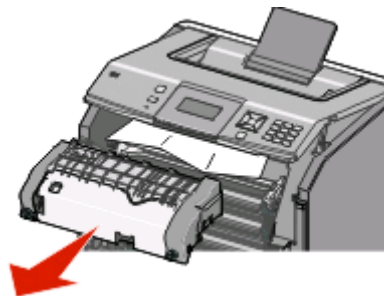

- d Replace the fuser unit, and then turn the screws to the right to fasten it securely.

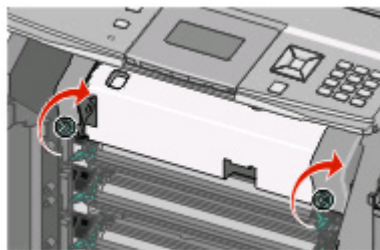

Clearing jams

3 Close the top cover, and then close the front door.

4 Press .

202 paper jam

If paper is jammed both under the fuser unit and in the slot behind the fuser unit, then **202 .xx Paper jam** appears.


If the paper is visible in the standard exit bin, then grasp the paper and pull it away from the bin.




Paper jam under the fuser unit

Warning—Potential Damage: To avoid overexposing the photoconductor units, do not leave the front door open longer than 10 minutes.

1 Open the front door, and then open the top cover.

 **CAUTION—HOT SURFACE:** The fuser and the inside of the printer near the fuser may be hot. Wait for the fuser to cool before clearing jams from this area.

2 Grasp the paper on each side and pull it forward.

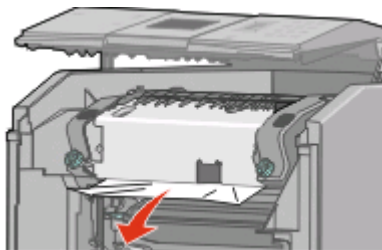

3 Close the top cover, and then close the front door.

4 Press .

Paper jam behind the fuser unit


Warning—Potential Damage: To avoid overexposing the photoconductor units, do not leave the front door open longer than 10 minutes.

- 1 Open the front door, and then open the top cover.




CAUTION—HOT SURFACE: The fuser and the inside of the printer near the fuser may be hot. Wait for the fuser to cool before clearing jams from this area.

- 2 If the paper is jammed behind the fuser, then you will need to remove the fuser unit.
 - a Turn the screws on the fuser unit to the left.

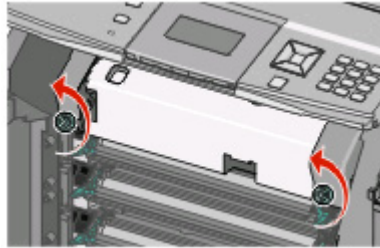


- b Lift the unit and pull forward to remove it.

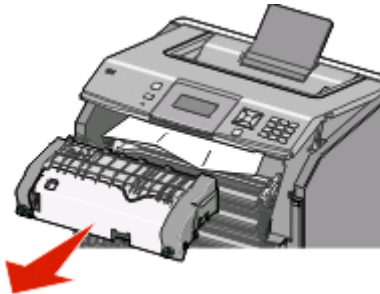


- c Place the fuser unit on a flat surface.

- 3 Pull the paper gently out of the printer or up toward the standard exit bin to remove it.
- 4 Reinstall the fuser unit.

- a Align the fuser unit, and place it back into the printer.

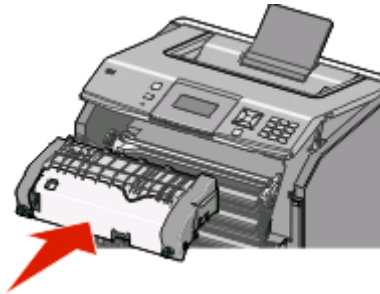

- b Turn the screws to the right to fasten the fuser unit securely.

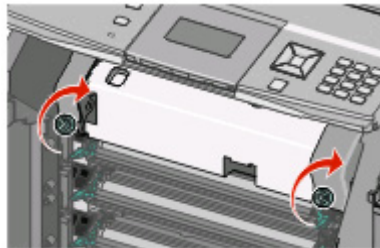

5 Close the top cover, and then close the front door.

6 Press .

203 paper jam


If paper is jammed under the rollers near the fuser, or in the standard exit bin 203.xx Paper jam appears.

1 Grasp paper that is visible in the standard exit bin and pull it away from the bin.



2 Open the front door, and then open the top cover.

3 Grasp the paper on each side, and pull it out gently.

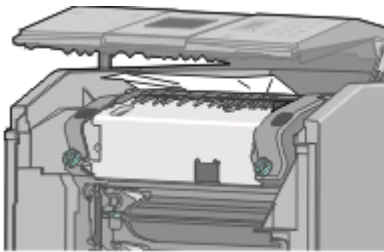

4 Close the top cover, and then close the front door.

5 Press .


230 paper jam

If paper is jammed between the front door and Tray 1, 230.xx Paper jam appears.


1 Remove Tray 1.


2 Open the front door.

- 3 Pull straight up to remove the jammed paper.

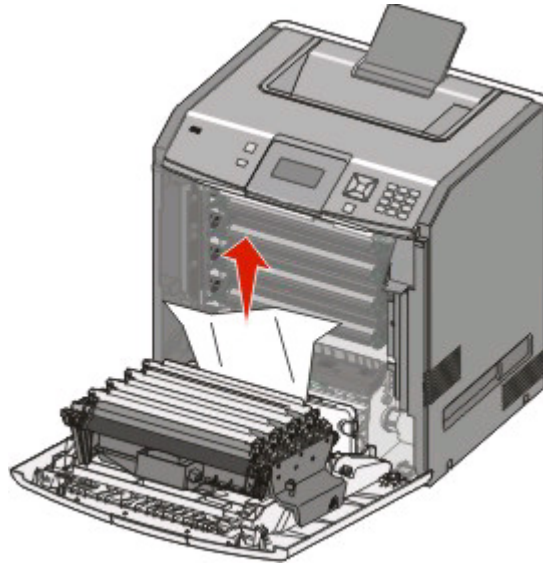

- 4 Pull out on the release tabs to allow the front door to split.

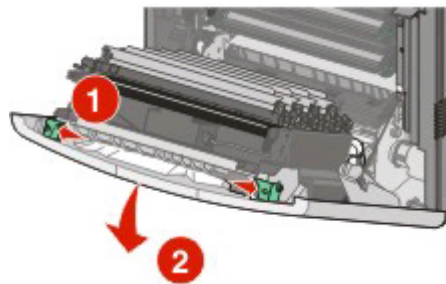


- 5 Pull straight out to remove any jammed paper.
- 6 Close the front door.
- 7 Reinsert Tray 1.
- 8 Press .

240 paper jam

If paper is jammed in Tray 1, **241.xx Paper jam** appears. If paper is jammed in any of the optional trays, **24n.xx Paper jam** appears.

Paper jammed in Tray 1

- 1 Open Tray 1, and then pull the jammed pages straight up and out.

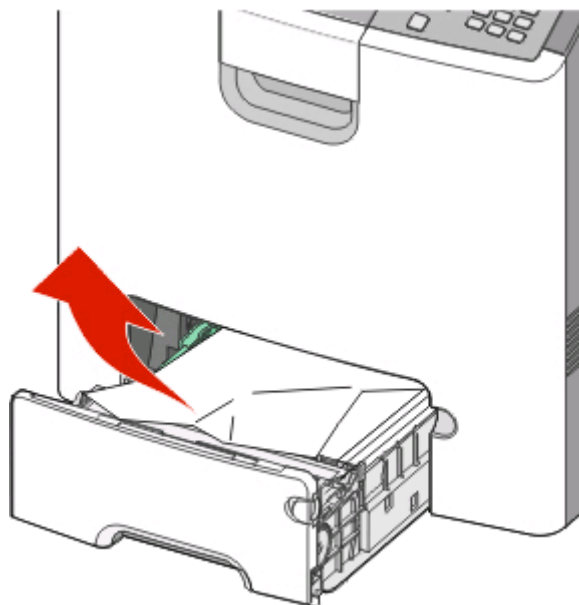


- 2 Close Tray 1.

- 3 Press .

Paper jammed in front of Tray 1

- 1 Open Tray 1, and then pull the jammed pages up and out.

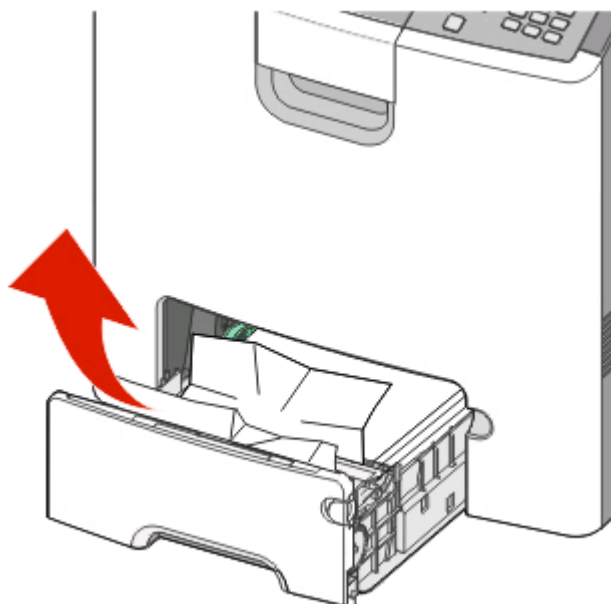


- 2 Close Tray 1.

- 3 Press .

Paper jammed in one of the optional trays

If the jammed pages are located in one of the optional trays, follow the appropriate steps below to remove the pages.

- 1 Open the specified optional tray, and pull the jammed pages out as illustrated.

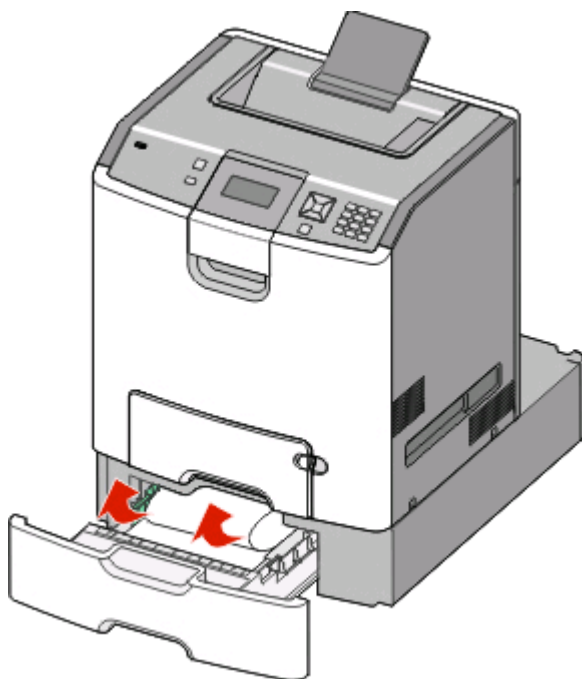


- 2 Close the specified optional tray.

- 3 Press .

250 paper jam

If paper is jammed in the multipurpose tray, 250.xx Paper jam appears.

- 1 Press the paper release lever, and then remove the jammed pages from the multipurpose tray.

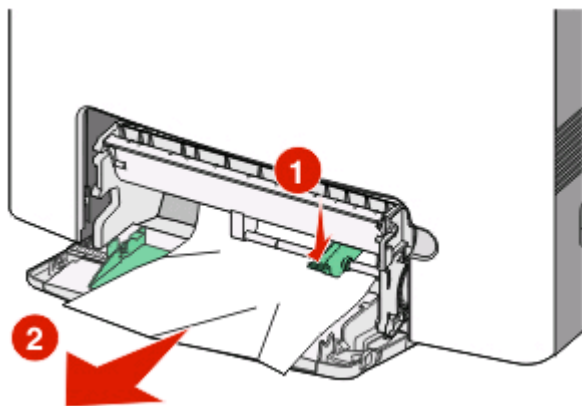

- 2 Load new paper into the multipurpose tray.

- 3 Press .

Understanding printer menus

Menus list

A number of menus are available to make it easy for you to change printer settings. This diagram shows the items available under each menu.

Supplies	Paper Menu	Reports	Settings
Replace Supply	Default Source	Menu Settings Page	General Settings
Cyan Cartridge	Paper Size/Type	Device Statistics	Setup Menu
Magenta Cartridge	Configure MP	Network Setup Page	Finishing Menu
Yellow Cartridge	Substitute Size	Network <x> Setup Page	Quality Menu
Black Cartridge	Paper Texture	Wireless Setup Page ¹	Utilities Menu
Cyan Photoconductor	Paper Weight	Profiles List	XPS Menu
Magenta Photoconductor	Paper Loading	Netware Setup Page	PDF Menu
Yellow Photoconductor	Custom Types	Print Fonts	PostScript Menu
Black Photoconductor	Universal Setup	Print Directory	PCL Emul Menu
Waste Toner Box		Asset Report	HTML Menu
Fuser			Image Menu
Transfer Module			PictBridge Menu
			Flash Drive Menu
Security	Network/Ports	Help	
Miscellaneous Security Setting	Active NIC	Print All	
Confidential Print	Standard Network ²	Color Quality	
Disk Wiping	Standard USB	Print Quality	
Security Audit Log	Parallel <x>	Printing Guide	
Set Date/Time	Serial <x>	Media Guide	
	SMTP Setup	Print Defects	
		Menu Map	
		Information Guide	
		Connection Guide	
		Moving Guide	

¹Only appears on wireless models.

²Depending on the printer setup, this menu item appears as Standard Network, Wireless Network, or Network <x>.

Paper menu

Default Source menu

Menu item	Description
Default Source Tray <x> Multipurpose tray	Sets a default paper source for all print jobs Notes: <ul style="list-style-type: none">• From the Paper menu, Configure Multipurpose tray must be set to Cassette for Multipurpose tray to appear as a menu setting.• Tray 1 (standard tray) is the factory default setting.• If the same size and type of paper are in two trays and the Paper Size and Paper Type settings match, then the trays are automatically linked. When one tray is empty, the job prints using the linked tray.

Paper Size/Type menu

Menu item	Description
Tray <x> Size A4 A5 A6 Banner JIS B5 Legal Letter Executive Oficio (México) Folio Statement Universal	Specifies the paper size loaded in each tray Notes: <ul style="list-style-type: none">• Letter is the US factory default setting. A4 is the international factory default setting.• For trays with automatic size sensing, only the size detected by the hardware appears.• If the same size and type of paper are in two trays and the Paper Size and Paper Type settings match, then the trays are automatically linked. When one tray is empty, the job prints using the linked tray.
Note: Only installed trays are listed in this menu.	

Menu item	Description
Tray <x> Type Plain Paper Card Stock Transparency Glossy Heavy Glossy Bond Letterhead Preprinted Colored Paper Light Paper Heavy Paper Rough Paper Recycled Custom Type <x>	Specifies the type of paper loaded in each tray Notes: <ul style="list-style-type: none"> • Plain Paper is the factory default setting for Tray 1. Custom Type <x> is the factory default setting for all other trays. • If available, a user-defined name will appear instead of Custom Type <x>. • Use this menu item to configure automatic tray linking.
Multipurpose Tray Size A4 A5 A6 Executive Folio JIS B5 Legal Letter Statement Universal 7 3/4 Envelope 9 Envelope 10 Envelope DL Envelope C5 Envelope B5 Envelope Other Envelope	Specifies the paper size loaded in the multipurpose tray Notes: <ul style="list-style-type: none"> • From the Paper menu, Configure Multipurpose Tray must be set to Cassette for Multipurpose Tray to appear as a menu setting. • Letter is the US factory default setting. A4 is the international factory default setting.
Note: Only installed trays are listed in this menu.	

Menu item	Description
Multipurpose Tray Type Plain Paper Card Stock Transparency Glossy Heavy Glossy Bond Envelope Rough Envelope Letterhead Preprinted Colored Paper Light Paper Heavy Paper Rough Paper Recycled Custom Type <x>	Specifies the type of paper loaded in the multipurpose tray Notes: <ul style="list-style-type: none"> From the Paper menu, Configure Multipurpose Tray must be set to Cassette for Multipurpose Tray to appear as a menu setting. Plain paper is the factory default setting.
Manual Paper Size A4 A5 JIS B5 Letter Legal Executive Oficio (México) Folio Statement Universal	Specifies the size of the paper being manually loaded
Manual Paper Type Paper Card Stock Transparencies Glossy paper Heavy Glossy Light Paper Heavy Paper Rough Paper Recycled	Specifies the type of paper being manually loaded
Note: Only installed trays are listed in this menu.	

Menu item	Description
Manual Envelope Size 7 3/4 Envelope 9 Envelope 10 Envelope C5 Envelope B5 Envelope DL Envelope Other Envelope	Specifies the size of the envelope being manually loaded
Manual Envelope Type Envelope Rough Envelope Custom Type <x>	Specifies the type of envelope being manually loaded
Note: Only installed trays are listed in this menu.	

Configure MP menu

Menu item	Description
Configure MP Cassette Manual	Determines when the printer selects paper from the multipurpose feeder Notes: <ul style="list-style-type: none"> • Cassette is the factory default setting. • The Cassette setting configures the multipurpose feeder as an automatic paper source. • When Manual is selected, the multipurpose feeder can be used only for manual feed print jobs.

Substitute Size menu

Menu item	Description
Substitute Size Off Statement/A5 Letter/A4 All Listed	Substitutes a specified paper size if the requested paper size is not available Notes: <ul style="list-style-type: none"> • All Listed is the factory default setting. All available substitutions are allowed. • The Off setting indicates no size substitutions are allowed. • Setting a substitution lets the job print without a Change Paper message appearing.

Paper Texture menu

Menu item	Description
Plain Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.
Card Stock Texture Smooth Normal Rough	Specifies the relative texture of the card stock loaded in a specific tray Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. • Settings appear only if card stock is supported.
Transparency Texture Smooth Normal Rough	Specifies the relative texture of the transparencies loaded in a specific tray Note: Normal is the factory default setting.
Recycled Texture Smooth Normal Rough	Specifies the relative texture of the recycled paper loaded in a specific tray
Glossy Texture Smooth Normal Rough	Specifies the relative texture of the Glossy paper loaded in a specific tray Note: Normal is the factory default setting.
Bond Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Rough is the factory default setting.
Envelope Texture Smooth Normal Rough	Specifies the relative texture of the envelopes loaded in a specific tray Note: Normal is the factory default setting.
Rough Envelope Texture Smooth Normal Rough	Specifies the relative texture of the envelopes loaded in a specific tray Note: Rough is the factory default setting.
Letterhead Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.
Preprinted Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.

Menu item	Description
Colored Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.
Light Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.
Heavy Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Normal is the factory default setting.
Rough Texture Smooth Normal Rough	Specifies the relative texture of the paper loaded in a specific tray Note: Rough is the factory default setting.
Custom <x> Texture Smooth Normal Rough	Specifies the relative texture of the custom paper loaded in a specific tray Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. • Settings appear only if the custom type is supported.

Paper Weight menu

Menu item	Description
Plain Weight Light Normal Heavy	Specifies the relative weight of the paper loaded in a specific tray Note: Normal is the factory default setting.
Card Stock Weight Light Normal Heavy	Specifies the relative weight of the card stock loaded in a specific tray Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. • Settings appear only if card stock is supported.
Transparency Weight Light Normal Heavy	Specifies the relative weight of the transparencies loaded in a specific tray Note: Normal is the factory default setting.
Recycled Weight Light Normal Heavy	Specifies the relative weight of the recycled paper loaded in a specific tray

Menu item	Description
Glossy Weight Light Normal Heavy	Specifies the relative weight of the Glossy paper loaded in a specific tray Note: Normal is the factory default setting.
Bond Weight Light Normal Heavy	Specifies the relative weight of the paper loaded in a specific tray Note: Rough is the factory default setting.
Envelope Weight Light Normal Heavy	Specifies the relative weight of the envelopes loaded in a specific tray Note: Normal is the factory default setting.
Letterhead Weight Light Normal Heavy	Specifies the relative weight of the paper loaded in a specific tray Note: Normal is the factory default setting.
Preprinted Weight Light Normal Heavy	Specifies the relative weight of the paper loaded in a specific tray Note: Normal is the factory default setting.
Colored Weight Light Normal Heavy	Specifies the relative weight of the paper loaded in a specific tray Note: Normal is the factory default setting.
Custom <x> Weight Light Normal Heavy	Specifies the relative weight of the custom paper loaded in a specific tray Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. • Settings appear only if the custom type is supported.

Paper Loading menu

Menu item	Description
Recycled Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Recycled as the paper type Note: Off is the factory default setting.
Notes: <ul style="list-style-type: none"> • Duplex sets the printer default to 2-sided printing for every print job unless 1-sided printing is selected from Print Properties. • If Duplex is selected, then all print jobs are sent through the duplex unit including 1-sided jobs. 	

Menu item	Description
Glossy Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Glossy as the paper type Note: Off is the factory default setting.
Letterhead Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Letterhead as the paper type Note: Off is the factory default setting.
Preprinted Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Preprinted as the paper type Note: Off is the factory default setting.
Colored Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Colored as the paper type Note: Off is the factory default setting.
Custom <x> Loading Duplex Off	Determines whether 2-sided printing occurs for all jobs that specify Custom <x> as the paper type Notes: <ul style="list-style-type: none"> Off is the factory default setting. Custom <x> Loading is available only if the custom type is supported.
Notes: <ul style="list-style-type: none"> Duplex sets the printer default to 2-sided printing for every print job unless 1-sided printing is selected from Print Properties. If Duplex is selected, then all print jobs are sent through the duplex unit including 1-sided jobs. 	

Custom Types menu

Menu item	Description
Custom Type <x> Paper Card Stock Transparency Envelope	Associates a paper or specialty media type with a factory default Custom Type <x> name or a user-defined Custom Name created from the Embedded Web Server or MarkVision™ Professional Notes: <ul style="list-style-type: none"> Paper is the factory default setting. The custom media type must be supported by the selected tray or multipurpose tray to print from that source.
Recycled Paper Card Stock Transparency Envelope	Specifies a paper type when the Recycled setting is selected in other menus Notes: <ul style="list-style-type: none"> Paper is the factory default setting. The custom media type must be supported by the selected tray or multipurpose tray to print from that source.

Universal Setup menu

These menu items are used to specify the height and width of the Universal Paper Size. The Universal Paper Size is a user-defined paper size setting. It is listed with the other paper size settings and includes similar options, such as support for duplex printing and printing multiple pages on one sheet.

Menu item	Description
Units of Measure Inches Millimeters	Identifies the units of measure Notes: <ul style="list-style-type: none">• Inches is the US factory default setting.• Millimeters is the international factory default setting.
Portrait Width 3–8.5 inches 76–216 mm	Sets the portrait width Notes: <ul style="list-style-type: none">• If the width exceeds the maximum, then the printer uses the maximum width allowed.• 8.5 inches is the US factory default setting. Inches can be increased in 0.01-inch increments.• 216 mm is the international factory default setting. Millimeters can be increased in 1-mm increments.
Portrait Height 3–14.17 inches 76–360 mm	Sets the portrait height Notes: <ul style="list-style-type: none">• If the height exceeds the maximum, then the printer uses the maximum height allowed.• 14 inches is the US factory default setting. Inches can be increased in 0.01-inch increments.• 356 mm is the international factory default setting. Millimeters can be increased in 1-mm increments.
Feed Direction Short Edge Long Edge	Specifies the feed direction Notes: <ul style="list-style-type: none">• Short Edge is the factory default setting.• Long Edge appears only if the longest edge is shorter than the maximum width supported in the tray.

Reports menu

Reports menu

Menu item	Description
Menu Settings Page	<p>Prints a report containing information about paper loaded into trays, installed memory, the total page count, alarms, timeouts, the printer control panel language, the TCP/IP address, the status of supplies, the status of the network connection, and other information</p> <p>Note: The page prints when this item is selected.</p>
Device Statistics	<p>Prints a report containing printer statistics such as supply information and details about printed pages</p> <p>Note: The page prints when this item is selected.</p>
Network Setup Page	<p>Prints a report containing information about the network printer settings, such as the TCP/IP address information</p> <p>Notes:</p> <ul style="list-style-type: none">• This menu item appears only for network printers or printers connected to print servers.• The page prints when this item is selected.
Network <x> Setup Page	<p>Prints a report containing information about the network printer settings, such as the TCP/IP address information</p> <p>Notes:</p> <ul style="list-style-type: none">• This selection is available when more than one network option is installed.• This menu item appears only for network printers or printers connected to print servers.• The page prints when this item is selected.
Wireless Setup Page	<p>Prints a report containing information about the wireless network settings, such as TCP/IP address information</p> <p>Notes:</p> <ul style="list-style-type: none">• This menu item appears only for printers with an optional wireless print server installed.• The page prints when this item is selected.
Profiles List	<p>Prints a list of profiles stored in the printer</p> <p>Note: The page prints when this item is selected.</p>
NetWare Setup Page	<p>Prints a report containing NetWare-specific information about the network settings</p> <p>Notes:</p> <ul style="list-style-type: none">• This menu item appears only for printers with an internal print server installed.• The page prints when this item is selected.

Menu item	Description
Print Fonts PCL Fonts PostScript Fonts	Prints a report of all the fonts available for the printer language currently set in the printer Note: A separate list is available for PCL and PostScript emulations.
Print Directory	Prints a list of all the resources stored on an optional flash memory card or printer hard disk Notes: <ul style="list-style-type: none"> • Job Buffer Size must be set to 100%. • The optional flash memory or printer hard disk must be installed correctly and working properly. • The page prints when this item is selected.
Asset Report	Prints a report containing each piece of printer asset information, such as the serial number and model name. Note: The page prints when this item is selected.

Network/Ports menu

Active NIC menu

Menu item	Description
Active NIC Auto <list of available network cards>	Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. • This menu item appears only if an optional network card is installed.

Standard Network or Network <x> menus

Note: Only active ports appear in this menu; all inactive ports are omitted.

Menu item	Description
PCL SmartSwitch On Off	Sets the printer to automatically switch to PCL emulation when a print job requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> • On is the factory default setting. • When the Off setting is used, the printer does not examine incoming data. • When the Off setting is used, the printer uses PostScript emulation if PS SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PS SmartSwitch is set to Off.

Menu item	Description
PS SmartSwitch On Off	Sets the printer to automatically switch to PS emulation when a print job requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PCL emulation if PCL SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PCL SmartSwitch is set to Off.
NPA Mode Off Auto	Sets the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol Notes: <ul style="list-style-type: none"> Auto is the factory default setting. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Network Buffer Auto 3K to <maximum size allowed>	Sets the size of the network input buffer Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The value can be changed in 1-K increments. The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To increase the maximum size range for the Network Buffer, disable or reduce the size of the parallel, serial, and USB buffers. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Job Buffering Off On Auto	Temporarily stores jobs on the printer hard disk before printing. This menu only appears if a formatted disk is installed. Notes: <ul style="list-style-type: none"> Off is the factory default setting. The On value buffers jobs on the printer hard disk. This menu selection appears only when a formatted disk is installed and is not defective. The Auto setting buffers print jobs only if the printer is busy processing data from another input port. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Mac Binary PS On Off Auto	Sets the printer to process Macintosh binary PostScript print jobs Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The Off setting filters print jobs using the standard protocol. The On setting processes raw binary PostScript print jobs.

Menu item	Description
Std Network Setup Reports or Network Reports Network Card TCP/IP IPv6 AppleTalk NetWare LexLink Net <x> Setup Reports or Network Reports Network Card TCP/IP IPv6 Wireless AppleTalk NetWare LexLink	For descriptions and settings of the network setup menus, see the following: <ul style="list-style-type: none"> • “Network Reports menu” on page 98 • “Network Card menu” on page 98 • “TCP/IP menu” on page 99 • “IPv6 menu” on page 100 • “Wireless menu” on page 100 • “AppleTalk menu” on page 101 • “NetWare menu” on page 101 • “LexLink menu” on page 102 Note: The Wireless menu appears only when the printer is connected to a wireless network.

Network Reports menu

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → Reports or Network Reports

Menu item	Description
Print Setup Page Print NetWare Setup Page	Prints a report containing information about the current network setup Notes: <ul style="list-style-type: none"> • The Setup Page contains information about the network printer settings, such as the TCP/IP address. • The NetWare Setup Page menu item appears only on models that support NetWare and shows information about NetWare settings.

Network Card menu

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → Network Card

Menu item	Description
View Card Status Connected Disconnected	Lets you view the connection status of the Network Card
View Card Speed	Lets you view the speed of a currently active network card

Menu item	Description
Network Address UAA LAA	Lets you view the network addresses
Job Timeout 0-225 seconds	Sets the amount of time in seconds that a network print job can take before it is canceled Notes: <ul style="list-style-type: none"> 90 seconds is the factory default setting. A setting value of 0 disables the timeout. If a value of 1–9 is selected, then the setting is saved as 10.
Banner Page Off On	Allows the printer to print a banner page. Note: Off is the factory default setting.

TCP/IP menu

Use the following menu items to view or set the TCP/IP information.

Note: This menu is available only for network models or printers attached to print servers.

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → TCP/IP

Menu item	Description
Activate On Off	Activates TCP/IP Note: On is the factory default setting.
View Hostname	Lets you view the current TCP/IP hostname Note: This can be changed only from the Embedded Web Server.
IP Address	Lets you view or change the current TCP/IP Address Note: Manually setting the IP address sets the Enable DHCP and Enable Auto IP settings to Off. It also sets Enable BOOTP and Enable RARP to Off on systems that support BOOTP and RARP.
Netmask	Lets you view or change the current TCP/IP Netmask
Gateway	Lets you view or change the current TCP/IP Gateway
Enable DHCP On Off	Specifies the DHCP address and parameter assignment setting
Enable RARP On Off	Specifies the RARP address assignment setting Note: On is the factory default setting.

Menu item	Description
Enable BOOTP On Off	Specifies the BOOTP address assignment setting Note: On is the factory default setting.
AutoIP Yes No	Specifies the Zero Configuration Networking setting Note: Yes is the factory default setting.
Enable FTP/TFTP Yes No	Enables the built-in FTP server, which allows you to send files to the printer using the File Transfer Protocol. Note: Yes is the factory default setting.
Enable HTTP Server Yes No	Enables the built-in web server (Embedded Web Server). When enabled, the printer can be monitored and managed remotely using a web browser. Note: Yes is the factory default setting.
WINS Server Address	Lets you view or change the current WINS Server Address
DNS Server Address	Lets you view or change the current DNS Server Address

IPv6 menu

Use the following menu items to view or set the Internet Protocol version 6 (IPv6) information.

Note: This menu is available only for network models or printers attached to print servers.

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → IPv6

Menu item	Description
Enable IPv6 On Off	Enables IPv6 in the printer Note: On is the factory default setting.
Auto Configuration On Off	Specifies whether the network adapter accepts the automatic IPv6 address configuration entries provided by a router Note: On is the factory default setting.
View Hostname View Address View Router Address	Lets you view the current setting Note: These settings can be changed only from the Embedded Web Server.
Enable DHCPv6 On Off	Enables DHCPv6 in the printer Note: On is the factory default setting.

Wireless menu

Use the following menu items to view or configure the wireless internal print server settings.

Note: This menu is available only for models connected to a wireless network.

This menu is available from the Network/Ports menu:

Network/Ports → Network <x> → Net <x> Setup → Wireless

Menu item	Description
Network Mode Infrastructure Ad hoc	Specifies the network mode Notes: <ul style="list-style-type: none">Infrastructure mode lets the printer access a network using an access point.Ad hoc is the factory default setting. Ad hoc mode configures the printer for wireless networking directly between it and a computer.
Compatibility 802.11n 802.11b/g 802.11b/g/n	Specifies the wireless standard for the wireless network
Choose Network <list of available networks>	Lets you select an available network for the printer to use
View Signal Quality	Lets you view the quality of the wireless connection
View Security Mode	Lets you view the encryption method for the wireless connection. "Disabled" indicates that the wireless network is not encrypted.

AppleTalk menu

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → AppleTalk

Menu item	Description
Activate On Off	Activates AppleTalk support Note: On is the factory default setting.
View Name	Shows the assigned AppleTalk name Note: The name can be changed only from the Embedded Web Server.
View Address	Shows the assigned AppleTalk address Note: The address can be changed only from the Embedded Web Server.
Set Zone <list of zones available on the network>	Provides a list of AppleTalk zones available on the network Note: The default setting is the default zone for the network. If no default zone exists, the zone marked with an * is the default setting.

NetWare menu

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → NetWare

Menu item	Description
Activate Yes No	Activates NetWare support Note: No is the factory default setting.
View Login Name	Lets you view the assigned NetWare login name Note: This can be changed only from the Embedded Web Server.
Print Mode	Lets you view the assigned NetWare print mode Note: This can be changed only from the Embedded Web Server.
Network Number	Lets you view the assigned NetWare network number Note: This can be changed only from the Embedded Web Server.
Select SAP Frames Ethernet 802.2 Ethernet 802.3 Ethernet Type II Ethernet SNAP	Enables the Ethernet frame type setting Note: On is the factory default setting for all menu items.
Packet Burst Yes No	Reduces network traffic by allowing the transfer and acknowledgement of multiple data packets to and from the NetWare server Note: Yes is the factory default setting.
NSQ/GSQ Mode Yes No	Specifies the NSQ/GSQ Mode setting Note: Yes is the factory default setting.

LexLink menu

This menu is available from the Network/Ports menu:

Network/Ports → Standard Network or Network <x> → Std Network Setup or Net <x> Setup → LexLink menu

Menu item	Description
Activate On Off	Activates LexLink support Note: Off is the factory default setting.
View Nickname	Lets you view the assigned LexLink nickname Note: The LexLink nickname can be changed only from the Embedded Web Server.

Standard USB and USB <x> menus

Menu item	Description
PCL SmartSwitch On Off	Sets the printer to automatically switch to PCL emulation when a print job received through a USB port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PostScript emulation if the PS Smartswitch setting is On. It uses the default printer language specified in the Setup menu if the PS SmartSwitch setting is Off.
PS SmartSwitch On Off	Sets the printer to automatically switch to PS emulation when a print job received through a USB port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PCL emulation if the PCL Smartswitch setting is On. It uses the default printer language specified in the Setup menu if the PCL SmartSwitch setting is Off.
NPA Mode On Off Auto	Sets the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol Notes: <ul style="list-style-type: none"> Auto is the factory default setting. Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
USB Buffer Disabled Auto 3k to <maximum size allowed>	Sets the size of the USB input buffer Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The Disabled setting turns off job buffering. Any jobs already buffered on the disk are printed before normal processing is resumed. The USB buffer size value can be changed in 1k increments. The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether the Resource Save setting is On or Off. To increase the maximum size range for the USB Buffer, disable or reduce the size of the parallel, serial, and network buffers. Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.

Menu item	Description
Job Buffering On Off Auto	Temporarily stores jobs on the printer hard disk before printing Notes: <ul style="list-style-type: none"> • Off is the factory default setting. • The On setting buffers jobs on the printer hard disk. • The Auto setting buffers print jobs only if the printer is busy processing data from another input port. • Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Mac Binary PS On Off Auto	Sets the printer to process Macintosh binary PostScript print jobs Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. • The Off setting filters print jobs using the standard protocol. • The On setting processes raw binary PostScript print jobs.
ENA Address	Sets the network address information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.
ENA Netmask	Sets the netmask information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.
ENA Gateway	Sets the gateway information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.

Parallel <x> menu

Menu item	Description
PCL SmartSwitch On Off	Sets the printer to automatically switch to PCL emulation when a print job received through a serial port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> • On is the factory default setting. • When the Off setting is used, the printer does not examine incoming data. • When the Off setting is used, the printer uses PostScript emulation if PS SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PS SmartSwitch is set to Off.

Menu item	Description
PS SmartSwitch On Off	Sets the printer to automatically switch to PS emulation when a print job received through a serial port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PCL emulation if PCL SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PCL SmartSwitch is set to Off.
NPA Mode On Off Auto	Sets the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol Notes: <ul style="list-style-type: none"> Auto is the factory default setting. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Parallel Buffer Disabled Auto 3k to <maximum size allowed>	Sets the size of the parallel input buffer Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The Disabled setting turns off job buffering. Any jobs already buffered on the disk are printed before normal processing is resumed. The parallel buffer size setting can be changed in 1k increments. The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To increase the maximum size range for the Parallel Buffer, disable or reduce the size of the USB, serial, and network buffers. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Job Buffering Off On Auto	Temporarily stores jobs on the printer hard disk before printing Notes: <ul style="list-style-type: none"> Off is the factory default setting. The Off setting does not buffer print jobs to the printer hard disk. The On setting buffers jobs on the printer hard disk. The Auto setting buffers print jobs only if the printer is busy processing data from another input port. Changing this setting from the printer control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Advanced Status On Off	Enables bidirectional communication through the parallel port Notes: <ul style="list-style-type: none"> On is the factory default setting. The Off setting disables parallel port negotiation.

Menu item	Description
Parallel Protocol Standard Fastbytes	Specifies the parallel port protocol Notes: <ul style="list-style-type: none"> Fastbytes is the factory default setting. It provides compatibility with most existing parallel ports and is the recommended setting. The Standard setting tries to resolve parallel port communication problems.
Honor Init On Off	Determines whether or not the printer honors printer hardware initialization requests from the computer Notes: <ul style="list-style-type: none"> Off is the factory default setting. The computer requests initialization by activating the Init signal from the parallel port. Many personal computers activate the Init signal each time the computer is turned on.
Parallel Mode 2 On Off	Determines whether or not the parallel port data is sampled on the leading or trailing edge of strobe Note: On is the factory default setting.
Mac Binary PS On Off Auto	Sets the printer to process Macintosh binary PostScript print jobs Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The Off setting filters print jobs using the standard protocol. The On setting processes raw binary PostScript print jobs.
ENA Address <xxx>.<xxx>.<xxx>.<xxx>	Sets the network address information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.
ENA Netmask <xxx>.<xxx>.<xxx>.<xxx>	Sets the netmask information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.
ENA gateway <xxx>.<xxx>.<xxx>.<xxx>	Sets the gateway information for an external print server that is attached to the printer using a USB cable Note: This menu item is available only if the printer is attached to an external print server through the USB port.

Serial <x> menu

Menu item	Description
PCL SmartSwitch On Off	Sets the printer to automatically switch to PCL emulation when a print job received through a serial port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PostScript emulation if PS SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PS SmartSwitch is set to Off.
PS SmartSwitch On Off	Sets the printer to automatically switch to PS emulation when a print job received through a serial port requires it, regardless of the default printer language Notes: <ul style="list-style-type: none"> On is the factory default setting. When the Off setting is used, the printer does not examine incoming data. When the Off setting is used, the printer uses PCL emulation if PCL SmartSwitch is set to On. It uses the default printer language specified in the Setup menu if PCL SmartSwitch is set to Off.
NPA Mode On Off Auto	Sets the printer to perform the special processing required for bidirectional communication following the conventions defined by the NPA protocol Notes: <ul style="list-style-type: none"> Auto is the factory default setting. When the On setting is used, the printer performs NPA processing. If the data is not in NPA format, it is rejected as bad data. When the Off setting is used, the printer does not perform NPA processing. When the Auto setting is used, the printer examines data, determines the format, and then processes it appropriately. Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Serial Buffer Disabled Auto 3k to <maximum size allowed>	Sets the size of the serial input buffer Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The Disabled setting turns off job buffering. Any jobs already buffered on the disk are printed before normal processing is resumed. The serial buffer size setting can be changed in 1k increments. The maximum size allowed depends on the amount of memory in the printer, the size of the other link buffers, and whether Resource Save is set to On or Off. To increase the maximum size range for the Serial Buffer, disable or reduce the size of the parallel, serial, and network buffers. Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.

Menu item	Description
Job Buffering Off On Auto	Temporarily stores jobs on the printer hard disk before printing Notes: <ul style="list-style-type: none"> Off is the factory default setting. The Off setting does not buffer print jobs to the hard disk. The On setting buffers jobs on the printer hard disk. The Auto setting buffers print jobs only if the printer is busy processing data from another input port. Changing this setting from the control panel and then exiting the menus causes the printer to restart. The menu selection is updated.
Serial Protocol DTR DTR/DSR XON/XOFF XON/XOFF/DTR XONXOFF/DTRDSR	Selects the hardware and software handshaking settings for the serial port Notes: <ul style="list-style-type: none"> DTR is the factory default setting. DTR/DSR is a hardware handshaking setting. XON/XOFF is a software handshaking setting. XON/XOFF/DTR and XON/XOFF/DTR/DSR are combined hardware and software handshaking settings.
Robust XON On Off	Determines whether or not the printer communicates availability to the computer Notes: <ul style="list-style-type: none"> Off is the factory default setting. This menu item applies only to the serial port if Serial Protocol is set to XON/XOFF.
Baud 1200 2400 4800 9600 19200 38400 57600 115200 138200 172800 230400 345600	Specifies the rate at which data can be received through the serial port Notes: <ul style="list-style-type: none"> 9600 is the factory default setting. 138200, 172800, 230400, and 345600 baud rates are only displayed in the Standard Serial menu. These settings do not appear in the Serial Option 1, Serial Option 2, or Serial Option 3 menus.
Data Bits 7 8	Specifies the number of data bits that are sent in each transmission frame Note: 8 is the factory default setting.

Menu item	Description
Parity Even Odd None Ignore	Sets the parity for serial input and output data frames Note: None is the factory default setting.
Honor DSR On Off	Determines whether the printer uses the DSR Signal. DSR is a handshaking signal used by most serial cables. Notes: <ul style="list-style-type: none"> Off is the factory default setting. The serial port uses DSR to distinguish data sent by the computer from data created by electrical noise in the serial cable. The electrical noise can cause stray characters to print. Select On to prevent stray characters from printing.

SMTP Setup menu

Use the following menu to configure the SMTP server.

Menu item	Description
Primary SMTP Gateway Primary SMTP Gateway Port Secondary SMTP Gateway Secondary SMTP Gateway Port	Specifies SMTP server port information Note: 25 is the default SMTP gateway port. Range is 1-65536.
SMTP Timeout 5–30	Specifies the amount of time in seconds before the server stops trying to send the e-mail Note: 30 seconds is the factory default setting.
Reply Address	Specifies a reply address of up to 128 characters in e-mail sent by the printer
Use SSL Disabled Negotiate Required	Sets the printer to use SSL for increased security when connecting to the SMTP server Notes: <ul style="list-style-type: none"> Disabled is the factory default setting for Use SSL. When the Negotiate setting is used, your SMTP server determines if SSL will be used.
SMTP Server Authentication No authentication required Login/Plain CRAM-MD5 Digest-MD5 NTLM Kerberos 5	Specifies the type of user authentication required Note: “No authentication required” is the factory default setting.

Menu item	Description
Device-Initiated E-mail None Use Device SMTP Credentials Device Userid Device Password Kerberos 5 Realm NTLM Domain	<p>Specifies what credentials will be used when communicating to the SMTP server. Some SMTP servers require credentials in order to send e-mail.</p> <p>Notes:</p> <ul style="list-style-type: none"> • None is the factory default setting for Device-Initiated E-mail. • Device Userid and Device Password are used to log in to the SMTP server when "Use Device SMTP Credentials" is selected.

Security menu

Miscellaneous menu

Menu item	Description
Panel Logins Login failures Failure time frame Lockout time Login timeout	<p>Limits the number and time frames of failed login attempts from the printer control panel before <i>all</i> users are locked out</p> <p>Notes:</p> <ul style="list-style-type: none"> • "Login failures" specifies the number of failed login attempts before users are locked out. Settings range from 1–50. 3 attempts is the factory default setting. • "Failure time frame" specifies the time frame during which failed login attempts can be made before users are locked out. Settings range from 1–60 minutes. 5 minutes is the factory default setting. • "Lockout time" specifies how long users are locked out after exceeding the login failures limit. Settings range from 0–60 minutes. 5 minutes is the factory default setting. • "Login timeout" specifies how long the printer remains idle on the Home screen before automatically logging the user off. Settings range from 1–900 minutes. 300 minutes is the factory default setting.
Remote Logins Login failures Failure time frame Lockout time Login timeout	<p>Limits the number and time frames of failed login attempts from a computer before <i>all</i> remote users are locked out</p> <p>Notes:</p> <ul style="list-style-type: none"> • "Login failures" specifies the number of failed login attempts before users are locked out. Settings range from 1–50. 3 attempts is the factory default setting. • "Failure time frame" specifies the time frame during which failed login attempts can be made before users are locked out. Settings range from 1–60 minutes. 5 minutes is the factory default setting. • "Lockout time" specifies how long a user is locked out after exceeding the login failures limit. Settings range from 0–60 minutes. 5 minutes is the factory default setting. • "Login timeout" specifies how long the remote interface remains idle before automatically logging the user off. Settings range from 1–900 minutes. 300 minutes is the factory default setting.

Confidential Print menu

Menu item	Description
Max Invalid PIN Off 2–10	Limits the number of times an invalid PIN can be entered Notes: <ul style="list-style-type: none">• Off is the default setting.• This menu item appears only if a printer hard disk is installed.• Once a limit is reached, the jobs for that user name and that PIN are deleted.
Job Expiration Off 1 hour 4 hours 24 hours 1 week	Limits the amount of time a confidential job stays in the printer before it is deleted Notes: <ul style="list-style-type: none">• Off is the default setting.• If the Job Expiration setting is changed while confidential jobs reside on the printer RAM or printer hard disk, the expiration time for those print jobs does not change to the new default value.• If the printer is turned off, all confidential jobs held in printer RAM are deleted.

Disk Wiping menu

Menu item	Description
Automatic Wiping Off On	Disk Wiping erases <i>only</i> print job data that <i>is not</i> currently in use by the file system from the printer hard disk. All permanent data on the printer hard disk is preserved, such as downloaded fonts, macros, and held jobs. Automatic Wiping marks all disk space used by a previous job and does not permit the file system to reuse this space until it has been sanitized. Only Automatic Wiping enables users to activate disk wiping without having to take the printer offline for an extended amount of time. Notes: <ul style="list-style-type: none">• This menu item appears only if a formatted, non-defective printer hard disk is installed.• Off is the default setting.• Due to the large amount of resources required for Automatic Wiping, activating this option may decrease printer performance, especially if the printer requires hard disk space faster than it can be wiped and returned to service.

Menu item	Description
Manual Wiping Start now Do not start now	<p>Disk Wiping erases <i>only</i> print job data that <i>is not</i> currently in use by the file system from the printer hard disk. All permanent data on the printer hard disk is preserved, such as downloaded fonts, macros, and held jobs.</p> <p>Manual Wiping overwrites all disk space that has been used to hold data from a print job that has been processed (i.e. printed). This type of wipe <i>does not</i> erase any information related to an unprocessed print job.</p> <p>Notes:</p> <ul style="list-style-type: none"> • This menu item appears only if a formatted, non-defective printer hard disk is installed. • "Do not start now" is the default setting. • If the Disk Wiping access control is activated, then a user must successfully authenticate and have the required authorization in order to initiate the disk wipe.
Automatic Method Single pass Multiple pass	<p>Disk Wiping erases <i>only</i> print job data that <i>is not</i> currently in use by the file system from the printer hard disk. All permanent data on the printer hard disk is preserved, such as downloaded fonts, macros, and held jobs.</p> <p>Notes:</p> <ul style="list-style-type: none"> • This menu item appears only if a formatted, non-defective printer hard disk is installed. • Single pass is the default setting. • Highly confidential information should be wiped using the Multiple pass method <i>only</i>.
Manual Method Single pass Multiple pass	<p>Disk Wiping erases <i>only</i> print job data that <i>is not</i> currently in use by the file system from the printer hard disk. All permanent data on the printer hard disk is preserved, such as downloaded fonts, macros, and held jobs.</p> <p>Both manual and scheduled wiping allow the file system to reuse marked disk space without first having to wipe it.</p> <p>Notes:</p> <ul style="list-style-type: none"> • This menu item appears only if a formatted, non-defective printer hard disk is installed. • Single pass is the default setting. • Highly confidential information should be wiped using the Multiple Pass method <i>only</i>.

Menu item	Description
Scheduled Method Single pass Multiple pass	<p>Disk Wiping erases <i>only</i> print job data that <i>is not</i> currently in use by the file system from the printer hard disk. All permanent data on the printer hard disk is preserved, such as downloaded fonts, macros, and held jobs.</p> <p>Both manual and scheduled wiping allow the file system to reuse marked disk space without first having to wipe it.</p> <p>Notes:</p> <ul style="list-style-type: none"> • This menu item appears only if a formatted, non-defective printer hard disk is installed. • Single pass is the default setting. • Highly confidential information should be wiped using the Multiple Pass method <i>only</i>. • Scheduled wipes are initiated <i>without</i> displaying a user warning or confirmation message.

Security Audit Log menu

Menu item	Description
Export Log	<p>Enables an authorized user to export the security log</p> <p>Notes:</p> <ul style="list-style-type: none"> • To export the log from the printer control panel, a flash drive must be attached to the printer. • From the Embedded Web Server, the log can be downloaded to a computer.
Delete Log Delete now Do not delete	<p>Specifies whether audit logs are deleted</p> <p>Note: Delete Now is the factory default setting.</p>
Configure Log Enable Audit Enable Remote Syslog Remote Syslog Facility Severity of events to log	<p>Specifies whether and how the audit logs are created</p> <p>Note: Factory default settings enable the security audit log.</p>

Set Date/Time menu

Menu item	Description
View Date/Time	Lets you view the current date and time settings for the printer
Set Date/Time <input date/time>	Note: Date/Time is set in YYYY-MM-DD HH:MM format.
Time Zone <list of time zones>	Note: GMT is the factory default setting.

Menu item	Description
Observe DST On Off	Note: On is the factory default setting and uses the applicable Daylight Saving Time associated with the Time Zone setting.
Enable NTP On Off	Enables Network Time Protocol, which synchronizes the clocks of devices on a network Note: On is the factory default setting.

Settings menu

General Settings menu

Menu item	Description
Display Language English Francais Deutsch Italiano Espanol Dansk Norsk Nederlands Svenska Portuguese Suomi Russian Polski Magyar Turkce Cesky Simplified Chinese Traditional Chinese Korean Japanese	Sets the language of the text appearing on the display Note: All languages may not be available for all printers.

Menu item	Description
Eco-Mode Off Energy Energy/Paper Paper	Minimizes the use of energy, paper, or specialty media Notes: <ul style="list-style-type: none"> • Off is the factory default setting. Off resets the printer to its factory default settings. • The Energy setting minimizes the power used by the printer. Performance may be affected but not print quality. • Paper minimizes the amount of paper and specialty media needed for a print job. Performance may be affected but not print quality. • Energy/Paper minimizes the use of power and of paper and specialty media.
Quiet Mode Off On	Reduces the amount of noise produced by the printer Notes: <ul style="list-style-type: none"> • Off is the factory default setting. • On configures the printer to produce as little noise as possible.
Run Initial setup Yes No	Instructs the printer to run the setup wizard Notes: <ul style="list-style-type: none"> • Yes is the factory default setting. • After completing the setup wizard by selecting Done at the Country select screen, the default becomes No.
Paper Sizes US Metric	Notes: <ul style="list-style-type: none"> • Initial setting is determined by your Country selection in the initial setup wizard. • Changing this setting also changes the Units of Measurement setting in the Universal Setup menu and the default for each input source in the Paper Size/Paper Type menu.
Alarms Alarm Control Cartridge Alarm	Sets an alarm to sound when the printer requires operator intervention Available selections for each alarm type are: Off Single Continuous Notes: <ul style="list-style-type: none"> • Single is the factory default setting for Alarm Control. Single sounds three quick beeps. • Off is the factory default setting for Cartridge Alarm. Off means no alarm will sound. • Continuous repeats three beeps every 10 seconds.

Menu item	Description
Timeouts Job Hold Timeout 5–255	Sets the amount of time the printer waits for user intervention before it holds jobs that require unavailable resources and continues to print other jobs in the print queue Notes: <ul style="list-style-type: none"> • 30 seconds is the factory default setting. • This menu item appears only when a hard disk is installed.
Timeouts Power Saver 1–240	Sets the amount of time the printer waits after a job is printed before it goes into a reduced power state Notes: <ul style="list-style-type: none"> • 30 minutes is the factory default setting. • Lower settings conserve more energy, but may require longer warm-up times. • Select the lowest setting if the printer shares an electrical circuit with room lighting or you notice lights flickering in the room. • Select a high setting if the printer is in constant use. Under most circumstances, this keeps the printer ready to print with minimum warm-up time.
Timeouts Screen Timeout 15–300	Sets the amount of time in seconds the printer waits before returning the printer display to a Ready state Note: 30 seconds is the factory default setting.
Timeouts Print Timeout Disabled 1–255	Sets the amount of time in seconds the printer waits to receive an end-of-job message before canceling the remainder of the print job Notes: <ul style="list-style-type: none"> • 90 seconds is the factory default setting. • When the timer expires, any partially printed page still in the printer is printed, and then the printer checks to see if any new print jobs are waiting. • Print Timeout is available only when using PCL emulation. This setting has no effect on PostScript emulation print jobs.
Timeouts Wait Timeout Disabled 15–6553515	Sets the amount of time in seconds the printer waits for additional data before canceling a print job Notes: <ul style="list-style-type: none"> • 40 seconds is the factory default setting. • Wait Timeout is available only when the printer is using PostScript emulation. This setting has no effect on PCL emulation print jobs.
Print Recovery Auto Continue Disabled 5–255	Lets the printer automatically continue printing from certain offline situations when not resolved within the specified time period Note: Disabled is the factory default setting.

Menu item	Description
Print Recovery Jam Recovery Auto	Specifies whether the printer reprints jammed pages Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. The printer reprints jammed pages unless the memory required to hold the pages is needed for other printer tasks. • On sets the printer to always reprint jammed pages. • Off sets the printer to never reprint jammed pages.
Print Recovery Page Protect Off On	Lets the printer successfully print a page that may not have printed otherwise Notes: <ul style="list-style-type: none"> • Off is the factory default setting. Off prints a partial page when there is not enough memory to print the whole page. • On sets the printer to process the whole page so that the entire page prints.
Factory Defaults Do Not Restore Restore Now	Returns the printer settings to the factory default settings Notes: <ul style="list-style-type: none"> • Do Not Restore is the factory default setting. Do Not Restore keeps the user-defined settings. • Restore Now returns all printer settings to the factory default settings except Network/Ports menu settings. All downloads stored in RAM are deleted. Downloads stored in flash memory or on a printer hard disk are not affected.
Custom Home Message None IP Address Hostname Contact Name Location Date/Time Zero Configuration Name Custom Text 1	Displays information pertaining to the selected Custom Home Messages on the printer control panel.

Setup menu

Menu item	Description
Printer Language PCL Emulation PS Emulation	Sets the default printer language Notes: <ul style="list-style-type: none"> • PCL emulation uses a PCL interpreter for processing print jobs. PostScript emulation uses a PS interpreter for processing print jobs. • PCL is the factory default printer language. • Setting a printer language as the default does not prevent a software program from sending print jobs that use another printer language.
Job Waiting On Off	Specifies that print jobs be removed from the print queue if they require unavailable printer options or custom settings. They are stored in a separate print queue, so other jobs print normally. When the missing information and/or options are obtained, the stored jobs print. Notes: <ul style="list-style-type: none"> • Off is the factory default setting. • This menu appears only if a non-Read Only printer hard disk is installed. This requirement ensures that stored jobs are not deleted if the printer loses power.
Print Area Normal Whole Page	Sets the logical and physical printable area Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. When attempting to print data in the non-printable area defined by the Normal setting, the printer clips the image at the boundary. • The Whole Page setting allows the image to be moved into the non-printable area defined by the Normal setting, but the printer will clip the image at the Normal setting boundary. • The Whole Page setting only affects pages printed using a PCL 5e interpreter. This setting has no effect on pages printed using the PCL XL or PostScript interpreter.
Printer Usage Max Yield Max Speed	Sets the printer for a faster print speed or a higher toner yield. Note: Max Yield is the factory default.
Black Only Mode Off On	Sets the printer to print text and graphics using only the black toner cartridge. Note: Off is the factory default. Note: The printer driver is capable of overriding this setting.

Menu item	Description
Download Target RAM Flash Disk	Sets the storage location for downloads Notes: <ul style="list-style-type: none"> • RAM is the factory default setting. • Storing downloads in flash memory or on a printer hard disk places them in permanent storage. Downloads remain in flash memory or on the printer hard disk even when the printer is turned off. • Storing downloads in RAM is temporary. • This menu appears only if a flash and/or disk option is installed.
Job Accounting On Off	Specifies whether the printer stores statistical information about the most recent print jobs on the hard disk Notes: <ul style="list-style-type: none"> • Off is the factory default setting. Off means the printer does not store job statistics. • The statistics include a record of print errors, the print time, the job size in bytes, the requested paper size and type, the total number of printed pages, and the total number of copies requested. • Job Accounting is available only when a printer hard disk is installed and working properly. It should not be Read/Write or Write protected. Job Buffer Size should not be set to 100%. • Changing this setting from the printer control panel and then exiting the menus causes the printer to reset. The menu selection is updated.
Resource Save On Off	Specifies how the printer handles temporary downloads, such as fonts and macros stored in RAM, when the printer receives a job that requires more memory than is available Notes: <ul style="list-style-type: none"> • Off is the factory default setting. Off sets the printer to retain the downloads only until memory is needed. Downloads are deleted in order to process print jobs. • The On setting retains the downloads during language changes and printer resets. If the printer runs out of memory, 38 Memory Full appears, and downloads are not deleted.
Print All Order Alphabetically Newest First Oldest First	Specifies the order in which held and confidential jobs are printed when Print All is selected Notes: <ul style="list-style-type: none"> • Alphabetically is the factory default setting. • Print jobs always appear in alphabetical order on the printer control panel.

Finishing menu

Menu item	Description
Sides (Duplex) 2 sided 1 sided	Specifies whether duplex (2-sided) printing is set as the default for all print jobs Notes: <ul style="list-style-type: none"> 1 sided is the factory default setting. To set 2-sided printing from the software program: for Windows users, click File → Print, and then click Properties, Preferences, Options, or Setup; for Macintosh users, choose File > Print, and then adjust the settings from the print dialog and pop-up menus.
Duplex Binding Long Edge Short Edge	Defines the way duplexed pages are bound and how the printing on the back of the page is oriented in relation to the printing on the front of the page Notes: <ul style="list-style-type: none"> Long Edge is the factory default setting. Long Edge specifies that binding be placed on the left edge of portrait pages and the top edge of landscape pages. Short Edge specifies that binding be placed on the top edge of portrait pages and the left edge of landscape pages.
Copies 1–999	Specifies a default number of copies for each print job Note: 1 is the factory default setting.
Blank Pages Do Not Print Print	Specifies whether blank pages are inserted in a print job Note: Do Not Print is the factory default setting.
Collate Off (1,1,1,2,2,2) On (1,2,1,2,1,2)	Stacks the pages of a print job in sequence when printing multiple copies Notes: <ul style="list-style-type: none"> Off is the factory default setting. No pages will be collated. The On setting stacks the print job sequentially. Both settings print the entire job the number of times specified by the Copies menu setting.
Separator Sheets None Between Copies Between Jobs Between Pages	Specifies whether blank separator sheets are inserted Notes: <ul style="list-style-type: none"> None is the factory default setting. Between Copies inserts a blank sheet between each copy of a print job if Collation is set to On. If Collation is set to Off, a blank page is inserted between each set of printed pages, such as after all page 1's and after all page 2's. Between Jobs inserts a blank sheet between print jobs. Between Pages inserts a blank sheet between each page of the print job. This setting is useful when printing transparencies or inserting blank pages in a document for notes.

Menu item	Description
Separator Source Tray <x> Multipurpose Tray	Specifies the paper source for separator sheets Notes: <ul style="list-style-type: none"> • Tray 1 (standard tray) is the factory default setting. • From the Paper menu, Configure MP must be set to Cassette in order for Multipurpose Tray to appear as a menu setting.
N-up (pages-side) Off 2-Up 3-Up 4-Up 6-Up 9-Up 12-Up 16-Up	Specifies that multiple-page images be printed on one side of a sheet of paper. Notes: <ul style="list-style-type: none"> • Off is the factory default setting. • The number selected is the number of page images that will print per side.
N-up Ordering Horizontal Reverse Horizontal Reverse Vertical Vertical	Specifies the positioning of multiple-page images when using N-up (pages-sides) Notes: <ul style="list-style-type: none"> • Horizontal is the factory default setting. • Positioning depends on the number of images and whether the images are in portrait or landscape orientation.
Orientation Auto Long Edge Short Edge	Specifies the orientation of a multiple-page sheet Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. The printer chooses between portrait and landscape. • Long Edge uses landscape. • Short Edge uses portrait.
N-up Border None Solid	Prints a border around each page image when using N-up (pages-sides) Note: None is the factory default setting.

Quality menu

Menu item	Description
Print Mode Color Black Only	Specifies whether images are printed in monochrome grayscale or in color Note: Color is the factory default setting.

Menu item	Description
Color Correction Auto Off Manual	Adjusts the color output on the printed page Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. Auto applies different color conversion tables to each object on the printed page. • Off turns off color correction. • Manual allows customization of the color tables using the settings available from the Manual Color menu. • Due to the differences in additive and subtractive colors, certain colors that appear on computer monitors are impossible to duplicate on the printed page.
Print Resolution 1200 dpi 4800 CQ	Specifies the printed output resolution Notes: <ul style="list-style-type: none"> • 4800 CQ is the factory default setting. • 1200 dpi provides the highest resolution output, and increases gloss.
Toner Darkness 1–5	Lightens or darkens the printed output Notes: <ul style="list-style-type: none"> • 4 is the factory default setting. • Selecting a smaller number can help conserve toner. • If Print Mode is set to Black Only, a setting of 5 increases toner density and darkness to all print jobs. • If Print Mode is set to Color, a setting of 5 is the same as a setting of 4.
Enhance Fine Lines On Off	Enables a print mode preferable for files such as architectural drawings, maps, electrical circuit diagrams, and flow charts Notes: <ul style="list-style-type: none"> • To set Enhance Fine Lines from the software program, with a document open, click File → Print, and then click Properties, Preferences, Options, or Setup. • To set Enhance Fine Lines using the Embedded Web Server, type the network printer IP address in a browser window.
Color Saver On Off	Reduces the amount of toner used for graphics and images. The amount of toner used for text is not reduced. Notes: <ul style="list-style-type: none"> • Off is the factory default setting. • On overrides Toner Darkness settings.
RGB Brightness -6–6	Adjusts brightness in color outputs Notes: <ul style="list-style-type: none"> • 0 is the factory default setting. • -6 is the maximum decrease. 6 is the maximum increase. • This does not affect files where CMYK color specifications are being used.

Menu item	Description
RGB Contrast 0–5	Adjusts contrast in color outputs Notes: <ul style="list-style-type: none"> • 0 is the factory default setting. • This does not affect files where CMYK color specifications are being used.
RGB Saturation 0–5	Adjusts saturation in color outputs Notes: <ul style="list-style-type: none"> • 0 is the factory default setting. • This does not affect files where CMYK color specifications are being used.
Color Balance Cyan –5–5 Magenta –5–5 Yellow –5–5 Black –5–5 Reset Defaults 0	Adjusts color in printed output by increasing or decreasing the amount of toner being used for each color Note: 0 is the factory default setting.
Color Samples sRGB Display sRGB Vivid Display—True Black Vivid Off—RGB US CMYK Euro CMYK Vivid CMYK Off—CMYK	Prints sample pages for each of the RGB and CMYK color conversion tables used in the printer Notes: <ul style="list-style-type: none"> • Selecting any setting prints the sample. • Color samples consist of a series of colored boxes along with the RGB or CMYK combination that creates the color observed. These pages can be used to help decide which combinations to use to get the desired printed output. • From a browser window, type the IP address of the printer to access a complete list of color sample pages from the Embedded Web Server.

Menu item	Description
Manual Color RGB Image Vivid sRGB Display Display—True Black sRGB Vivid Off RGB Text Vivid sRGB Display Display—True Black sRGB Vivid Off RGB Graphics Vivid sRGB Display Display—True Black sRGB Vivid Off	Customizes the RGB color conversions Notes: <ul style="list-style-type: none"> • sRGB Display is the factory default setting for RGB Image. This applies a color conversion table to an output that matches the colors displayed on a computer monitor. • sRGB Vivid is the factory default setting for RGB Text and RGB Graphics. sRGB Vivid applies a color table that increases saturation. This is preferred for business graphics and text. • Vivid applies a color conversion table that produces brighter, more saturated colors. • Display—True Black applies a color conversion table that uses only black toner for neutral gray colors. • Off turns off color conversion.
Manual Color CMYK Image US CMYK Euro CMYK Vivid CMYK Off CMYK Text US CMYK Euro CMYK Vivid CMYK Off CMYK Graphics US CMYK Euro CMYK Vivid CMYK Off	Customizes the CMYK color conversions Notes: <ul style="list-style-type: none"> • US CMYK is the US factory default setting. US CMYK applies a color conversion table that tries to produce output that matches SWOP color output. • Euro CMYK is the international factory default setting. Euro CMYK applies a color conversion table that tries to produce output that matches EuroScale color output. • Vivid CMYK increases color saturation for the US CMYK color conversion table. • Off turns off color conversion.
Color Adjust	Initiates a recalibration of color conversion tables and allows the printer to make adjustments for color variations in output Notes: <ul style="list-style-type: none"> • Calibrating starts when the menu is selected. Calibrating appears on the display until the process is finished. • Color variations in output sometimes result from changeable conditions such as room temperature and humidity. Color adjustments are made on printer algorithms. Color alignment is also recalibrated in this process.

Utilities menu

Menu item	Description
Remove Held Jobs Confidential Held Not Restored All	Removes confidential and held jobs from the printer hard disk Notes: <ul style="list-style-type: none"> • Selecting a setting affects only print jobs that are resident in the printer. Bookmarks, jobs on flash drives, and other types of held jobs are not affected. • Selecting Not Restored removes all Print and Hold jobs that were <i>not</i> restored from the disk.
Format Flash Yes No	Formats the flash memory. Flash memory refers to the memory added by installing a flash memory option card in the printer. Warning—Potential Damage: Do not turn off the printer while the flash memory is formatting. Notes: <ul style="list-style-type: none"> • A flash memory option card must be installed in the printer and operating properly for this menu item to be available. The flash memory option card must not be Read/Write or Write protected. • Selecting Yes deletes all data stored in flash memory. • No cancels the format request.
Delete Downloads on Disk Delete Now Do Not Delete	Removes downloads from the printer hard disk, including all held Jobs, buffered jobs, and parked jobs. Job accounting information is not affected. Note: Delete Now is the default setting.
Job Acct Stat Print Clear	Prints a list of all stored job statistics or deletes the information from the printer hard disk Notes: <ul style="list-style-type: none"> • A printer hard disk must be installed in the printer and operating properly for this menu item to be available. • Selecting Print prints a list of statistics. • Clear deletes all job statistics stored on the printer hard disk. • The Clear selection will not appear if Job Accounting is set to MarkTrack™ using NPA.
Hex Trace Activate	Assists in isolating the source of a print job problem Notes: <ul style="list-style-type: none"> • When Activate is selected, all data sent to the printer is printed in hexadecimal and character representation and control codes are not executed. • To exit or deactivate Hex Trace, turn the printer off or reset the printer.
Coverage Estimator Off On	Provides an estimate of the percentage coverage of black on a page. The estimate is printed on a separate page at the end of each print job. Note: Off is the factory default setting.

Menu item	Description
LCD Contrast 1–10	Adjusts the contrast lighting of the display Notes: <ul style="list-style-type: none"> • 5 is the factory default setting. • A higher setting makes the display appear lighter. • A lower setting makes the display appear darker.
LCD Brightness 1–10	Adjusts the brightness of the backlight on the display Notes: <ul style="list-style-type: none"> • 5 is the factory default setting. • A higher setting makes the display appear lighter. • A lower setting makes the display appear darker.

XPS menu

Menu item	Description
Print Error Pages Off On	Prints a page containing information on errors, including XML markup errors Note: Off is the factory default setting.

PDF menu

Menu item	Description
Scale to Fit Yes No	Scales page content to fit the selected paper size Note: No is the factory default setting.
Annotations Do Not Print Print	Prints annotations in a PDF Note: Do Not Print is the factory default setting.

PostScript menu

Menu item	Description
Print PS Error On Off	Prints a page containing the PostScript error Note: Off is the factory default setting.

Menu item	Description
Font Priority Resident Flash/Disk	Establishes the font search order Notes: <ul style="list-style-type: none"> Resident is the factory default setting. A formatted flash memory option card or printer hard disk must be installed in the printer and operating properly for this menu item to be available. The flash memory option or printer hard disk cannot be Read/Write, Write, or password protected. Job Buffer Size must not be set to 100%.
Image Smoothing On Off	Enhances the contrast and sharpness of low-resolution images and smooths their color transitions Notes: <ul style="list-style-type: none"> Off is the factory default setting. Image Smoothing has no effect on images that are 300 dpi or higher in resolution.

PCL Emul menu

Menu item	Description
Font Source Resident Disk Flash Download All	Specifies the set of fonts used by the Font Name menu item Notes: <ul style="list-style-type: none"> Resident is the factory default setting. It shows the factory default set of fonts downloaded into RAM. Flash and Disk settings show all fonts resident in that option. Flash option must be properly formatted and cannot be Read/Write, Write, or password protected. Download shows all the fonts downloaded into RAM. All shows all fonts available to any option.
Font Name RO Courier	Identifies a specific font and the option where it is stored Notes: <ul style="list-style-type: none"> RO Courier is the factory default setting. RO Courier shows the font name, font ID, and storage location in the printer. The font source abbreviation is R for Resident, F for Flash, K for Disk, and D for download.

Menu item	Description
Symbol Set 10U PC-8 12U PC-850	Specifies the symbol set for each font name Notes: <ul style="list-style-type: none"> • 10U PC-8 is the US factory default setting. • 12U PC-850 is the international factory default setting. • A symbol set is a set of alphabetic and numeric characters, punctuation, and special symbols. Symbol sets support the different languages or specific programs such as math symbols for scientific text. Only the supported symbol sets are shown.
PCL Emulation Settings Point Size 1.00–1008.00	Changes the point size for scalable typographic fonts Notes: <ul style="list-style-type: none"> • 12 is the factory default setting. • Point Size refers to the height of the characters in the font. One point equals approximately 1/72 of an inch. • Point sizes can be increased or decreased in 0.25-point increments.
PCL Emulation Settings Pitch 0.08–100	Specifies the font pitch for scalable monospaced fonts Notes: <ul style="list-style-type: none"> • 10 is the factory default setting. • Pitch refers to the number of fixed-space characters per inch (cpi). • Pitch can be increased or decreased in 0.01-cpi increments. • For nonscalable monospaced fonts, the pitch appears on the display but cannot be changed.
PCL Emulation Settings Orientation Portrait Landscape	Specifies the orientation of text and graphics on the page Notes: <ul style="list-style-type: none"> • Portrait is the factory default setting. • Portrait prints text and graphics parallel to the short edge of the page. • Landscape prints text and graphics parallel to the long edge of the page.
PCL Emulation Settings Lines per Page 1–255 60 64	Specifies the number of lines that print on each page Notes: <ul style="list-style-type: none"> • 60 is the US factory default setting. 64 is the international default setting. • The printer sets the amount of space between each line based on the Lines per Page, Paper Size, and Orientation settings. Select the desired Paper Size and Orientation before setting Lines per Page.
PCL Emulation Settings A4 Width 198 mm 203 mm	Sets the printer to print on A4-size paper Notes: <ul style="list-style-type: none"> • 198 mm is the factory default setting. • The 203-mm setting sets the width of the page to allow the printing of eighty 10-pitch characters.

Menu item	Description
PCL Emulation Settings Auto CR after LF On Off	Specifies whether the printer automatically performs a carriage return (CR) after a line feed (LF) control command Notes: <ul style="list-style-type: none"> Off is the factory default setting. Setting alterations are duplicated in the PPDS menu.
PCL Emulation Settings Auto LF after CR On Off	Specifies whether the printer automatically performs a line feed (LF) after a carriage return (CR) control command Notes: <ul style="list-style-type: none"> Off is the factory default setting. Setting alterations are duplicated in the PPDS menu.
Tray Renumber Assign MP Feeder Off None 0–199 Assign Tray <x> Off None 0–199 Assign Manual Paper Off None 0–199 Assign Man Env Off None 0–199	Configures the printer to work with printer software or programs that use different source assignments for trays, drawers, and feeders Notes: <ul style="list-style-type: none"> Off is the factory default setting. None is not an available selection. It is only displayed when it is selected by the PCL 5 interpreter. None ignores the Select Paper Feed command. 0–199 allows a custom setting to be assigned.
Tray Renumber View Factory Def None	Displays the factory default setting assigned to each tray, drawer, or feeder
Tray Renumber Restore Defaults Yes No	Returns all tray, drawer, and feeder assignments to the factory default settings

HTML menu

Menu item		Description
Font Name Albertus MT Antique Olive Apple Chancery Arial MT Avant Garde Bodoni Bookman Chicago Clarendon Cooper Black Copperplate Coronet Courier Eurostile Garamond Geneva Gill Sans Goudy Helvetica Hoefler Text	Intl CG Times Intl Courier Intl Univers Joanna MT Letter Gothic Lubalin Gothic Marigold MonaLisa Recut Monaco New CenturySbk New York Optima Oxford Palatino StempelGaramond Taffy Times TimesNewRoman Univers Zapf Chancery	Sets the default font for HTML documents Note: The Times font will be used in HTML documents that do not specify a font.

Menu item		Description
Font Size 1–255 pt		Sets the default font size for HTML documents Notes: <ul style="list-style-type: none"> • 12 pt is the factory default setting. • Font size can be increased in 1-point increments.
Scale 1–400%		Scales the default font for HTML documents Notes: <ul style="list-style-type: none"> • 100% is the factory default setting. • Scaling can be increased in 1% increments.
Orientation Portrait Landscape		Sets the page orientation for HTML documents Note: Portrait is the factory default setting.
Margin Size 8–255 mm		Sets the page margin for HTML documents Notes: <ul style="list-style-type: none"> • 19 mm is the factory default setting. • Margin size can be increased in 1-mm increments.

Menu item	Description
Backgrounds Do Not Print Print	Specifies whether to print backgrounds on HTML documents Note: Print is the factory default setting.

Image menu

Menu item	Description
Auto Fit On Off	Selects the optimal paper size, scaling, and orientation Notes: <ul style="list-style-type: none"> On is the factory default setting. The On setting overrides scaling and orientation settings for some images.
Invert On Off	Inverts bi-tonal monochrome images Notes: <ul style="list-style-type: none"> Off is the factory default setting. This setting does not apply to GIF or JPEG images.
Scaling Anchor Top Left Best Fit Anchor Center Fit Height/Width Fit Height Fit Width	Scales the image to fit the selected paper size Notes: <ul style="list-style-type: none"> Best Fit is the factory default setting. When Auto Fit is set to On, Scaling is automatically set to Best Fit.
Orientation Portrait Landscape Rev Portrait Rev Landscape	Sets the image orientation Note: Portrait is the factory default setting.

PictBridge menu

Menu item	Description
Photo Size Auto L 2L Hagaki Postcard Card Size 100x150 mm 4x6 inches 8x10 inches Letter A4 A5 JIS B5	Selects the optimal photo size Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. • If both the printer and the PictBridge-enabled camera have a value for this setting, the camera value <i>always</i> supersedes the printer value.
Layout Auto Off 2 Up 3 Up 4 Up 6 Up 9 Up 12 Up 16 Up Index Print	Selects the optimal photo layout Notes: <ul style="list-style-type: none"> • Auto is the factory default setting. • If both the printer and the PictBridge-enabled camera have a value for this setting, the camera value <i>always</i> supersedes the printer value.
Quality Normal Draft Fine	Selects the optimal quality Notes: <ul style="list-style-type: none"> • Normal is the factory default setting. • If both the printer and the PictBridge-enabled camera have a value for this setting, the camera value <i>always</i> supersedes the printer value.
Paper Source Multipurpose tray Tray <x> Manual Paper	Sets the tray the paper pulls from Notes: <ul style="list-style-type: none"> • Multipurpose tray is the factory default setting. • If both the printer and the PictBridge-enabled camera have a value for this setting, the camera value <i>always</i> supersedes the printer value.

Flash Drive menu

Menu item	Description
Copies 1–999	Specifies a default number of copies for each print job Note: 1 is the factory default setting.

Menu item	Description
Paper Source Tray <x> Manual Feeder Envelope Feeder	Sets a default paper source for all print jobs Note: Tray 1 (standard tray) is the factory default setting.
Collate Off (1,1,1,2,2,2) On (1,2,1,2,1,2)	Stacks the pages of a print job in sequence when printing multiple copies Notes: <ul style="list-style-type: none"> Off is the factory default setting. No pages will be collated. The On setting stacks the print job sequentially.
Sides (Duplex) 2 sided 1 sided	Controls whether the job prints on one side or both sides of the paper Note: 1 sided is the factory default setting.
Duplex Binding Long Edge Short Edge	Defines the way duplexed pages are bound and how the printing on the back of the page is oriented in relation to the printing on the front of the page Notes: <ul style="list-style-type: none"> Long Edge is the factory default setting. Long Edge specifies that binding be placed on the left edge of portrait pages and the top edge of landscape pages. Short Edge specifies that binding be placed on the top edge of portrait pages and the left edge of landscape pages.
Orientation Auto Long Edge Short Edge	Specifies the orientation of a multiple-page sheet Notes: <ul style="list-style-type: none"> Auto is the factory default setting. The printer chooses between portrait and landscape. Long Edge uses landscape. Short Edge uses portrait.
N-up (pages-side) Off 2-Up 3-Up 4-Up 6-Up 9-Up 12-Up 16-Up	Specifies that multiple-page images be printed on one side of a sheet of paper Notes: <ul style="list-style-type: none"> Off is the factory default setting. The number selected is the number of page images that will print per side.
N-up Border None Solid	Prints a border around each page image when using N-up (pages-side) Note: None is the factory default setting.

Menu item	Description
N-up Ordering Horizontal Reverse Horizontal Reverse Vertical Vertical	Specifies the positioning of multiple-page images when using N-up (pages-side) Notes: <ul style="list-style-type: none"> Horizontal is the factory default setting. Positioning depends on the number of images and whether the images are in portrait or landscape orientation.
Separator Sheets None Between Copies Between Jobs Between Pages	Specifies whether blank separator sheets are inserted Notes: <ul style="list-style-type: none"> None is the factory default setting. Between Copies inserts a blank sheet between each copy of a print job if Collation is set to On. If Collation is set to Off, then a blank page is inserted between each set of printed pages, such as after all page 1's and after all page 2's. Between Jobs inserts a blank sheet between print jobs. Between Pages inserts a blank sheet between each page of the print job. This setting is useful when printing transparencies or inserting blank pages in a document for notes.
Separator Source Tray <x> Multi-Purpose Feeder Envelope Feeder	Specifies the paper source for separator sheets Notes: <ul style="list-style-type: none"> Tray 1 (standard tray) is the factory default setting. From the Paper menu, Configure MP must be set to Cassette in order for Multi-Purpose Feeder to appear as a menu setting.
Blank Pages Do Not Print Print	Specifies whether blank pages are inserted in a print job Note: Do Not Print is the factory default setting.

Help menu

The Help menu consists of a series of Help pages that are stored in the printer as PDFs. They contain information about using the printer and performing printing tasks.

English, French, German, and Spanish translations are stored in the printer. Other translations are available on the *Software and Documentation CD*.

Menu item	Description
Print All	Prints all the guides
Color Quality Guide	Provides information about adjusting and customizing color printing
Print Quality Guide	Provides information about solving print quality issues
Printing Guide	Provides information about loading paper and other speciality media
Media Guide	Provides a list of the paper sizes supported in trays, drawers, and feeders
Print Defects Guide	Provides help in determining the printer part causing a repetitive defect
Menu Map	Provides a list of the printer control panel menus and settings

Menu item	Description
Information Guide	Provides help in locating additional information
Connection Guide	Provides information about connecting the printer locally (USB) or to a network
Moving Guide	Provides instructions for safely moving the printer

Understanding printer messages

When **Manual Feeder** appears on the display, it refers to the multipurpose tray, which is also referred to as the multipurpose feeder.

List of status and error messages

Activating Menu Changes

Wait for the message to clear.

Busy

Wait for the message to clear.

Calibrating

Wait for the message to clear.

Cancel not available

Wait for the message to clear.

Canceling

Wait for the message to clear.

Change <src> to <x>

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ if the paper was changed.
- Press the down arrow button until ☒ **Use Current** appears, and then press the down arrow button to print on the paper currently in the printer.
- Cancel the current print job.
- For more information, select **Show Me**.

Clearing job accounting statistics

Wait for the message to clear.

Close door <x>

- 1 Press the down arrow button until ☒ **Show me** appears, and then press ☒.
An image of the open door appears.
- 2 Close the specified door.

Copies




Enter the desired number of copies.

Defragmenting Flash DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not turn the printer off while this message appears on the display.

Delete/Delete all/Delete all confidential jobs

- Press the down arrow button until  **Continue** appears, and then press  to delete the specified job.
- Press  to delete the job.

Deleting

Wait for the message to clear.

Disabling DLEs


Wait for the message to clear.

Disabling Menus

Wait for the message to clear.

Note: While the menus are disabled, printer settings cannot be changed from the control panel.

Disk Corrupted. Reformat?

The printer attempted to recover a disk, but was not able to do so. **Reformat** appears. Press  to reformat the disk.

Note: Reformatting the disk deletes all the files currently stored on the disk.

Disk recovery x/y XX% DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not power off while the printer is attempting to recover the printer hard disk.

Disk recovery takes place in several phases. The percentage completed during each phase appears on the display.

Enabling Menus

Wait for the message to clear.

Encrypting disk x/y XX% DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not power off while the printer is encrypting the printer hard disk.

The percentage completed appears on the display.

Enter PIN

Enter the PIN you created in Print Properties when the confidential job was sent for printing.

Enter PIN to lock

Enter the PIN you created to lock the control panel and prevent menu changes.

Flushing buffer

Wait for the message to clear.

Formatting Disk x/y XX% DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not power off while the printer is formatting the printer hard disk.

The percentage completed appears on the display.

Formatting Flash DO NOT POWER OFF



Wait for the message to clear.

Warning—Potential Damage: Do not power off while the printer is formatting the flash memory.



Insert Tray <x>

Insert the specified tray into the printer.

Internal System Error, Reload Bookmarks

- 1 Press the down arrow button until  **Continue** appears, and then press  to clear the message and continue printing.
- 2 Reload the bookmarks.

Internal System Error, Reload Security Certificates

- Reload the security certificates.
- Press the down arrow button until  **Continue** appears, and then press  to clear the message and continue printing.

Invalid Engine Code

You need to download valid engine code for the printer.

For more information, contact customer support.

Note: Engine code may be downloaded while this message appears on the display.

Invalid Network Code

You need to download valid network printing code for the internal print server. The internal print server is a hardware option installed inside the printer.


Note: Network code may be downloaded while this message appears on the display.



Invalid PIN

Enter a valid PIN.

Load multipurpose tray with <x>

- Load the specified paper in the multipurpose tray.

Note: To learn how to load the multipurpose tray, press the down arrow button until **Show Me** appears, and then press .


- Press the down arrow button until  **Continue** appears, and then press  to clear the message and continue printing.

If the printer finds a tray that has the correct paper type and size, then it feeds from that tray. If the printer cannot find a tray with the correct paper type and size, then it prints from the default source.

- Cancel the current job.

Load <src> with <x>

- Load the paper tray or other source with the correct paper type and size.

Note: To learn how to load the specified paper source, press the down arrow button until **Show Me** appears, and then press .

- Cancel the current job.

Menus are disabled

The printer menus are disabled. The printer settings cannot be changed from the printer control panel. Contact your system support person for help.

Note: When menus are disabled, it is still possible to cancel a print job, print a confidential job, or print a held job.

Network/Network <x>

The printer is connected to the network.

Network indicates that the printer is using the standard network port built into the printer system board. **Network <x>** indicates that an internal print server is installed inside the printer or that the printer is connected to an external print server.

No held jobs


Wait for the message to clear.

No jobs to cancel

Wait for the message to clear.

Power Saver

The printer is saving power while it waits for the next print job.

- Send a job to print.
- Press  to warm the printer to normal operating temperature. Afterwards, **Ready** appears.

Printer locked, enter PIN to unlock

The control panel is locked. Enter the correct PIN to unlock it.

Printing

Wait for the message to clear.

Programming disk DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not turn the printer power off while **Programming disk** appears on the display.

Programming flash DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not turn the printer power off while **Programming flash** appears on the display.

Programming System Code DO NOT POWER OFF

Wait for the message to clear.

Warning—Potential Damage: Do not turn the printer power off while **Programming System Code** appears on the display.

Reading USB drive DO NOT REMOVE

Wait for the message to clear.

Ready

The printer is ready to receive print jobs.


Remote Management Active DO NOT POWER OFF

The printer settings are being configured. Wait for the message to clear.


Warning—Potential Damage: Do not turn the printer power off while **Remote Management Active** appears on the display.

Remove all color supplies

The printer is set for Color Lock Out printing in the Config menu. Try one of the following methods:

- Remove all color toner cartridges and photoconductor units.
Note: Do *not* remove the black toner cartridge or photoconductor unit.
- Press the down arrow button until ✓ **Continue** appears, and then press  to clear the message and print in Color Lock Out mode.

Remove Packaging Materials

- 1 Remove all packing material from the printer.
- 2 Make sure the fuser, transfer module, trays, and supplies are installed correctly.
- 3 Press the down arrow button until **Show Areas** appears, and then press .

A tutorial appears on the display indicating the actions you need to take to complete setup.

Remove paper from standard bin

The standard exit bin has reached its capacity. Remove paper from the standard exit bin to clear the message and continue printing.



Resetting Fuser Count

Wait for the message to clear.

Resetting the printer

Wait for the message to clear.

Restore Held Jobs?

- Press the down arrow button until ✓ **Continue** appears, and then press  to restore all held jobs stored on the printer hard disk.
- Press the down arrow button until ✓ **Do not restore** appears, and then press . No print jobs will be restored.


Restoring Factory Defaults

Wait for the message to clear.

When factory default settings are restored:

- All downloaded resources in the printer memory are deleted. This includes fonts, macros, and symbol sets.
- All settings return to the factory defaults except the Display Language setting in the Setup menu and the custom settings in the Serial <x>, Network, Infrared, LocalTalk, and USB menus.

Restoring Held Job(s) x/y

- Wait for the message to clear.
- Press the down arrow button until ✓Quit restoring appears, and then press  to delete unrestored held jobs.

Note: **x** represents the number of jobs being restored. **y** represents the total number of jobs to be restored.


Serial <x>

The printer is using a serial cable connection. The serial port is the active communication link.

Some held jobs were not restored

Press the down arrow button until ✓Continue appears, and then press  to delete the specified job.

Some held jobs will not be restored

- Press the down arrow button until ✓Continue appears, and then press  to clear the message and resume printing.
- Cancel the current job.

Standard Bin Full

Remove the stack of paper from the standard exit bin to clear the message.

Submitting Selection

Wait for the message to clear.

Tray <x> Empty

Load paper in the tray to clear the message.

Tray <x> Low

Load paper in the specified tray to clear the message.

Tray <x> Missing


Insert the specified tray into the printer.

USB/USB <x>

The printer is using a USB cable connection. The USB port is the active communication link.

Waiting

The printer has received data to print, but is waiting for an End-of-Job command, a Form Feed command, or additional data.

- Press  to print the contents of the buffer.
- Cancel the current print job.

31 Missing or defective <color> cartridge

The specified toner cartridge is either missing or not functioning properly.

- Remove the specified toner cartridge, and then reinstall it.
- Remove the specified toner cartridge, and then install a new one.



32 Replace unsupported <color> cartridge

Remove the specified toner cartridge, and then install a supported one.

34 Incorrect paper type, check <src>



- Load the appropriate paper or other specialty media in the proper tray.
- Check tray length and width guides, and make sure the paper is properly loaded in the tray.
- Check the Print Properties settings to make sure the print job is requesting the correct paper size and type.
- Check that the paper size is correctly set. For example, if the Multipurpose Tray Size is set to Universal, make sure the paper is large enough for the data being printed.
- Cancel the current print job.

34 Incorrect paper size, check <src>

- Load the appropriate paper or other specialty media in the proper tray.
- Press the down arrow button until  **Continue** appears, and then press  to clear the message and print the job using a different paper tray.
- Check tray length and width guides, and make sure the paper is properly loaded in the tray.
- Check the Print Properties settings to make sure the print job is requesting the correct paper size and type.
- Check that the paper size is correctly set. For example, if the Multipurpose Tray Size is set to Universal, make sure the paper is large enough for the data being printed.
- Cancel the current print job.

34 Short paper

Try one or more of the following:

- Load the appropriate paper in the tray.
- Press the down arrow button until  **Continue** appears, and then press  to clear the message and print the job using a different paper tray.
- Check the tray length and width guides, and make sure the paper is properly loaded in the tray.
- Check the Print Properties settings to make sure the print job is requesting the correct paper size and type.

- Check that the paper size is correctly set. For example, if the Multipurpose Tray Size is set to Universal, then make sure the paper is large enough for the data being printed.
- Cancel the current print job.

35 Insufficient memory to support Resource Save feature

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to disable Resource Save and continue printing.
- To enable Resource Save after receiving this message, make sure the link buffers are set to Auto, and then exit the menus to activate the link buffer changes. When **Ready** appears, enable Resource Save.
- Install additional memory.

37 Insufficient memory for Flash Memory Defragment operation

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to stop the defragment operation and continue printing.
- Delete fonts, macros, and other data in printer memory.
- Install additional printer memory.

37 Insufficient memory to collate job

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to print the portion of the job already stored and begin collating the rest of the print job.
- Cancel the current print job.

37 Insufficient memory, some held jobs will not be restored

The printer was unable to restore some or all of the confidential or held jobs on the printer hard disk.

Press the down arrow button until ☒ **Continue** appears, and then press ☒ to clear the message.

38 Memory full

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to clear the message.
- Cancel the current print job.
- Install additional printer memory.

 

39 Page is too complex to print

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to clear the message and continue printing.
- Cancel the current print job.
- Install additional printer memory.



51 Defective flash detected

- Press the down arrow button until ☒ **Continue** appears, and then press ☒ to clear the message and continue printing.
- Cancel the current print job.



52 Flash full

- Press the down arrow button until  **Continue** appears, and then press  to clear the message and continue printing.
Downloaded fonts and macros not previously stored in flash memory are deleted.
- Delete fonts, macros, and other data stored in flash memory.
- Upgrade to a larger capacity flash memory card.



53 Unformatted flash detected

- Press the down arrow button until  **Continue** appears, and then press  to stop the defragment operation and continue printing.
- Format the flash memory. If the error message remains, the flash memory may be defective and require replacing.



54 Network <x> software error

- Press the down arrow button until  **Continue** appears, and then press  to continue printing.
- Turn the printer power off and then back on to reset the printer.
- Upgrade (flash) the network firmware in the printer or print server.

54 Serial option <x> error

- Check that the serial cable is connected correctly and is the proper one for the serial port.
- Check that the serial interface parameters (protocol, baud, parity, and data bits) are set correctly on the printer and host computer.
- Press the down arrow button until  **Continue** appears, and then press  to continue printing.
- Turn the printer power off and then back on to reset the printer.



54 Standard network software error

- Press the down arrow button until  **Continue** appears, and then press  to continue printing.
- Turn the printer power off and then back on to reset the printer.
- Upgrade (flash) the network firmware in the printer or print server.


55 Unsupported option in slot <x>

- 1 Turn the printer power off.
- 2 Unplug the power cord from the wall outlet.
- 3 Remove the unsupported optional interface card or internal print server from the printer system board.
- 4 Connect the power cord to a properly grounded outlet.
- 5 Turn the printer power back on.


56 Parallel port <x> disabled

- Press the down arrow button until  **Continue** appears, and then press  to clear the message.
The printer discards any data received through the parallel port.
- Make sure the Parallel Buffer menu item is not set to Disabled.


56 Serial port <x> disabled

- Press the down arrow button until ✓Continue appears, and then press  to clear the message.
The printer discards any data received through the serial port.
- Make sure the Serial Buffer menu item is not set to Disabled.

56 Standard USB port disabled

- Press the down arrow button until ✓Continue appears, and then press  to clear the message.
The printer discards any data received through the USB port.
- Make sure the USB Buffer menu item is not set to Disabled.

56 USB port <x> disabled

- Press the down arrow button until ✓Continue appears, and then press  to clear the message.
The printer discards any data received through the USB port.
- Make sure the USB Buffer menu item is not set to Disabled.

57 Configuration change, held jobs were not restored

Press the down arrow button until ✓Continue appears, and then press  to clear the message.


58 Too many flash options installed

- 1 Turn the printer power off.
- 2 Unplug the power cord from the wall outlet.
- 3 Remove the excess flash memory.
- 4 Connect the power cord to a properly grounded outlet.
- 5 Turn the printer power back on.

58 Too many trays attached

- 1 Turn the printer power off.
- 2 Unplug the power cord from the wall outlet.
Note: Optional trays lock together when stacked. Remove stacked trays one at a time from the top down.
- 3 Remove the additional trays.
- 4 Connect the power cord to a properly grounded outlet.
- 5 Turn the printer power back on.

61 Remove defective hard disk

- Press the down arrow button until ✓Continue appears, and then press  to clear the message and continue printing.
- Install a different hard disk before performing any operations that require a hard disk.

62 Disk full

- Press the down arrow button until **Continue** appears, and then press to clear the message and continue processing.
- Delete fonts, macros, and other data stored on the hard disk.
- Install a larger hard disk.

63 Unformatted disk

- Press the down arrow button until **Continue** appears, and then press to clear the message and continue printing.
- Format the disk.

If the error message remains, the hard disk may be defective and require replacing.

80 Fuser life warning

- Press the down arrow button until **Continue** appears, and then press to clear the message and continue printing.
- Order a replacement fuser immediately. When print quality is reduced, install the new fuser using the instruction sheet that came with the replacement part.

80 Replace fuser

Replace the fuser using the instruction sheet that came with the replacement part.

82 Replace waste toner box

The waste toner box is full.

- 1 Replace the waste toner box using the instruction sheet that came with the replacement part.
- 2 Clear the paper path.

82 Waste toner box missing

Reinsert the waste toner box into the printer.

82 Waste toner box nearly full


Order a replacement waste toner box immediately.

- To learn how to insert a waste toner box, press the down arrow button until **Show Me** appears, and then press .
- Press the down arrow button until **Continue** appears, and then press to clear the message and continue printing.

83 Replace transfer module

Replace the transfer module using the instruction sheet that came with the replacement part.


83 Transfer module life warning

- Press the down arrow button until ✓ **Continue** appears, and then press .
- Order a replacement transfer module immediately. When print quality is reduced, install the new transfer module using the instruction sheet that came with the replacement part.


83 Transfer module missing

Insert the transfer module into the printer.

84 <color> photoconductor low

- 1 Press the down arrow button until ✓ **Continue** appears, and then press .
- 2 Order a replacement photoconductor immediately. When print quality is reduced, install the new photoconductor using the instruction sheet that came with the replacement part.

84 <color> photoconductor nearly low


- 1 Press the down arrow button until ✓ **Continue** appears, and then press .
- 2 Order a replacement photoconductor immediately. When print quality is reduced, install the new photoconductor using the instruction sheet that came with the replacement part.

84 Replace <color> photoconductor

Replace the specified color photoconductor using the instruction sheet that came with the replacement part.


88 <color> cartridge low

When this message appears, the toner is low. When the print becomes faded, replace the specified toner cartridge.

- To clear this message and continue printing, press the down arrow button until ✓ **Continue** appears, and then press .


88 <color> cartridge nearly low

When this message appears, the toner is low. When the print becomes faded, replace the specified toner cartridge.

- To clear this message and continue printing, press the down arrow button until ✓ **Continue** appears, and then press .


88 Replace <color> cartridge

- 1 The toner cartridge is exhausted. Replace the specified toner cartridge.

Note: To learn how to replace a toner cartridge, press the down arrow until **Show Me** appears, and then press .

- 2 Clear the paper path to clear the message and continue printing.

200–250.yy Paper jam

- 1** Clear the paper path.
- 2** After clearing the paper path, press  to resume printing.

900–999 Service <message>

- 1** Turn the printer off.
- 2** Unplug the power cord from the wall outlet.
- 3** Check all cable connections.
- 4** Connect the power cord to a properly grounded outlet.
- 5** Turn the printer back on.

If the service message appears again, contact Customer Support, and report the message.

1565 Emul Error Load Emul Option

The printer automatically clears the message in 30 seconds and then disables the download emulator on the firmware card.

Maintaining the printer

Periodically, certain tasks are required to maintain optimum print quality.

Cleaning the exterior of the printer

- 1 Make sure that the printer is turned off and unplugged from the wall outlet.



CAUTION—SHOCK HAZARD: To avoid the risk of electric shock when cleaning the exterior of the printer, unplug the power cord from the wall outlet and disconnect all cables to the printer before proceeding.

- 2 Remove paper from the standard exit bin.

- 3 Dampen a clean, lint-free cloth with water.

Warning—Potential Damage: Do not use household cleaners or detergents, as they may damage the finish of the printer.

- 4 Wipe only the outside of the printer, making sure to include the standard exit bin.

Warning—Potential Damage: Using a damp cloth to clean the interior may cause damage to your printer.


- 5 Make sure the paper support and standard exit bin are dry before beginning a new print job.

Cleaning the printhead lenses

Clean the printhead lenses when you encounter print quality problems.


- 1 Open the front door.



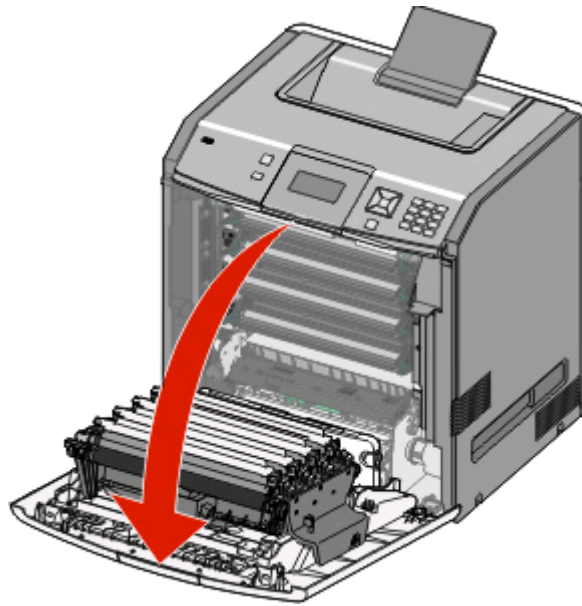

Warning—Potential Damage: To avoid overexposing the photoconductor units, do not leave the front door open for more than 10 minutes.

- 2 Remove all four toner cartridges. Do not remove the photoconductor units for this procedure.
- 3 Locate the four printhead lenses.

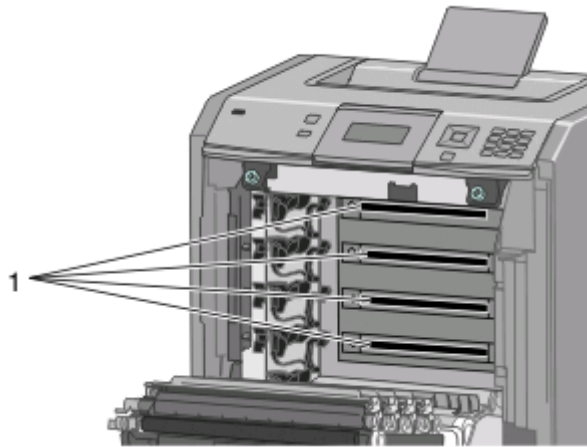


- 4 Clean the lenses using a can of compressed air.

Warning—Potential Damage: Do not touch the printhead lenses.

- 5 Reinstall the four toner cartridges.

- 6 Close the front door.

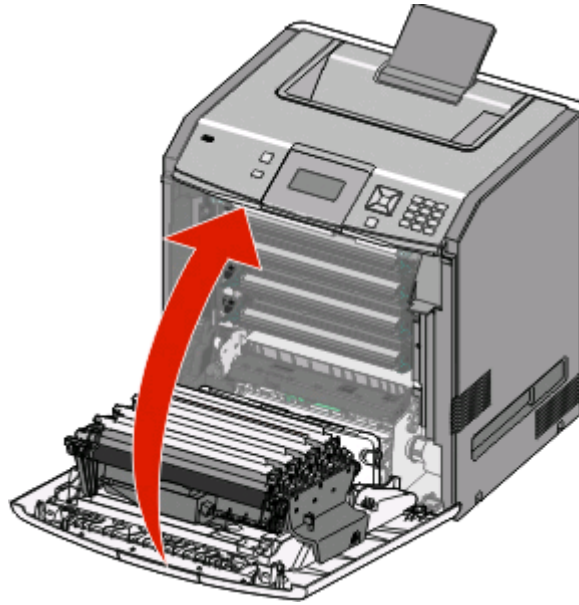

Storing supplies

Choose a cool, clean storage area for the printer supplies. Store supplies right side up in their original packing until you are ready to use them.

Do not expose supplies to:

- Direct sunlight
- Temperatures above 35°C (95°F)
- High humidity above 80%
- Salty air
- Corrosive gases
- Heavy dust

Conserving supplies

There are some settings you can change from the printer control panel that will help you conserve toner and paper.

If you need to print several copies, you can conserve supplies by printing the first copy and checking it for accuracy before printing the remaining copies.

Checking the status of supplies

A message appears on the display when a replacement supply item is needed or when maintenance is required.

Checking the status of supplies from the printer control panel

- 1 Make sure the printer is on and **Ready** appears.
- 2 From the printer control panel, press the down arrow button until **✓ Status / Supplies** appears, and then press **✓**.
- 3 Press the down arrow button until **✓ View supplies** appears, and then press **✓**.
The status of each supply appears.

Checking the status of supplies from a network computer


Note: The computer must be connected to the same network as the printer.

- 1 Open a Web browser.
- 2 In the address bar, type the IP address of the network printer (for example, 192.264.263.17).
- 3 Press **Enter**.
The Device Status Page appears. A summary of supply levels is displayed.

Moving the printer

Before moving the printer

CAUTION—POTENTIAL INJURY: The printer weight is greater than 18 kg (40 lb) and requires two or more trained personnel to lift it safely.

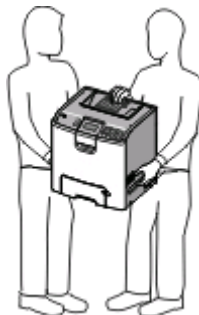

Follow these guidelines to avoid personal injury or printer damage:

- Always use at least two people to lift the printer.
- Always turn off the printer using the power switch before moving it.
- Disconnect all cords and cables from the printer before moving it.
- Remove the printer from the options before moving it.

Warning—Potential Damage: Damage to the printer caused by improper moving is not covered by the printer warranty.


Moving the printer to another location

The printer and options can be safely moved to another location by following these precautions:

- Remove the printer from the options before moving it.
- Any cart used to move the printer must have a surface able to support the full footprint of the printer. Any cart used to move the options must have a surface able to support the dimensions of the options.
- Keep the printer in an upright position.
- Avoid severe jarring movements.

Setting the printer up in a new location

When the printer is set up, allow clearance around it as shown.

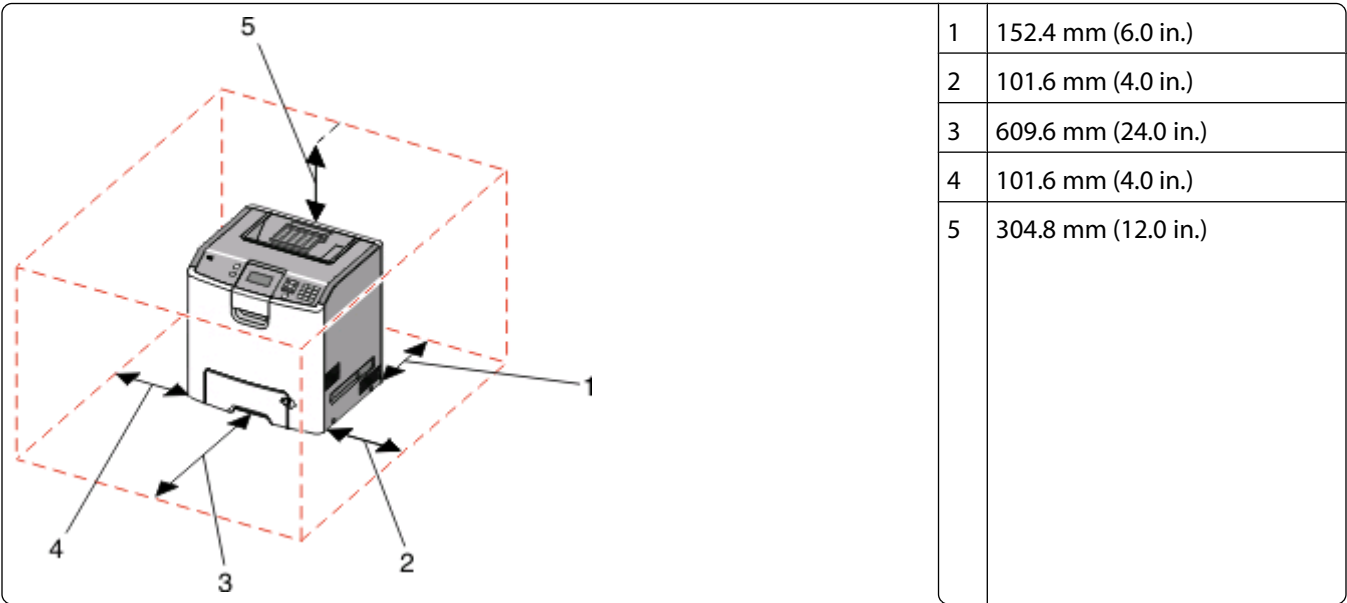

Shipping the printer

When shipping the printer, use the original packaging or call the place of purchase for a relocation kit.

Administrative support

Using the Embedded Web Server

If the printer is installed on a network, the Embedded Web Server is available for a range of functions including:

- Viewing a virtual display of the printer control panel
- Checking the status of the printer supplies
- Configuring printer settings
- Configuring network settings
- Viewing reports

To access the Embedded Web Server, type the printer IP address into the address field of your Web browser.

Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.

Checking the virtual display

When the Embedded Web Server is open, a virtual display appears in the top left corner of the screen. It works as an actual display would work on a printer control panel, showing printer messages.

To access the Embedded Web Server, type the printer IP address into the address field of your Web browser.

Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.

The virtual display appears in the top left corner of the screen.

Checking the device status

Using the Embedded Web Server, you can view paper tray settings, the level of toner in the print cartridge, the percentage of life remaining in the maintenance kit, and capacity measurements of certain printer parts. To view the device status:

- 1 Type the printer IP address in the address field of your Web browser.

Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.

- 2 Click **Device Status**.

Setting up e-mail alerts

You can have the printer send you an e-mail when the supplies are getting low or when the paper needs to be changed, added, or unjammed.

To set up e-mail alerts:

- 1 Type the printer IP address into the address field of your Web browser.
Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.
- 2 Click **Settings**.
- 3 Under Other Settings, click **E-mail Alert Setup**.
- 4 Select the items for notification, and type in the e-mail addresses.
- 5 Click **Submit**.

Note: See your system support person to set up the e-mail server.

Viewing reports

You can view some reports from the Embedded Web Server. These reports are useful for assessing the status of the printer, the network, and supplies.

To view reports from a network printer:

- 1 Type the printer IP address into the address field of your Web browser.
Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.
- 2 Click **Reports**, and then click the type of report you want to view.

Adjusting Power Saver







Available settings range from 1–240 minutes. The factory default is 30 minutes.

To increase or decrease the number of minutes before the printer enters Power Saver mode, do one of the following:

Using the Embedded Web Server

- 1 Type the printer IP address into the address field of your Web browser.
Note: If you do not know the IP address of the printer, then print a network setup page and locate the IP address in the TCP/IP section.
- 2 Click **Settings**, and then click **General Settings**.
- 3 Click **Timeouts**.
- 4 In the Power Saver box, increase or decrease the number of minutes you want the printer to wait before it enters Power Saver mode.
- 5 Click **Submit**.






Using the printer control panel

- 1 Make sure the printer is on and **Ready** appears.
- 2 Press .
- 3 Press the arrow buttons until **Settings** appears, and then press .
- 4 Press the arrow buttons until **General Settings** appears, and then press .
- 5 Press the arrow buttons until **Timeouts** appears, and then press .
- 6 Press the arrow buttons until **Power Saver** appears, and then press .
- 7 Press the arrow buttons to increase or decrease the number of minutes before the printer enters Power Saver mode, and then press .

Restoring the factory default settings

If you want to retain a list of the current menu settings for reference, then print a menu settings page before you restore the factory default settings. For more information, see “Printing a menu settings page” on page 36.

Warning—Potential Damage: Restoring factory defaults returns most printer settings to the original factory default setting. Exceptions include the display language, custom sizes and messages, and Network/Port menu settings. All downloads stored in RAM are deleted. Downloads stored in flash memory or on a printer hard disk are not affected.

- 1 From the printer control panel, press .
 - 2 Press the down arrow button until **Settings** appears, and then press .
 - 3 Press the down arrow button until **General Settings** appears, and then press .
 - 4 Press the down arrow button until **Factory Defaults** appears, and then press .
 - 5 Press the down arrow button until **Restore Now** appears, and then press .
- Restoring Factory Defaults** appears.

Troubleshooting

Checking an unresponsive printer

If your printer is not responding, make sure:

- The power cord is plugged into the printer and a properly grounded electrical outlet.
- The electrical outlet is not turned off by any switch or breaker.
- The printer is not plugged into any surge protectors, uninterruptible power supplies, or extension cords.
- Other electrical equipment plugged into the outlet is working.
- The printer is turned on.
- The printer cable is securely attached to the printer and the host computer, print server, option, or other network device.

Once you have checked each of these possibilities, turn the printer off and then back on. This often fixes the problem.

Solving printing problems

Multiple-language PDFs do not print

The documents contain unavailable fonts.

- 1 Open the document you want to print in Adobe Acrobat.
- 2 Click the printer icon.
The Print dialog appears.
- 3 Select **Print as image**.
- 4 Click **OK**.

Printer control panel display is blank or displays only diamonds

The printer self test failed. Turn the printer off, wait about 10 seconds, and then turn the printer back on.

If **Performing Self Test** and **Ready** do not appear, turn the printer off and contact Customer Support.


Error message about reading USB drive appears

Make sure the USB drive is supported. For information regarding tested and approved USB flash memory devices, contact the place where you purchased your printer.


Jobs do not print

These are possible solutions. Try one or more of the following:

MAKE SURE THE PRINTER IS READY TO PRINT

Make sure **Ready** or **Power Saver** appears on the display before sending a job to print. Press  to return the printer to the **Ready** state.

CHECK TO SEE IF THE STANDARD EXIT BIN IS FULL

Remove the stack of paper from the standard exit bin, and then press .

CHECK TO SEE IF THE PAPER TRAY IS EMPTY

Load paper in the tray.

MAKE SURE THE CORRECT PRINTER SOFTWARE IS INSTALLED

- Verify that you are using the correct printer software.
- If you are using a USB port, make sure you are running Windows Vista, Windows XP, Windows Server 2003, Windows 2000/98/Me and using compatible printer software.

MAKE SURE THE INTERNAL PRINT SERVER IS INSTALLED PROPERLY AND WORKING

- Make sure the internal print server is properly installed and that the printer is connected to the network. For more information about installing a network printer, click **View User's Guide and Documentation** on the *Software and Documentation* CD.
- Print a network setup page and check that the status shows **Connected**. If the status is **Not Connected**, check the network cables, and then try printing the network setup page again. Contact your system support person to make sure the network is functioning correctly.

MAKE SURE YOU ARE USING A RECOMMENDED USB, SERIAL, OR ETHERNET CABLE

For more information contact the place where you bought the printer.

MAKE SURE PRINTER CABLES ARE SECURELY CONNECTED

Check the cable connections to the printer and print server to make sure they are secure.

For more information, see the setup documentation that came with the printer.

Confidential and other held jobs do not print

These are possible solutions. Try one or more of the following:

PARTIAL JOB, NO JOB, OR BLANK PAGES PRINT

The print job may contain a formatting error or invalid data.

- Delete the print job, and then print it again.
- For PDF documents, recreate the PDF and then print it again.

MAKE SURE THE PRINTER HAS SUFFICIENT MEMORY

Free up additional printer memory by scrolling through the list of held jobs and deleting some of them.












Job takes longer than expected to print

These are possible solutions. Try one or more of the following:

REDUCE THE COMPLEXITY OF THE PRINT JOB

Eliminate the number and size of fonts, the number and complexity of images, and the number of pages in the job.

CHANGE THE PAGE PROTECT SETTING TO OFF

- 1 From the printer control panel, press .
- 2 Press the down arrow button until  **Settings** appears, and then press .
- 3 Press the down arrow button until  **General Settings** appears, and then press .
- 4 Press the down arrow button until  **Print Recovery** appears, and then press .
- 5 Press the down arrow button until  **Page Protect** appears, and then press .
- 6 Press the down arrow button until  **Off** appears, and then press .

Job prints from the wrong tray or on the wrong paper

CHECK THE PAPER TYPE SETTING

Make sure the Paper Type setting matches the paper loaded in the tray.

Incorrect characters print

Make sure the printer is not in Hex Trace mode. If **Ready Hex** appears on the display, you must exit Hex Trace mode before you can print your job. Turn the printer off and back on to exit Hex Trace mode.

Tray linking does not work

ARE THE SAME SIZE AND TYPE OF PAPER LOADED IN EACH TRAY?

- Load the same size and type of paper in each tray.
- Move the paper guides to the correct positions for the paper size loaded in each tray.

ARE THE PAPER SIZE AND PAPER TYPE SETTINGS THE SAME FOR EACH TRAY?

- Print a menu settings page, and compare the settings for each tray.
- If necessary, adjust the settings from the Paper Size/Type menu.

Note: The multipurpose tray does not automatically sense the paper size. You must set the size from the Paper Size/Type menu.

Large jobs do not collate

These are possible solutions. Try one or more of the following:

MAKE SURE COLLATE IS SET TO ON

From the Finishing menu or Print Properties, set Collate to On.

Note: Setting Collate to Off in the software overrides the setting in the Finishing menu.

REDUCE THE COMPLEXITY OF THE PRINT JOB











Reduce the complexity of the print job by eliminating the number and size of fonts, the number and complexity of images, and the number of pages in the job.

MAKE SURE THE PRINTER HAS ENOUGH MEMORY

Add printer memory or an optional hard disk.

Unexpected page breaks occur

Increase the Print Timeout value:

- 1 From the printer control panel, press .
- 2 Press the down arrow button until  **Settings** appears, and then press .
- 3 Press the down arrow button until  **General Settings** appears, and then press .
- 4 Press the down arrow button until  **Timeouts** appears, and then press .
- 5 Press the down arrow button until  **Print Timeout** appears, and then press .
- 6 Press the right arrow button until the desired value appears, and then press .

Solving option problems

Option does not operate correctly or quits after it is installed

These are possible solutions. Try one or more of the following:

RESET THE PRINTER

Turn the printer off, wait for about 10 seconds, and then turn the printer on.

CHECK TO SEE IF THE OPTION IS CONNECTED TO THE PRINTER

- 1 Turn the printer off.
- 2 Unplug the printer.
- 3 Check the connection between the option and the printer.

MAKE SURE THE OPTION IS INSTALLED

Print a menu settings page and check to see if the option is listed in the Installed Options list. If the option is not listed, reinstall it.

MAKE SURE THE OPTION IS SELECTED

From the program you are using, select the option. Mac OS 9 users should make sure the printer is set up in the Chooser.

Trays / Drawers

MAKE SURE THE PAPER IS LOADED CORRECTLY

- 1 Open the paper tray.
- 2 Check for paper jams or misfeeds.
- 3 Make sure the paper tray closes properly.

RESET THE PRINTER

Turn the printer off. Wait 10 seconds. Turn the printer back on.

Flash memory card

Make sure the flash memory card is securely connected to the printer system board.

Hard disk with adapter

Make sure the hard disk is securely connected to the printer system board.

Internal Solutions Port

If the Internal Solutions Port (ISP) does not operate correctly, then these are possible solutions. Try one or more of the following:

CHECK THE ISP CONNECTIONS

- Make sure the ISP is securely attached to the printer system board.
- Make sure the cable is securely connected to the correct connector.

CHECK THE CABLE

Make sure you are using the correct cable and that it is securely connected.

MAKE SURE THE NETWORK SOFTWARE IS CONFIGURED CORRECTLY

For information about installing software for network printing, see the *Networking Guide* on the *Software and Documentation* CD

Internal print server

If the internal print server does not operate correctly, these are possible solutions. Try one or more of the following:

CHECK THE PRINT SERVER CONNECTIONS

- Make sure the internal print server is attached securely to the printer system board.
- Make sure you are using the correct (optional) cable and that it is securely connected.

MAKE SURE THE NETWORK SOFTWARE IS CONFIGURED CORRECTLY

For information about installing software for network printing, click **Additional** on the *Software and Documentation* CD, and then select the **Networking Guide** link under **Publications on this CD**.

Memory card

Make sure the memory card is securely connected to the printer system board.

USB/parallel interface card

Check the USB/parallel interface card connections:

- Make sure the USB/parallel interface card is securely connected to the printer system board.
- Make sure you are using the correct cable and that it is securely connected.

Solving paper feed problems

Paper frequently jams

These are possible solutions. Try one or more of the following:

CHECK THE PAPER

Use recommended paper. For more information, see the chapter about paper and specialty media guidelines.

MAKE SURE THERE IS NOT TOO MUCH PAPER IN THE PAPER TRAY

Make sure the stack of paper you load does not exceed the maximum stack height indicated in the tray or on the multipurpose feeder.

CHECK THE PAPER GUIDES

Move the guides in the tray to the correct positions for the paper size loaded.

HAS THE PAPER ABSORBED MOISTURE DUE TO HIGH HUMIDITY?


 



 



 


- Load paper from a fresh package.
- Store paper in its original wrapper until you use it.

Paper jam message remains after jam is cleared

The paper path is not clear. Clear jammed paper from the entire paper path, and then press .

Page that jammed does not reprint after you clear the jam

In the Setup menu, Jam Recovery is set to Off. Set Jam Recovery to Auto or On:




 

- 1 Press .
- 2 Press the down arrow button until  **Settings** appears, and then press .
- 3 Press the down arrow button until  **General Settings** appears, and then press .
- 4 Press the down arrow button until  **Print Recovery** appears, and then press .
- 5 Press the down arrow button until  **Jam Recovery** appears, and then press .
- 6 Press the down arrow button until  **On** or  **Auto** appears, and then press .

Solving print quality problems

The information in the following topics may help you solve print quality problems. If these suggestions do not correct the problem, contact Customer Support. You may have a printer part that requires adjustment or replacement.

Isolating print quality problems

To help isolate print quality problems, print the print quality test pages:


- 1 Make sure paper is loaded in Tray 1.
- 2 Turn the printer off.
- 3 From the printer control panel, press and hold  and the right arrow button while turning the printer on.
- 4 Release both buttons when the clock appears, and wait for **Config Menu** to appear.
- 5 Press the down arrow button until  **Prt Quality Pgs** appears, and then press .
The print quality test pages print.
- 6 Press the down arrow button until  **Exit Config Menu** appears, and then press .
Resetting the Printer appears briefly, followed by a clock, and then **Ready** appears.

Blank pages

Cause	Solution
Packaging materials have not been removed from the toner cartridge.	Remove the packaging materials from the toner cartridge, and reinstall it.
Toner is low.	<ul style="list-style-type: none">• Remove the toner cartridge from the printer. Shake the cartridge back and forth several times, and then reinstall it.• Install a new toner cartridge.
Toner cartridge is defective or empty.	Replace the toner cartridge.

Cause	Solution
Printer requires servicing.	Call for service.

Characters have jagged or uneven edges

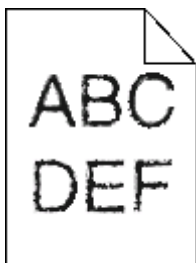





If you are using downloaded fonts, verify that the fonts are supported by the printer, the host computer, and the software program.

Color misregistration

Example	Cause	Solution
	Color has shifted outside of the appropriate area or has been superimposed over another color area.	<ol style="list-style-type: none"> 1 Recalibrate the printer. <ul style="list-style-type: none"> • Perform Color Adjust from the Quality menu 2 Remove and reinstall the photoconductor. 3 Adjust the color alignment. For more information, see "Adjusting the color alignment" on page 165. <p>Note: If you have not resolved the issue, then recalibrate again. If necessary, adjust the color alignment again.</p>

Adjusting the color alignment

 - 1 Make sure that the printer is turned off.
 - 2 From the printer control panel, press and hold and the right arrow button while turning the printer on.
 - 3 Release both buttons when the clock appears.
The printer performs its power-on sequence, and then **Config Menu** appears.
 - 4 Press the down arrow button until **Color Alignment** appears, and then press .
 - 5 Press again to print the alignment page.
 - 6 Press the down arrow button until **Set A** appears, and then press .
 - 7 From the printed sheet, find the straightest of the 20 lines beside the letter A.
 - 8 Press the left arrow button or the right arrow button until that number is displayed, and then press .
- Submitting selection** appears.

- 9 Repeat steps 6 through 8 to align sets A through L.
 - 10 Press .
 - 11 Press .
 - 12 Press the down arrow button until  **Exit Config Menu** appears, and then press .
- Resetting the Printer** appears briefly, followed by a clock, and then **Ready** appears.

Clipped images

Cause	Solution
Guides in the selected tray are set for a different paper size than what is loaded in the tray.	Move the guides in the tray to the proper positions for the size loaded.
There could be an incorrect page size selected in the driver or program.	<ul style="list-style-type: none"> Specify the correct page size in the driver or program. Set the Paper Size to match the media in the tray.

Ghost images

Cause	Solution
The photoconductor is not functioning properly.	<ul style="list-style-type: none"> Make sure the Paper Type setting is correct for the media that you are using. Replace the photoconductor.
The paper weight or Paper Weight setting in the Paper Menu is wrong for the type of paper being used.	Make sure the Paper Type and Paper Weight settings match the type of paper that you are using.
Toner is low.	Replace the toner cartridge.



Gray background

Cause	Solution
Toner darkness setting is too dark.	Select a different toner darkness setting in the printer software before sending the job to print.
Toner cartridge is worn or defective.	Replace the toner cartridge.

Incorrect margins

Cause	Solution
Guides in the selected tray are set for a different paper size than what is loaded in the tray.	Move the guides in the tray to the proper positions for the size loaded.
Auto size sensing is set to Off, but you loaded a different size paper in a tray. For example, you inserted A4-size paper into the selected tray but did not set the Paper Size to A4.	<ul style="list-style-type: none"> Set the Paper Size to match the paper size in the tray. Specify the correct page size in Print Properties or the program.



Light colored line, white line, or incorrectly colored line

Example	Cause	Solution
	Toner cartridge is defective.	Replace the color cartridge causing the line.
	Photoconductor is defective.	Replace the photoconductor.
	Transfer module is defective.	Replace the transfer module.
	Printhead lenses are dirty.	Clean the printhead lenses.

Paper curls badly

Cause	Solution
Paper Type and Paper Weight settings are not appropriate for the type of paper or specialty media that you are using.	Change the Paper Type and Paper Weight settings to match the paper or specialty media loaded in the printer.
Paper has been stored in a high-humidity environment.	Load paper from a fresh package. Store paper in its original wrapper until you use it.

Print irregularities

Example	Cause	Solution
	Paper has absorbed moisture due to high humidity.	Load paper from a fresh package into the paper tray.
	You are using paper that does not meet the printer specifications.	Make sure that the Paper Type and Paper Weight settings match the type of paper that you are using. Avoid textured paper with rough finishes.
	A toner cartridge, the transfer module, or the fuser is worn or defective.	Replace the print cartridge, the transfer module, or the fuser.
		


Print is too dark

Cause	Solution
Printer may not have recalibrated recently.	Perform Color Adjust from the Quality menu.
Toner Darkness setting is too dark, RGB Brightness setting is too dark, or RGB Contrast setting is too high.	Select a different Toner Darkness setting, RGB Brightness setting, or RGB Contrast setting from Print Properties before sending the job to print.
Toner cartridge is worn or defective.	Replace the toner cartridge.

Print is too light

Cause	Solution
Printer may not have recalibrated recently.	Perform Color Adjust from the Quality menu.
Toner Darkness setting is too light, RGB Brightness setting is too bright, or RGB Contrast setting is too high.	<ul style="list-style-type: none"> Select a different Toner Darkness setting, RGB Brightness setting, or RGB Contrast setting from Print Properties before sending the job to print. Adjust the color quality settings in the Quality menu.
You are using paper that does not meet the printer specifications.	<ul style="list-style-type: none"> Load paper from a new package. Avoid textured paper with rough finishes. Make sure the paper you load in the trays is not damp. Make sure the Paper Type and Paper Weight settings match the type of paper that you are using.
Color Saver is On.	Turn Color Saver off in the Quality menu.
Toner is low.	Replace the toner cartridge.
Toner cartridge is worn or defective.	

Repeating defects

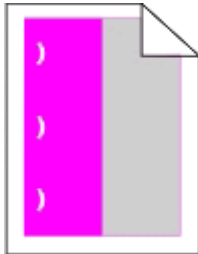Cause	Solution
	
If marks occur repeatedly in only one color and multiple times on a page:	
A toner cartridge is defective.	Replace the toner cartridge if the defects occur every: <ul style="list-style-type: none"> 33.0 mm (1.30 in.) 35.3 mm (1.39 in.)

Cause	Solution
A photoconductor is defective.	Replace the photoconductor if the defects occur every: <ul style="list-style-type: none"> • 28.3 mm (1.11 in.) • 72.4 mm (2.85 in.)
If marks occur down the page repeatedly in all colors:	
The fuser is defective.	Replace the fuser if the defects occur every: <ul style="list-style-type: none"> • 47.4 mm (1.87 in.) • 94.8 mm (3.73 in.) • 113.0 mm (4.45 in.)


Skewed print

Cause	Solution
Guides in the selected tray are not in the correct position for the paper size loaded in the tray.	Move the guides in the tray to the proper positions for the size loaded. <ul style="list-style-type: none"> • Make sure that the width guide is not too far from the paper stack. • Make sure that the width guide is not pressing too tightly against the paper stack. • Make sure that the length guide is not too far from the paper stack. • Make sure that the length guide is not pressing too tightly against the paper stack.
You are using paper that does not meet the printer specifications.	Make sure that you are using paper that meets the printer specifications.


Solid color pages

Cause	Solution
Photoconductor is installed incorrectly.	Remove and then reinstall the photoconductor.
Photoconductor is defective.	Replace the photoconductor.
Printer requires servicing.	Call for service.

Streaked horizontal lines

Example	Cause	Solution
	A toner cartridge is defective, empty, or worn.	Replace the toner cartridge.
	Fuser is defective or worn.	Replace the fuser.
	Photoconductor may be defective.	Replace the defective photoconductor.

Streaked vertical lines

Example	Cause	Solution
	Toner is smeared before fusing to the paper.	If paper is stiff, try feeding from another tray.
	Toner cartridge is defective.	Replace the toner cartridge causing the streaks.
	Transfer module is worn or defective.	Replace the transfer module.

Toner fog or background shading appears on the page

Cause	Solution
Toner cartridge is defective or installed incorrectly.	Reinstall or replace the cartridge.
Transfer module is worn or defective.	Replace the transfer module.
Photoconductor is worn or defective.	Replace the photoconductor.
Fuser is worn or defective.	Replace the fuser.
Toner is in the paper path.	Call for service.
Printer may not have recalibrated recently.	Perform color adjust from the Quality menu.
Application may specify off-white background.	Check the application.

Toner rubs off

Cause	Solution
Specialty media is being used.	Make sure the correct Paper Type is selected.
The Paper Weight setting in the Paper Menu is wrong for the type of paper being used.	Change the Paper Weight from Normal to Heavy. If necessary, change Paper Texture from Normal to Rough.
Fuser is worn or defective.	Replace the fuser.


Toner specks

Cause	Solution
Toner cartridges are worn or defective.	Replace the defective or worn cartridges.
Toner is in the paper path.	Call for service.
The photoconductor may be defective.	Replace the defective photoconductor.

Transparency print quality is poor

Cause	Solution
You are using transparencies that do not meet the printer specifications.	Use only transparencies recommended by the printer manufacturer.
Paper Type setting for the tray you are using is set to something other than Transparency.	Make sure the Paper Type setting is set to Transparency.

Uneven print density

Example	Cause	Solution
	Toner cartridge is worn or defective.	Replace the toner cartridge.
	Photoconductor is worn or defective.	Replace the photoconductor.

Solving color quality problems

This section helps answer some basic color-related questions and describes how some of the features provided in the Quality Menu can be used to solve typical color problems.

FAQ about color printing

What is RGB color?

Red, green, and blue light can be added together in various amounts to produce a large range of colors observed in nature. For example, red and green can be combined to create yellow. Televisions and computer monitors create colors in this manner. RGB color is a method of describing colors by indicating the amount of red, green, or blue needed to produce a certain color.

What is CMYK color?

Cyan, magenta, yellow, and black (known as *CMYK color*) inks or toners can be printed in various amounts to produce a large range of colors observed in nature. For example, cyan and yellow can be combined to create green. Printing presses, inkjet printers, and color laser printers create colors in this manner. CMYK color is a method of describing colors by indicating the amount of cyan, magenta, yellow, and black needed to reproduce a particular color.

How is color specified in a document to be printed?

Software applications typically specify document color using RGB or CMYK color combinations. Additionally, they commonly let you modify the color of each object in a document. For more information, see the software application Help section.

How does the printer know what color to print?

When you print a document, information describing the type and color of each object is sent to the printer. The color information is passed through color conversion tables that translate the color into the appropriate amounts of cyan, magenta, yellow, and black toner needed to produce the desired color. The object type information lets different color conversion tables be used for different types of objects. For example, it is possible to apply one type of color conversion table to text while applying a different color conversion table to photographic images.

Should I use PostScript or PCL emulation printer software? What settings should I use for the best color?

The PostScript driver is strongly recommended for best color quality. The default settings in the PostScript driver provide preferred color quality for the majority of printouts.

Why doesn't the printed color match the color that I see on the computer screen?

The color conversion tables used in Auto Color Correction mode generally approximate the colors of a standard computer monitor. However, because of technology differences that exist between printers and monitors, there are many colors that can also be affected by monitor variations and lighting conditions. For recommendations on how the printer color sample pages may be useful in solving certain color-matching problems, see the question, "How can I match a particular color (such as a color in a corporate logo)?"

The printed page appears tinted. Can I slightly adjust the color?

Sometimes you may consider printed pages to appear tinted (for example, everything printed seems to be too red). This can be caused by environmental conditions, paper type, lighting conditions, or user preference. In these instances, adjusting the Color Balance setting may create more preferable color. Color Balance lets you make subtle adjustments to the amount of toner being used in each color plane. Selecting positive (or negative) values for cyan, magenta, yellow, and black under the Color Balance menu will slightly increase (or decrease) the amount of toner used for the chosen color. For example, if you believe the overall printed page to be too red, then decreasing both magenta and yellow could potentially improve color.

My color transparencies seem dark when being projected. Is there anything I can do to improve the color?

This problem most commonly occurs when projecting transparencies with reflective overhead projectors. To obtain the highest projected color quality, transmissive overhead projectors are recommended. If a reflective projector must be used, then adjusting the Toner Darkness setting to 1, 2, or 3 will lighten the transparency.

Make sure to print on the recommended type of color transparencies. For more information about the paper and media specifications, see the *User's Guide* on the *Software and Documentation* CD.

What is manual color correction?

The color conversion tables applied to each object when using the default Auto Color Correction setting generate preferred color for the majority of documents. Occasionally, you may want to apply a different color table mapping. This customization is accomplished using the Manual Color menu and the Manual Color Correction setting.

Manual Color Correction applies to RGB and CMYK color conversion table mappings as defined in the Manual Color menu.

You can select any of the different color conversion tables for RGB or CMYK:

Color conversion table	Settings
RGB	<ul style="list-style-type: none">• sRGB Display• Display-True Black• sRGB Vivid• Vivid• Off

Color conversion table	Settings
CMYK	<ul style="list-style-type: none"> • US CMYK • Euro CMYK • Vivid CMYK • Off

Note: The Manual Color Correction setting is not useful if the software application does not specify colors with RGB or CMYK combinations. It is also not effective in situations where the software application or the computer operating system controls the adjustment of colors.

How can I match a particular color (such as a corporate logo)?

Occasionally, you may have a need for the printed color of a particular object to closely match a specific color. For example, you may need to match the color of a corporate logo. While instances can occur in which the printer cannot exactly reproduce the desired color, you should be able to identify adequate color matches for the majority of cases.

The Color Samples menu item can provide useful information in helping solve this particular type of color-matching problem. The nine Color Samples values correspond to color conversion tables in the printer. Selecting any of the Color Samples values generates a multiple-page printout consisting of hundreds of colored boxes. Either a CMYK or RGB combination is located on each box, depending on the table selected. The observed color of each box is obtained by passing the CMYK or RGB combination labeled on the box through the selected color conversion table.

You can examine the color samples pages and identify the box whose color is the closest to the desired color. The color combination labeled on the box can then be used for modifying the color of the object in a software application. For instructions, see the software application Help. Manual Color Correction may be necessary to utilize the selected color conversion table for the particular object.

Selecting which Color Samples pages to use for a particular color-matching problem depends on the Color Correction setting being used (Auto, Off, or Manual), the type of object being printed (text, graphics, or images), and how the color of the object is specified in the software application (RGB or CMYK combinations). When the printer Color Correction setting is set to Off, the color is based on the print job information; no color conversion is implemented.

Note: The Color Samples pages are not useful if the software application does not specify colors with RGB or CMYK combinations. Additionally, certain situations exist where the software application or the computer operating system adjusts the RGB or CMYK combinations specified in the application through color management. The resulting printed color may not be an exact match of the Color Samples pages.

The following table can help identify which Color Sample pages to use for color matching.

Color specification and object to be printed	Color Correction setting	Sample pages to use
RGB—Text	Auto	sRGB Vivid
	Manual	Manual Color RGB Text Setting
RGB—Graphic	Auto	sRGB Vivid
	Manual	Manual Color RGB Graphic Setting
RGB—Image	Auto	sRGB Display
	Manual	Manual Color RGB Image Setting

Color specification and object to be printed	Color Correction setting	Sample pages to use
CMYK—Text	Auto	US CMYK or Euro CMYK
	Manual	Manual Color CMYK Text Setting
CMYK—Graphic	Auto	US CMYK
	Manual	Manual Color CMYK Graphic Setting
CMYK—Image	Auto	US CMYK
	Manual	Manual Color CMYK Image Setting

What are Detailed Color Samples and how do I access them?

These pages require the use of the Embedded Web Server. The Embedded Web Server is a series of resident pages stored in the network printer firmware. To access these pages, browse to the IP address of the network printer. Click **Configuration Menu**, and then click **Detailed Color Samples**.

For more information about using the Embedded Web Server, see the *User's Guide* on the *Software and Documentation* CD.

Detailed Color Samples are pages similar to the default pages of color samples accessible from the Quality menu using the printer control panel. The default color samples available using this method have an increment value of 10% for red, green, and blue. If you find a value on this page that is close, but would like to scan more colors in a nearby area, then you can use the Detailed Color Samples to select the desired color values and a more specific increment. This provides a way to print multiple pages of colored boxes that surround a specific color of interest.

There are nine conversion tables available with the following three options:

- **Print**—Prints the default pages
- **Detailed**—Lets you enter individual red, green, and blue values and a specific increment of color
- **Reset**—Lets you clear the existing information and enter new values

The process can be duplicated for Cyan (C), Magenta (M), Yellow (Y), and Black (K) color conversion tables, too. Collectively, these values are known as CMYK color. The default increment is 10% for Black and 20% each for Cyan, Magenta, and Yellow.

Embedded Web Server does not open

These are possible solutions. Try one or more of the following:

CHECK THE NETWORK CONNECTIONS

Make sure the printer and computer are turned on and connected to the same network.

CHECK THE NETWORK SETTINGS

Depending on the network settings, you may need to type **https://** instead of **http://** before the printer IP address to access the Embedded Web Server. For more information, see your system administrator.

Contacting Customer Support

When you call Customer Support, describe the problem you are experiencing, the message on the display, and the troubleshooting steps you have already taken to find a solution.

You need to know your printer model type and serial number. For more information, see the label on the inside top front cover of the printer. The serial number is also listed on the menu settings page.

For customer support, contact the place where you purchased your printer.

Notices

Product information

Product name:

Color Laser Printer

Machine type:

4976, 4977

Model(s):

n01, n02, gn1, gn2, dn1, dn2, gd1, gd2, dw1, dw2

Edition notice

January 2008

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

© 2008 Lexmark International, Inc.

All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Federal Communications Commission (FCC) compliance information statement

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

The FCC Class B limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your point of purchase or service representative for additional suggestions.

The manufacturer is not responsible for radio or television interference caused by using other than recommended cables or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate this equipment.

Note: To assure compliance with FCC regulations on electromagnetic interference for a Class B computing device, use a properly shielded and grounded cable such as Lexmark part number 1021231 for parallel attach or 1021294 for USB attach. Use of a substitute cable not properly shielded and grounded may result in a violation of FCC regulations.

Any questions regarding this compliance information statement should be directed to:

Director of Lexmark Technology & Services
Lexmark International, Inc.
740 West New Circle Road
Lexington, KY 40550
(859) 232-3000

Industry Canada compliance statement

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Standard ICES-003.

Avis de conformité aux normes de l'industrie du Canada

Cet appareil numérique de classe B est conforme aux exigences de la norme canadienne relative aux équipements pouvant causer des interférences NMB-003.

India emissions notice

This device uses very low power low range RF communication that has been tested and found not to cause any interference whatsoever. The manufacturer is not responsible in case of any disputes arising out of requirement of permissions from any local authority, regulatory bodies or any organization, required by the end-user to install and operate this product at his premises.

भारतीय उत्सर्जन सूचना

यह यंत्र बहुत ही कम शक्ति, कम रेंज के RF कम्युनिकेशन का प्रयोग करता है जिसका परीक्षण किया जा चुका है, और यह पाया गया है कि यह किसी भी प्रकार का व्यवधान उत्पन्न नहीं करता। इसके अंतिम प्रयोक्ता द्वारा इस उत्पाद को अपने प्रांगण में स्थापित एवं संचालित करने हेतु किसी स्थानीय प्राधिकरण, नियामक निकायों या किसी संगठन से अनुज्ञा प्राप्त करने की जरूरत के संबंध में उठे विवाद की स्थिति में विनिर्माता जिम्मेदार नहीं है।

Noise emission levels

The following measurements were made in accordance with ISO 7779 and reported in conformance with ISO 9296.

Note: Some modes may not apply to your product.

1-meter average sound pressure, dBA	
Printing	53
Ready	31

Temperature information

Ambient temperature	15.6 to 32.2° C (60 to 90° F)
Shipping and storage temperature	-40° to 40° C (104° F)

Product disposal

Do not dispose of the printer or supplies in the same manner as normal household waste. Consult your local authorities for disposal and recycling options.

ENERGY STAR

Applicable only to models with duplexing enabled.




Laser notice

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for Class I (1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 60825-1.

Class I laser products are not considered to be hazardous. The printer contains internally a Class IIIb (3b) laser that is a maximum 15 milliwatt gallium arsenide laser operating in the wavelength of 770-795 nanometers. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance, or prescribed service condition.

Laser advisory label

A laser notice label may be affixed to this printer as shown:

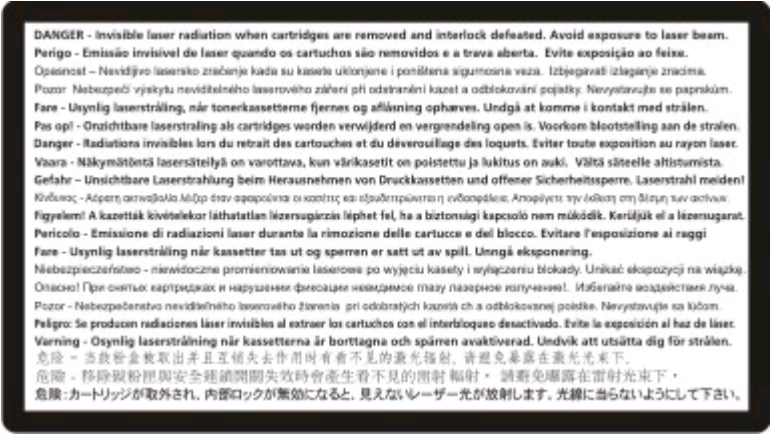

Power consumption

Product power consumption

The following table documents the power consumption characteristics of the product.

Note: Some modes may not apply to your product.

Mode	Description	Power consumption (Watts)
Printing	The product is generating hard-copy output from electronic inputs.	490, 530
Copying	The product is generating hard-copy output from hard-copy original documents.	N/A
Scanning	The product is scanning hard-copy documents.	N/A
Ready	The product is waiting for a print job.	45
Power Saver	The product is in energy-saving mode.	16
Off	The product is plugged into a wall outlet, but the power switch is turned off.	0

The power consumption levels listed in the previous table represent time-averaged measurements. Instantaneous power draws may be substantially higher than the average.

Power Saver

This product is designed with an energy-saving mode called Power Saver. The Power Saver Mode is equivalent to the EPA Sleep Mode. The Power Saver Mode saves energy by lowering power consumption during extended periods of inactivity. The Power Saver Mode is automatically engaged after this product is not used for a specified period of time, called the Power Saver Timeout.

Factory default Power Saver Timeout for this product (in minutes):	30
--	----

By using the configuration menus, the Power Saver Timeout can be modified between 1 minute and 240 minutes. Setting the Power Saver Timeout to a low value reduces energy consumption, but may increase the response time of the product. Setting the Power Saver Timeout to a high value maintains a fast response, but uses more energy.

Off mode

If this product has an off mode which still consumes a small amount of power, then to completely stop product power consumption, disconnect the power supply cord from the wall outlet.

Total energy usage

It is sometimes helpful to calculate the total product energy usage. Since power consumption claims are provided in power units of Watts, the power consumption should be multiplied by the time the product spends in each mode in order to calculate energy usage. The total product energy usage is the sum of each mode's energy usage.

Statement of Limited Warranty

Color Laser Printer

Lexmark International, Inc., Lexington, KY

This limited warranty applies to the United States and Canada. For customers outside the U.S., refer to the country-specific warranty information that came with your product.

This limited warranty applies to this product only if it was originally purchased for your use, and not for resale, from Lexmark or a Lexmark Remarketer, referred to in this statement as "Remarketer."

Limited warranty

Lexmark warrants that this product:

- Is manufactured from new parts, or new and serviceable used parts, which perform like new parts
- Is, during normal use, free from defects in material and workmanship

If this product does not function as warranted during the warranty period, contact a Remarketer or Lexmark for repair or replacement (at Lexmark's option).

If this product is a feature or option, this statement applies only when that feature or option is used with the product for which it was intended. To obtain warranty service, you may be required to present the feature or option with the product.

If you transfer this product to another user, warranty service under the terms of this statement is available to that user for the remainder of the warranty period. You should transfer proof of original purchase and this statement to that user.

Limited warranty service

The warranty period starts on the date of original purchase as shown on the purchase receipt and ends 12 months later provided that the warranty period for any supplies and for any maintenance items included with the printer shall end earlier if it, or its original contents, are substantially used up, depleted, or consumed.

To obtain warranty service you may be required to present proof of original purchase. You may be required to deliver your product to the Remarketer or Lexmark, or ship it prepaid and suitably packaged to a Lexmark designated location. You are responsible for loss of, or damage to, a product in transit to the Remarketer or the Lexmark designated location.

When warranty service involves the exchange of a product or part, the item replaced becomes the property of the Remarketer or Lexmark. The replacement may be a new or repaired item.

The replacement item assumes the remaining warranty period of the original product.

Replacement is not available to you if the product you present for exchange is defaced, altered, in need of a repair not included in warranty service, damaged beyond repair, or if the product is not free of all legal obligations, restrictions, liens, and encumbrances.

Before you present this product for warranty service, remove all print cartridges, programs, data, and removable storage media (unless directed otherwise by Lexmark).

For further explanation of your warranty alternatives and the nearest Lexmark authorized servicer in your area contact Lexmark on the World Wide Web at <http://support.lexmark.com>.

Remote technical support is provided for this product throughout its warranty period. For products no longer covered by a Lexmark warranty, technical support may not be available or only be available for a fee.

Extent of limited warranty

Lexmark does not warrant uninterrupted or error-free operation of any product or the durability or longevity of prints produced by any product.

Warranty service does not include repair of failures caused by:

- Modification or unauthorized attachments
- Accidents, misuse, abuse or use inconsistent with Lexmark user's guides, manuals, instructions or guidance
- Unsuitable physical or operating environment
- Maintenance by anyone other than Lexmark or a Lexmark authorized servicer
- Operation of a product beyond the limit of its duty cycle
- Use of printing media outside of Lexmark specifications
- Refurbishment, repair, refilling or remanufacture by a third party of products, supplies or parts
- Products, supplies, parts, materials (such as toners and inks), software, or interfaces not furnished by Lexmark

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NEITHER LEXMARK NOR ITS THIRD PARTY SUPPLIERS OR REMARKETERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND SATISFACTORY QUALITY. ANY WARRANTIES THAT MAY NOT BE DISCLAIMED UNDER APPLICABLE LAW ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES, EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. ALL INFORMATION, SPECIFICATIONS, PRICES, AND SERVICES ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE.

Limitation of liability

Your sole remedy under this limited warranty is set forth in this document. For any claim concerning performance or nonperformance of Lexmark or a Remarketer for this product under this limited warranty, you may recover actual damages up to the limit set forth in the following paragraph.

Lexmark's liability for actual damages from any cause whatsoever will be limited to the amount you paid for the product that caused the damages. This limitation of liability will not apply to claims by you for bodily injury or damage to real property or tangible personal property for which Lexmark is legally liable. **IN NO EVENT WILL LEXMARK BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGE, OR OTHER ECONOMIC OR CONSEQUENTIAL DAMAGES.** This is true even if you advise Lexmark or a Remarketer of the possibility of such damages. Lexmark is not liable for any claim by you based on a third party claim.

This limitation of remedies also applies to claims against any Suppliers and Remarketers of Lexmark. Lexmark's and its Suppliers' and Remarketers' limitations of remedies are not cumulative. Such Suppliers and Remarketers are intended beneficiaries of this limitation.

Additional rights

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations or exclusions contained above may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights that vary from state to state.

Regulatory notices for wireless products

This section contains the following regulatory information pertaining to wireless products.

Exposure to radio frequency radiation

The following notice is applicable if your printer has a wireless network card installed: The radiated output power of this device is far below the radio frequency exposure limits of the FCC and other regulatory agencies. A minimum separation of 20 cm (8 inches) must be maintained between the antenna and any persons for this device to satisfy the RF exposure requirements of the FCC and other regulatory agencies.

Notice to users in Brazil

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário. (Res. ANATEL 282/2001).

Industry Canada (Canada)

This device complies with Industry Canada specification RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate only with the antenna provided. Use of any other antenna is strictly prohibited per regulations of Industry Canada.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF fields in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site www.hc-sc.gc.ca/rpb.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

Industry Canada (Canada)

Cet appareil est conforme à la norme RSS-210 d'Industry Canada. Son fonctionnement est soumis aux deux conditions suivantes :

(1) cet appareil ne doit pas provoquer d'interférences et (2) il doit accepter toute interférence reçue, y compris celles risquant d'altérer son fonctionnement.

Cet appareil a été conçu pour fonctionner uniquement avec l'antenne fournie. L'utilisation de toute autre antenne est strictement interdite par la réglementation d'Industry Canada.

En application des réglementations d'Industry Canada, l'utilisation d'une antenne de gain supérieur est strictement interdite.

Pour empêcher toute interférence radio au service faisant l'objet d'une licence, cet appareil doit être utilisé à l'intérieur et loin des fenêtres afin de garantir une protection optimale.

Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence.

L'installateur de cet équipement radio doit veiller à ce que l'antenne soit implantée et dirigée de manière à n'émettre aucun champ HF dépassant les limites fixées pour l'ensemble de la population par Santé Canada. Reportez-vous au Code de sécurité 6 que vous pouvez consulter sur le site Web de Santé Canada www.hc-sc.gc.ca/rpb.

Le terme « IC » précédant le numéro de d'accréditation/inscription signifie simplement que le produit est conforme aux spécifications techniques d'Industry Canada.

Taiwan NCC RF notice statement

NCC型式認證設備注意事項 台灣低功率射頻電機設備之使用注意事項

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Notice to users in the European Union

Products bearing the CE mark are in conformity with the protection requirements of EC Council directives 2004/108/EC, 2006/95/EC, and 1999/5/EC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits and on radio equipment and telecommunications terminal equipment.

Compliance is indicated by the CE marking.



A declaration of conformity with the requirements of the directives is available from the Director of Manufacturing and Technical Support, Lexmark International, S. A., Boigny, France. Refer to the table at the end of the Notices section for further compliance information.

Products equipped with 2.4GHz Wireless LAN option are in conformity with the protection requirements of EC Council directives 2004/108/EC, 2006/95/EC, and 1999/5/EC on the approximation and harmonization of the laws of the Member States relating to electromagnetic compatibility, safety of electrical equipment designed for use within certain voltage limits and on radio equipment and telecommunications terminal equipment.

Compliance is indicated by the CE marking.



Operation is allowed in all EU and EFTA countries, but is restricted to indoor use only.

A declaration of conformity with the requirements of the directives is available from the Director of Manufacturing and Technical Support, Lexmark International, S. A., Boigny, France. Refer to the table at the end of the Notices section for further compliance information.

Česky	Společnost Lexmark International, Inc. tímto prohlašuje, že výrobek tento výrobek je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk	Lexmark International, Inc. erklærer herved, at dette produkt overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch	Hiermit erklärt Lexmark International, Inc., dass sich das Gerät dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Ελληνική	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Η LEXMARK INTERNATIONAL, INC. ΔΗΛΩΝΕΙ ΟΤΙ ΑΥΤΟ ΤΟ ΠΡΟΪΟΝ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
English	Hereby, Lexmark International, Inc., declares that this type of equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español	Por medio de la presente, Lexmark International, Inc. declara que este producto cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Eesti	Käesolevaga kinnitab Lexmark International, Inc., et seade see toode vastab direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele muudele asjakohastele sätetele.
Suomi	Lexmark International, Inc. vakuuttaa täten, että tämä tuote on direktiivin 1999/5/EY oleellisten vaatimusten ja muiden sitä koskevien direktiivin ehtojen mukainen.
Français	Par la présente, Lexmark International, Inc. déclare que l'appareil ce produit est conforme aux exigences fondamentales et autres dispositions pertinentes de la directive 1999/5/CE.
Magyar	Alulírott, Lexmark International, Inc. nyilatkozom, hogy a termék megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Íslenska	Hér með lýsir Lexmark International, Inc. yfir því að þessi vara er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Italiano	Con la presente Lexmark International, Inc. dichiara che questo prodotto è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski	Ar šo Lexmark International, Inc. deklarē, ka šis izstrādājums atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių	Šiuo Lexmark International, Inc. deklaruoja, kad šis produktas atitinka esminius reikalavimus ir kitas 1999/5/EB direktyvos nuostatas.
Malti	Bil-preżenti, Lexmark International, Inc., jiddikjara li dan il-prodott huwa konformi mal-ħtiġijiet essenzjali u ma dispozizzjonijiet oħrajn relevanti li jinsabu fid-Direttiva 1999/5/KE.
Nederlands	Hierbij verklaart Lexmark International, Inc. dat het toestel dit product in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Norsk	Lexmark International, Inc. erklærer herved at dette produktet er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Polski	Niniejszym Lexmark International, Inc. oświadcza, że niniejszy produkt jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português	A Lexmark International Inc. declara que este produto está conforme com os requisitos essenciais e outras disposições da Diretiva 1999/5/CE.
Slovensky	Lexmark International, Inc. týmto vyhlasuje, že tento produkt spĺňa základné požiadavky a všetky príslušné ustanovenia smernice 1999/5/ES.
Slovensko	Lexmark International, Inc. izjavlja, da je ta izdelek v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Svenska	Härmed intygar Lexmark International, Inc. att denna produkt står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Index

Numerics

1565 Emul Error Load Emul Option 149
2,000-sheet tray installing 34
200–250.yy Paper jam 149
31 Missing or defective <color> cartridge 143
32 Replace unsupported <color> cartridge 143
34 Incorrect paper size, check <src> 143
34 Incorrect paper type, check <src> 143
34 Short paper 143
35 Insufficient memory to support Resource Save feature 144
37 Insufficient memory for Flash Memory Defragment operation 144
37 Insufficient memory to collate job 144
37 Insufficient memory, some held jobs will not be restored 144
38 Memory full 144
39 Page is too complex to print 144
51 Defective flash detected 144
52 Flash full 145
53 Unformatted flash detected 145
54 Network <x> software error 145
54 Serial option <x> error 145
54 Standard network software error 145
55 Unsupported option in slot 145
550-sheet specialty media drawer installing 34
550-sheet tray installing 34
56 Parallel port <x> disabled 145
56 Serial port <x> disabled 146
56 Standard USB port disabled 146
56 USB port <x> disabled 146
57 Configuration change, held jobs were not restored 146
58 Too many flash options installed 146

58 Too many trays attached 146
61 Remove defective hard disk 146
62 Disk full 147
63 Unformatted disk 147
80 Fuser life warning 147
80 Replace fuser 147
82 Replace waste toner box 147
82 Waste toner box missing 147
82 Waste toner box nearly full 147
83 replace transfer module 147
83 transfer module life warning 148
83 Transfer module missing 148
84 <color> photoconductor low 148
84 <color> photoconductor nearly low 148
84 Replace <color> photoconductor 148
88 <color> cartridge low 148
88 <color> cartridge nearly low 148
88 Replace <color> cartridge 148
900–999 Service <message> 149

A

Activating Menu Changes 136
Active NIC menu 96
AppleTalk menu 101
attaching cables 32

B

black-and-white printing 73
Busy 136

C

cables
Ethernet 32
USB 32
Calibrating 136
calling Customer Support 175
Cancel not available 136
Canceling 136
canceling a job
from Mac OS 9 73
from Mac OS X 73

from the printer control panel 72
from Windows desktop 73
from Windows taskbar 73
card stock tips 67
Change <src> to <x> 136
checking an unresponsive printer 158
checking device status on Embedded Web Server 155
checking virtual display on Embedded Web Server 155
cleaning
exterior of the printer 150
printhead lenses 150
Clearing job accounting statistics 136
Close door <x> 136
Confidential print jobs 67
printing for Macintosh users 68
printing for Windows users 68
Confidential Print menu 111
configuration information
wireless network 38
configurations
printer 12
Configure MP menu 89
configuring
port settings 46
conserving supplies 152
contacting Customer Support 175
Copies 137
Custom Types menu 93

D

Default Source menu 86
Defragmenting Flash 137
Delete 137
Delete all 137
Delete all confidential jobs 137
Deleting 137
directory list
printing 72
Disabling DLEs 137
Disabling Menus 137
Disk Corrupted. Reformat? 137
Disk recovery x/y XX% 137
Disk Wiping menu 111

- display 14
- display troubleshooting
 - display is blank 158
 - display shows only diamonds 158
- documents, printing
 - for Macintosh users 64
 - for Windows users 64

E

- Embedded Web Server 155
 - checking device status 155
 - does not open 174
 - setting up e-mail alerts 155
- emission
- notices 176, 177, 178, 182, 183
- Enabling Menus 137
- Encrypting disk x/y XX% 137
- Enter PIN 138
- Enter PIN to lock 138
- envelopes
 - loading 53
 - tips 66
- Ethernet networking
 - Macintosh 43
 - Windows 43
- Ethernet port 32
- exterior of the printer
 - cleaning 150
- e-mail
 - notice of low supply level 155
 - notice of paper jam 155
 - notice of paper needed 155
 - notice that different paper is needed 155

F

- factory defaults, restoring 157
- FAQ about color printing 171
- FCC notices 176, 182
- fiber optic
 - network setup 43
- Finishing menu 120
- firmware card
 - installing 20
- flash drive 70
- Flash Drive menu 132
- flash memory card
 - installing 20
 - troubleshooting 162
- Flushing buffer 138

- font sample list
 - printing 71
- Formatting Disk x/y XX% 138
- Formatting Flash 138

G

- General Settings menu 114
- guidelines
 - letterhead 65

H

- hard disk with adapter
 - troubleshooting 162
- held jobs 67
 - printing for Macintosh users 68
 - printing for Windows users 68
- Held jobs were not restored 142
- Help menu 134
- HTML menu 130

I

- Image menu 131
- Insert Tray <x> 138
- installation
 - wireless network 39, 41
- installing
 - options in driver 37
 - printer software 37
- installing printer software
 - adding options 37
- internal print server
 - troubleshooting 163
- Internal Solutions Port
 - installing 22
 - troubleshooting 162
- Internal Solutions Port, network
 - changing port settings 46
- Internal System Error, Reload Bookmarks 138
- Internal System Error, Reload Security Certificates 138
- Invalid Engine Code 138
- Invalid Network Code 139
- Invalid PIN 139
- IPv6 menu 100

J

- jam messages
 - clearing instructions, locating 75
- jams
 - avoiding 75

- jams, clearing
 - 200 76
 - 200 or 201 77
 - 201 78
 - 202 79
 - 203 81
 - 230 81
 - 240 82
 - 250 84

L

- letterhead
 - guidelines 65
 - loading, multipurpose tray 65
 - loading, trays 65
- letterhead, printing on
 - for Macintosh users 65
 - for Windows users 65
- LexLink menu 102
- linking trays 56
- Load <src> with <x> 139
- Load multipurpose tray with <x> 139
- loading
 - envelopes 53
 - letterhead in multipurpose tray 65
 - letterhead in trays 65
 - multipurpose tray 53
 - paper tray 50
 - transparencies 53
- lock, security 14

M

- Macintosh
 - wireless network installation 41
- max speed and max yield
 - printing 74
- memory card
 - installing 18
 - troubleshooting 163
- menu settings page
 - printing 36
- menus
 - Active NIC 96
 - AppleTalk 101
 - Confidential Print 111
 - Configure MP 89
 - Custom Types 93
 - Default Source 86
 - Disk Wiping 111

- Finishing 120
- Flash Drive 132
- General Settings 114
- Help 134
- HTML 130
- Image 131
- IPv6 100
- LexLink 102
- Miscellaneous 110
- NetWare 101
- Network <x> 96
- Network Card 98
- Network Reports 98
- Paper Loading 92
- Paper Size/Type 86
- Paper Texture 90
- Paper Weight 91
- Parallel <x> menu 104
- PCL Emul 127
- PDF 126
- PictBridge 132
- PostScript 126
- Quality 121
- Reports 95
- Security Audit Log 113
- Serial <x> 107
- Set Date/Time 113
- Settings 118
- SMTP Setup menu 109
- Standard Network 96
- Standard USB 103
- Standard USB <x> 103
- Substitute Size 89
- TCP/IP 99
- Utilities 125
- Wireless 100
- XPS 126
- Menus are disabled 139
- menus, diagram 85
- Miscellaneous menu 110
- moving the printer 153, 154
- multipurpose tray
 - loading 53

N

- NetWare menu 101
- Network 139
- Network <x> 139
- Network <x> menu 96
- Network Card menu 98
- Network Reports menu 98
- network setup page 36

- No held jobs 139
- No jobs to cancel 139
- noise emission levels 178
- notices 176, 177, 178, 179, 180, 182, 183

O

- options
 - 2,000-sheet tray 34
 - 550-sheet specialty media
 - drawer 34
 - 550-sheet tray 34
 - firmware card 20
 - firmware cards 16
 - flash memory card 20
 - internal 16
 - Internal Solutions Port 22
 - memory card 18
 - memory cards 16
 - networking 16
 - ports 16
 - printer hard disk 28

P

- paper
 - characteristics 58
 - letterhead 59
 - preprinted forms 59
 - recycled 60
 - selecting 59
 - setting size 50
 - setting type 50
 - storing 60
 - unacceptable 59
 - Universal Paper Size 94
- paper feed troubleshooting
 - message remains after jam is cleared 164
- paper jams
 - avoiding 75
- paper jams, clearing
 - 200 or 201 77
 - 201 78
 - 202 79
 - 203 81
 - 230 81
 - 240 82
 - 250 84
- Paper Loading menu 92
- Paper Size/Type menu 86
- paper sizes, supported 61
- Paper Texture menu 90
- paper tray
 - loading 50
- paper types
 - supported by printer 62
 - where to load 62
- Paper Weight menu 91
- paper weights
 - supported by printer 62
- Parallel <x> menu 104
- PCL Emul menu 127
- PDF menu 126
- PictBridge menu 132
- PictBridge-enabled printing
 - photos 71
- port settings
 - configuring 46
- PostScript menu 126
- Power Saver 140
 - adjusting 156
- print job
 - canceling from Mac OS 9 73
 - canceling from Mac OS X 73
 - canceling from Windows
 - desktop 73
 - canceling from Windows
 - taskbar 73
- print quality
 - cleaning the printhead
 - lenses 150
- print quality test pages
 - printing 72
- print quality troubleshooting
 - blank pages 164
 - characters have jagged
 - edges 165
 - clipped images 166
 - color misregistration 165
 - ghost images 166
 - gray background 166
 - light colored line, white line, or
 - incorrectly colored line 167
 - print irregularities 167
 - print is too dark 168
 - print is too light 168
 - print quality test pages 164
 - repeating defects 168
 - skewed print 169
 - solid color pages 169
 - streaked horizontal lines 169
 - streaked vertical lines 170

- toner fog or background shading 170
- toner rubs off 170
- toner specks 170
- uneven print density 171
- print quality, troubleshooting
 - poor transparency quality 171
- print troubleshooting
 - error reading USB drive 158
 - held jobs do not print 159
 - incorrect characters print 160
 - incorrect margins 166
 - jammed page does not reprint 164
 - job prints from wrong tray 160
 - job prints on wrong paper 160
 - job takes longer than expected 160
 - jobs do not print 159
 - Large jobs do not collate 161
 - multiple-language PDFs do not print 158
 - paper curls badly 167
 - paper frequently jams 163
 - tray linking does not work 160
 - unexpected page breaks occur 161
- printer
 - configurations 12
 - minimum clearances 11
 - models 12
 - moving 153, 154
 - selecting a location 11
 - setting up in new location 154
 - shipping 154
- printer control panel 14
 - factory defaults, restoring 157
- printer hard disk
 - installing 28
- Printer locked, enter PIN 140
- printer messages
 - 1565 Emul Error Load Emul Option 149
 - 200–250.yy Paper jam 149
 - 31 Missing or defective <color> cartridge 143
 - 32 Replace unsupported <color> cartridge 143
 - 34 Incorrect paper size, check <src> 143
 - 34 Incorrect paper type, check <src> 143
 - 34 Short paper 143
 - 35 Insufficient memory to support Resource Save feature 144
 - 37 Insufficient memory for Flash Memory Defragment operation 144
 - 37 Insufficient memory to collate job 144
 - 37 Insufficient memory, some held jobs will not be restored 144
 - 38 Memory full 144
 - 39 Page is too complex to print 144
 - 51 Defective flash detected 144
 - 52 Flash full 145
 - 53 Unformatted flash detected 145
 - 54 Network <x> software error 145
 - 54 Serial option <x> error 145
 - 54 Standard network software error 145
 - 55 Unsupported option in slot 145
 - 56 Parallel port <x> disabled 145
 - 56 Serial port <x> disabled 146
 - 56 Standard USB port disabled 146
 - 56 USB port <x> disabled 146
 - 57 Configuration change, held jobs were not restored 146
 - 58 Too many flash options installed 146
 - 58 Too many trays attached 146
 - 61 Remove defective hard disk 146
 - 62 Disk full 147
 - 63 Unformatted disk 147
 - 80 Fuser life warning 147
 - 80 Replace fuser 147
 - 82 Replace waste toner box 147
 - 82 Waste toner box missing 147
 - 82 Waste toner box nearly full 147
 - 83 replace transfer module 147
 - 83 transfer module life warning 148
 - 83 Transfer module missing 148
 - 84 <color> photoconductor low 148
 - 84 <color> photoconductor nearly low 148
 - 84 Replace <color> photoconductor 148
 - 88 <color> cartridge low 148
 - 88 <color> cartridge nearly low 148
 - 88 Replace <color> cartridge 148
 - 900–999 Service <message> 149
 - Activating Menu Changes 136
 - Busy 136
 - Calibrating 136
 - Cancel not available 136
 - Canceling 136
 - Change <src> to <x> 136
 - Clearing job accounting statistics 136
 - Close door <x> 136
 - Copies 137
 - Defragmenting Flash 137
 - Delete 137
 - Delete all 137
 - Delete all confidential jobs 137
 - Deleting 137
 - Disabling DLEs 137
 - Disabling Menus 137
 - Disk Corrupted. Reformat? 137
 - Disk recovery x/y XX% 137
 - Enabling Menus 137
 - Encrypting disk x/y XX% 137
 - Enter PIN 138
 - Enter PIN to lock 138
 - Flushing buffer 138
 - Formatting Disk x/y XX% 138
 - Formatting Flash 138
 - Held jobs were not restored 142
 - Insert Tray <x> 138
 - Internal System Error, Reload Bookmarks 138
 - Internal System Error, Reload Security Certificates 138
 - Invalid Engine Code 138
 - Invalid Network Code 139
 - Invalid PIN 139
 - Load <src> with <x> 139
 - Load multipurpose tray with <x> 139
 - Menus are disabled 139
 - Network 139
 - Network <x> 139
 - No held jobs 139
 - No jobs to cancel 139
 - Power Saver 140
 - Printer locked, enter PIN 140

- Printing 140
- Programming disk 140
- Programming flash 140
- Programming System Code 140
- Reading USB drive 140
- Ready 140
- Remote Management Active 140
- Remove all color supplies 141
- Remove Packaging Materials 141
- Remove paper from standard bin 141
- Resetting fuser count 141
- Resetting the printer 141
- Restore Held Jobs? 141
- Restoring Factory Defaults 141
- Restoring Held Jobs(s) x/y 142
- Serial <x> 142
- Some held jobs will not be restored 142
- Standard Bin Full 142
- Submitting Selection 142
- Tray <x> Empty 142
- Tray <x> Low 142
- Tray <x> Missing 142
- USB/USB <x> 142
- Waiting 143
- printer options troubleshooting
 - flash memory card 162
 - hard disk with adapter 162
 - internal print server 163
 - Internal Solutions Port 162
 - memory card 163
 - option not working 161
 - trays / drawers 162
 - USB/parallel interface card 163
- printhead lenses
 - cleaning 150
- Printing 140
- printing
 - black-and-white 73
 - directory list 72
 - font sample list 71
 - for Macintosh users 64
 - for Windows users 64
 - from flash drive 70
 - installing printer software 37
 - max speed and max yield 74
 - menu settings page 36
 - network setup page 36
 - photos 71
 - print quality test pages 72
 - transparencies 66

- printing confidential and other held jobs
 - for Macintosh users 68
 - for Windows users 68
- Programming disk 140
- Programming flash 140
- Programming System Code 140

Q

- Quality menu 121

R

- Reading USB drive 140
- Ready 140
- recycled paper
 - using 60
- Remote Management Active 140
- Remove all color supplies 141
- Remove Packaging Materials 141
- Remove paper from standard bin 141
- Repeat print jobs 67
 - printing for Macintosh users 68
 - printing for Windows users 68
- reports
 - viewing 156
- Reports menu 95
- Reserve print jobs 67
 - printing for Macintosh users 68
 - printing for Windows users 68
- Resetting fuser count 141
- Resetting the printer 141
- Restore Held Jobs? 141
- Restoring Factory Defaults 141
- Restoring Held Jobs(s) x/y 142

S

- safety information 9, 10
- Security Audit Log menu 113
- security lock 14
- Serial <x> 142
- Serial <x> menu 107
- serial port 48
- serial printing
 - setting up 48
- Set Date/Time menu 113
- setting
 - paper size 50
 - paper type 50
 - TCP/IP address 99

- setting up
 - serial printing 48
- setting up the printer
 - on a wired network (Macintosh) 43
 - on a wired network (Windows) 43
- Settings menu 118
- shipping the printer 154
- SMTP Setup menu 109
- Some held jobs will not be restored 142
- Standard Bin Full 142
- Standard Network menu 96
- Standard USB <x> menu 103
- Standard USB menu 103
- status of supplies, checking 153
- storing
 - paper 60
 - supplies 152
- Submitting Selection 142
- Substitute Size menu 89
- supplies
 - conserving 152
 - status 153
 - status of 153
 - storing 152
- system board
 - accessing 17
- system board cover
 - reinstalling 31

T

- TCP/IP menu 99
- tips
 - card stock 67
 - envelopes 66
- transparencies
 - loading 53
 - printing 66
- Tray <x> Empty 142
- Tray <x> Low 142
- Tray <x> Missing 142
- trays
 - linking 56
 - unlinking 56
- troubleshooting
 - checking an unresponsive printer 158
 - contacting Customer Support 175
 - FAQ about color printing 171

- troubleshooting, display
 - display is blank 158
 - display shows only diamonds 158
- troubleshooting, paper feed
 - message remains after jam is cleared 164
- troubleshooting, print
 - error reading USB drive 158
 - held jobs do not print 159
 - incorrect characters print 160
 - incorrect margins 166
 - jammed page does not reprint 164
 - job prints from wrong tray 160
 - job prints on wrong paper 160
 - job takes longer than expected 160
 - jobs do not print 159
 - Large jobs do not collate 161
 - multiple-language PDFs do not print 158
 - paper curls badly 167
 - paper frequently jams 163
 - tray linking does not work 160
 - unexpected page breaks occur 161
- troubleshooting, print quality
 - blank pages 164
 - characters have jagged edges 165
 - clipped images 166
 - color misregistration 165
 - ghost images 166
 - gray background 166
 - light colored line, white line, or incorrectly colored line 167
 - poor transparency quality 171
 - print irregularities 167
 - print is too dark 168
 - print is too light 168
 - print quality test pages 164
 - repeating defects 168
 - skewed print 169
 - solid color pages 169
 - streaked horizontal lines 169
 - streaked vertical lines 170
 - toner fog or background shading 170
 - toner rubs off 170
 - toner specks 170
 - uneven print density 171

- troubleshooting, printer options
 - flash memory card 162
 - hard disk with adapter 162
 - internal print server 163
 - Internal Solutions Port 162
 - memory card 163
 - option not working 161
 - trays / drawers 162
 - USB/parallel interface card 163

U

- Universal Paper Size 94
- Universal Setup menu 94
- unlinking trays 56
- USB port 32
- USB/USB <x> 142
- Utilities menu 125

V

- Verify print jobs 67
 - printing for Macintosh users 68
 - printing for Windows users 68
- viewing
 - reports 156
- virtual display
 - how to access 155

W

- Waiting 143
- Windows
 - wireless network installation 39
- wired network setup
 - using Windows 43
- wired networking
 - using Macintosh 43
- Wireless menu 100
- wireless network
 - configuration information 38
 - installation, using Macintosh 41
 - installation, using Windows 39

X

- XPS menu 126

InfoPrint Solutions Company

Printed in USA

G510-7472-00

